


Installation instructions

Philips EvoKit SpaceWise accessory

Set contains

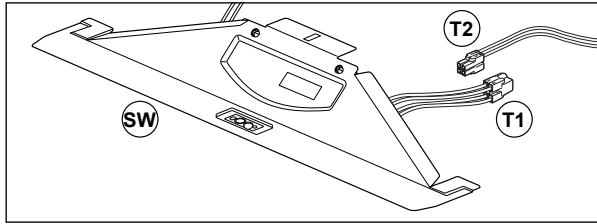

Components:

- SW Preassembled SpaceWise panel including T1, 4-pin connector female.
- T2 4-pin connector male with 2 preassembled wires.


Attention

WARNING

Ensure all warning and cautionary markings given in the Philips EvoKit LED installation instructions are heeded.


Notice

EvoKit SpaceWise is only to be used with **0-10V** control version of EvoKit.

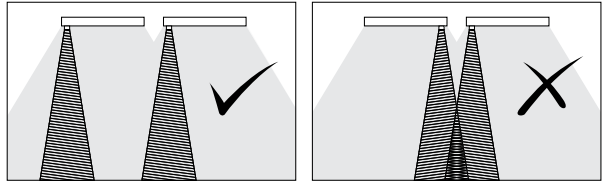


During installation luminaires should be oriented such that the luminaire sensor can uniformly cover the workstation area.


Installation (Before starting the installation read the original EvoKit installation instruction)

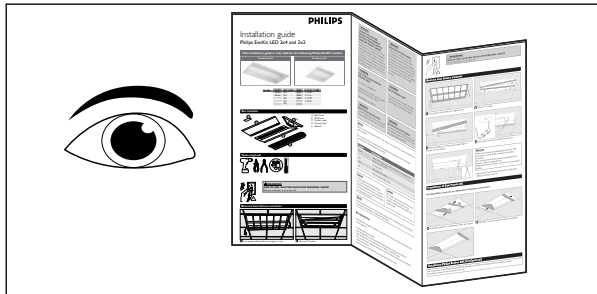


1 Take steps 1 through 4 of the EvoKit Installation guide.

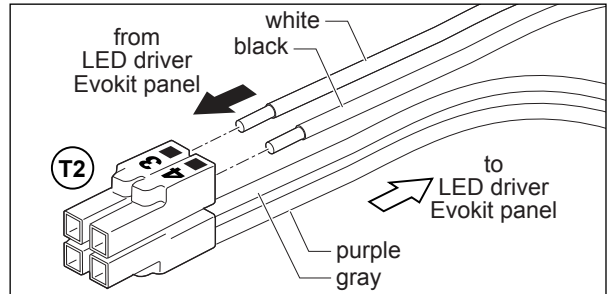


2 Insert purple wire from 4-pin connector (T2) to purple connector on LED driver on main panel. Insert gray wire to gray connector on LED driver. Insert white wire from LED driver to position 3 on connector and the black wire to position 4.

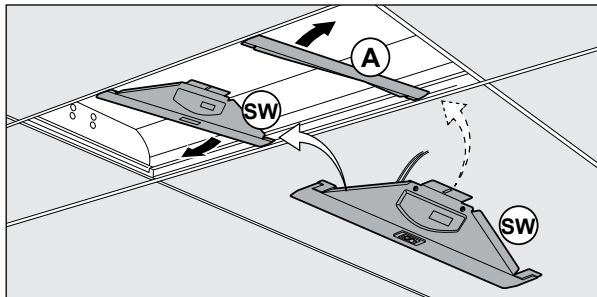


3 Install one side panel (A) and one EvoKit SpaceWise panel (SW)

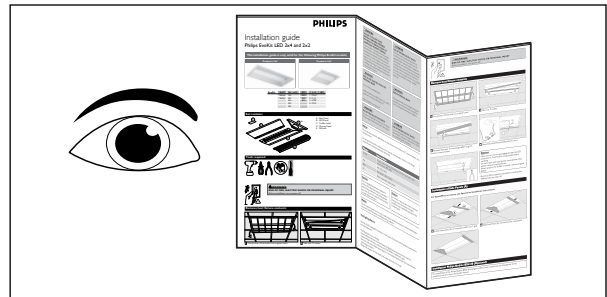

4 Continue with steps 6 through 10 of the EvoKit Installation guide.

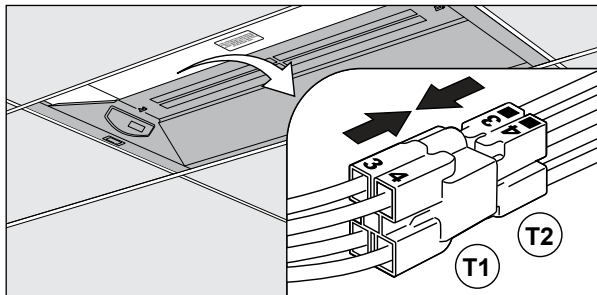

5 Before connecting the mains make sure the EvoKit SpaceWise is connected to the Evokit with the two halves of the 4-pin connector.

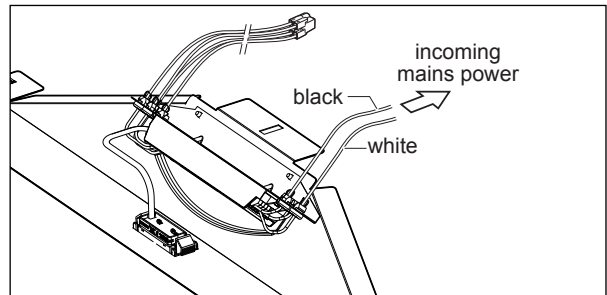

6 Connect black and white wire from SpaceWise controller to incoming mains power. (A luminaire power disconnect can be added as necessary to these leads to meet any code requirements.)

Complete installation following the Installation guide EvoKit.



© 2013 Philips Lighting Company.
A Division of Philips Electronics North America Corporation.
All rights reserved.
Printed in USA 8/13

www.philips.com
20140518

Philips Lighting Company
200 Franklin Square Drive
Somerset, NJ 08873
1-800-555-0050

443529001161

Philips Lighting
281 Hillmont Road
Markham, Ontario
Canada, L6C 2S3
1-800-555-0050
A Division of
Philips Electronics Ltd.