



**“Configurability**  
enables flexibility  
and differentiation”

This manual has been updated for MultiOne version 3.10

Copyright © 2018 Philips Lighting Holding B.V.. All rights reserved

# 1 Introduction

Today's customer demands more flexibility and customization possibilities than "physical configurations" can offer. With new Philips configurable devices with built-in controls or separate controllers you can configure the luminaire's behavior. You can control output levels, or even pre-configure dynamic dimming on the client's request; either directly in the factory or during installation on location. All you need is ONE intuitive tool that when plugged into a device can calibrate ALL the different functions required by any lighting solution.

Creating the perfect lighting solution has been made very easy with Philips MultiOne.

With MultiOne, you can configure all features that are supported by a Philips device. A feature typically belongs to one or two product groups (LED Indoor/Outdoor, HID or FLUO), but this does not mean that every device from a product group does support all features.

Philips MultiOne is supported by Windows 7 SP1, 8, 8.1 and 10 operating systems. It works only in combination with the Philips LCN8600 MultiOne interface USB2DALI, with Philips LCN8650 MultiOne interface USB2ZigBee, LCN9610, LCN9620 or LCN9630 MultiOne interface SimpleSet.

## 2 Table of contents

1	Introduction.....	2
3	System requirements .....	9
4	Downloading and installing MultiOne and the documentation package .....	10
5	Attention points.....	11
5.1	General.....	11
5.2	DALI.....	11
5.3	SimpleSet interface .....	11
6	The MultiOne interfaces .....	12
6.1	DALI.....	12
6.2	ZigBee .....	13
6.3	SimpleSet .....	13
7	Starting MultiOne.....	14
7.1	Activating MultiOne .....	14
7.2	Application mode selector .....	17
8	Selecting the interface.....	18
8.1	Interface Auto detection .....	18
8.2	Interface Manual selection .....	18
8.2.1	Art-Net.....	19
9	Working with the Philips LCN8600 MultiOne interface USB2DALI .....	21
9.1	The main application window .....	21
9.2	Managing the DALI network.....	21
9.2.1	Identifying devices .....	21
9.2.2	Selecting devices for communication .....	24
9.2.3	Managing user-defined groups .....	25
9.2.4	Managing groups.....	26
10	Working with the Philips LCN8650 MultiOne interface USB2ZigBee .....	30
10.1	The main application window .....	30
10.2	Connecting to a ZigBee network .....	30

10.2.1	Identifying devices .....	30
10.2.2	Selecting devices for communication .....	31
10.3	Advanced commissioning .....	31
10.3.1	Identifying devices .....	31
10.3.2	Managing networks .....	31
10.3.3	Managing zones .....	32
11	Working with the Philips MultiOne SimpleSet interface(s) .....	34
11.1	The main application window .....	34
11.2	Scanning a SimpleSet device .....	34
11.2.1	Identifying devices .....	34
11.2.2	Auto read .....	35
11.3	Selecting devices for communication .....	35
11.4	Starting communication .....	35
12	Working with MultiOne .....	36
12.1	Viewing device properties .....	36
12.2	Communicating with a device .....	36
12.3	Configuring device features .....	37
12.3.1	0-10V / 1-10V (SR bridge) .....	41
12.3.2	0-10V / 1-10V (LED driver) .....	42
12.3.3	ActiLume General .....	43
12.3.4	ActiLume Mode .....	44
12.3.5	ActiLume Scene .....	46
12.3.6	Active Cooling .....	46
12.3.7	Adjustable Light Output .....	47
12.3.8	Adjustable Output Current .....	48
12.3.9	Adjustable Output Current Multi-Channel .....	48
12.3.10	Adjustable Startup Time .....	49
12.3.11	AmpDim .....	50
12.3.12	Coded Light On and Off .....	50
12.3.13	Coded Mains .....	51

12.3.14	Coded Mains Standalone Receiver .....	52
12.3.15	Constant Light Output.....	52
12.3.16	Constant Light Output Multi-Channel.....	55
12.3.17	Correlated Color Temperature .....	56
12.3.18	Correlated Color Temperature Dual Channel.....	57
12.3.19	Corridor Mode.....	58
12.3.20	DALI 102 .....	59
12.3.21	DALI 202 .....	60
12.3.22	DALI Power Supply .....	61
12.3.23	Daylight override / Daylight switching .....	61
12.3.24	DC Emergency .....	61
12.3.25	Device Info .....	62
12.3.26	Dimming Interface .....	62
12.3.27	Driver addressing .....	64
12.3.28	Driver Temperature Limit.....	65
12.3.29	Dwell Time .....	66
12.3.30	Dynadimmer.....	67
12.3.31	End Of Life indication.....	69
12.3.32	FCC.....	70
12.3.33	Field Task Tuning.....	70
12.3.34	Field Task Tuning / Occupancy Sensing / Daylight Harvesting.....	71
12.3.35	Lamp Burn-in .....	72
12.3.36	Lamp Selection .....	72
12.3.37	Light Source Operating Hours.....	73
12.3.38	LineSwitch .....	73
12.3.39	Load Fault Indicator Thresholds.....	75
12.3.40	Logical Signal Input .....	75
12.3.41	Lumen Level.....	77
12.3.42	Luminaire (Fixture) Information.....	78
12.3.43	Luminaire Production Test .....	79

12.3.44	LumiStep.....	79
12.3.45	Min Dim Level.....	80
12.3.46	Motor Control.....	81
12.3.47	Module Temperature Protection .....	82
12.3.48	NTC on LEDset.....	83
12.3.49	Occupancy Sensing / Daylight Harvesting.....	84
12.3.50	Occupancy sharing / Group light behavior.....	85
12.3.51	OEM Write Protection.....	85
12.3.52	Push Button Unit LCU2070 .....	86
12.3.53	Push Button Unit LCU2071 .....	86
12.3.54	Quick Lamp Start .....	87
12.3.55	Relay Switched Output.....	87
12.3.56	Self Contained Emergency .....	88
12.3.57	SR Power Supply.....	89
12.3.58	Step Dimming.....	89
12.3.59	Touch and Dim.....	91
12.4	Using the features summary.....	92
12.5	Saving and opening a feature configuration file.....	92
12.6	Configuring a single device.....	95
12.7	Configuring multiple DALI devices (simultaneously) .....	95
12.8	Configuring multiple DALI devices (consecutively) .....	96
12.8.1	MultiOne.....	96
12.9	Configuring multiple ZigBee devices.....	96
12.10	Offline feature configuration preparation .....	97
12.11	Sending DALI commands .....	98
12.12	Traceability .....	100
12.13	Working with DALI command scripts.....	100
12.14	Querying devices .....	103
12.15	Accessing Diagnostics.....	104
12.15.1	Diagnostics .....	104

12.15.2	Set Lamp On Time.....	111
12.16	Accessing Energy Meter .....	111
12.17	Accessing Installer .....	112
12.17.1	Coded Light Randomize .....	113
12.18	Working with the DALI Sniffer .....	114
12.18.1	Sniffing with multiple interfaces .....	115
12.19	Art-Net export functionality .....	115
12.20	DALI Firmware update .....	116
12.21	The logging window.....	119
12.22	Setting preferences.....	119
12.22.1	General preferences .....	120
12.22.2	DALI.....	122
12.22.3	Updates.....	123
12.22.4	Proxy .....	124
12.23	Manually selecting the USB2DALI interface.....	124
12.24	Enabling/Disabling the power supply of the USB2DALI interface .....	125
12.25	Supported features .....	125
12.26	Device-specific technical descriptions .....	127
12.27	Error handling .....	128
12.27.1	Reporting and correction of errors/warnings when reading from a ... feature configuration file.....	128
12.27.2	Reporting of errors when reading from a device .....	128
12.27.3	Reporting of errors when entering incorrect values in a feature.....	128
12.28	Troubleshooting.....	128
13	Keyboard shortcuts.....	130
14	Software Update.....	131
15	Copyright.....	133
16	Disclaimer.....	134
17	Limitations of damages.....	135
18	List of tables.....	136

19 Index ..... 137



### 3 System requirements

The minimum system requirements for using MultiOne are:

- PC or laptop with Microsoft Windows 7 SP1, 8, 8.1 or 10
- USB 2.0 ports:
  - o Two free USB 2.0 ports for use with USB2DALI interface
  - o One free USB 2.0 port for use with USB2ZigBee interface
  - o One free USB 2.0 port for use with SimpleSet interface
- Ethernet port:
  - o One free Ethernet port for use with Art-Net protocol
- At least 45 MB of free disk space
- Microsoft .NET Framework 4.6.1 ([download here for offline installation](#))

## 4 Downloading and installing MultiOne and the documentation package

A zip-file can be downloaded from [www.philips.com/MultiOne](http://www.philips.com/MultiOne). This zip-file contains the following files:

- Philips MultiOne.exe (executable/installer)
- Philips MultiOne Workflow.exe (executable/installer)
- GettingStarted.pdf (document)
- UserManual.pdf (document)
- RELEASE\_NOTES.txt (document)

The MultiOne installation file is the installer for the full version of MultiOne. This document applies to this version of the software.

The MultiOne Workflow installation file is the version of MultiOne which is meant to be used in a production environment.

**Note! Make sure a User Software Key is present before installing. If you wish to install without a User Software Key, installation is possible, but you cannot work with MultiOne.**

To install the software, launch the installer for the desired version and follow the instructions on your screen.

The installation wizard will guide you through the process of installing the software and will ask you where the software needs to be installed. At the end, it will give you the option to immediately start MultiOne.

## 5 Attention points

### 5.1 General

Before starting MultiOne, make sure that the correct interface (USB2DALI, USB2ZigBee or SimpleSet) has been connected to your computer.

When upgrading the Windows Operating System, make sure the connection settings are correct when using MultiOne again.

When starting multiple instances of MultiOne for parallel configuring, make sure every instance of MultiOne uses another interface. The unique id of an interface is shown in the Connection Settings window where the interface port is selected. Also, for the currently selected interface the unique id can be found in the About box and in the tooltip of the connection status indicator in the status bar at the bottom-right part of MultiOne.

### 5.2 DALI

Lighting applications with DALI devices can be seriously affected by the presence/absence of the DALI short address. Make sure the DALI short address is as you expect, after finishing working with MultiOne.

### 5.3 SimpleSet interface

For SimpleSet there are three interfaces which can be used for communication (see §6.3): the Philips LCN9610, LCN9620 or LCN9630 MultiOne interface SimpleSet.


## 6 The MultiOne interfaces

### 6.1 DALI

The Philips LCN8600 MultiOne interface USB2DALI (USB2DALI interface) is the interface between the PC and the DALI devices. It has a mini-USB input connector and two parallel DALI output connectors. The USB2DALI interface status is indicated by three LED's located near the mini-USB connector.

The USB2DALI interface is supplied with a USB cable that can supply the DALI network with up to 220mA. It is advised to only use the supplied cable, in order to assure correct functioning of the USB2DALI interface.

- Safety: Class II, double insulated
- DALI open circuit voltage (when power supply enabled): 15V
- 

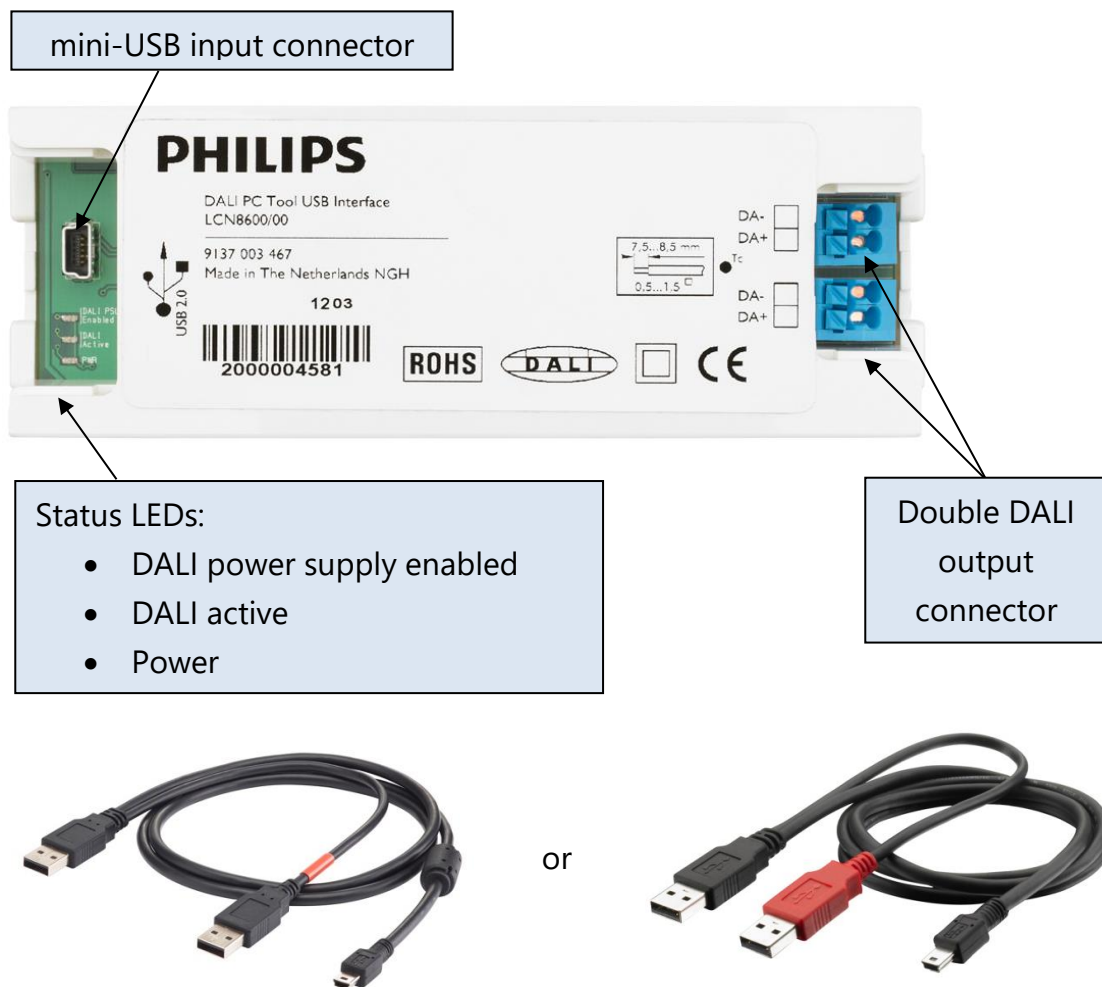

## 6.2 ZigBee

The Philips LCN8650 MultiOne interface USB2ZigBee (USB2ZigBee interface) is an USB dongle which interfaces between the PC and the ZigBee devices.



## 6.3 SimpleSet

The Philips LCN9610, LCN9620 and LCN9630 MultiOne interface SimpleSet are USB devices which interface between the PC and the SimpleSet devices:



Philips LCN9610



Philips LCN9620



Philips LCN9630


## 7 Starting MultiOne

Before starting MultiOne, make sure that the correct interface (USB2DALI, USB2ZigBee or SimpleSet) has been connected to your computer.

### 7.1 Activating MultiOne

When starting MultiOne for the first time, the first window that appears is the **MultiOne user software key information**. Here you can activate your copy of MultiOne with your own user software key.

**Note!** MultiOne must be connected to the internet upon first usage in order to activate.

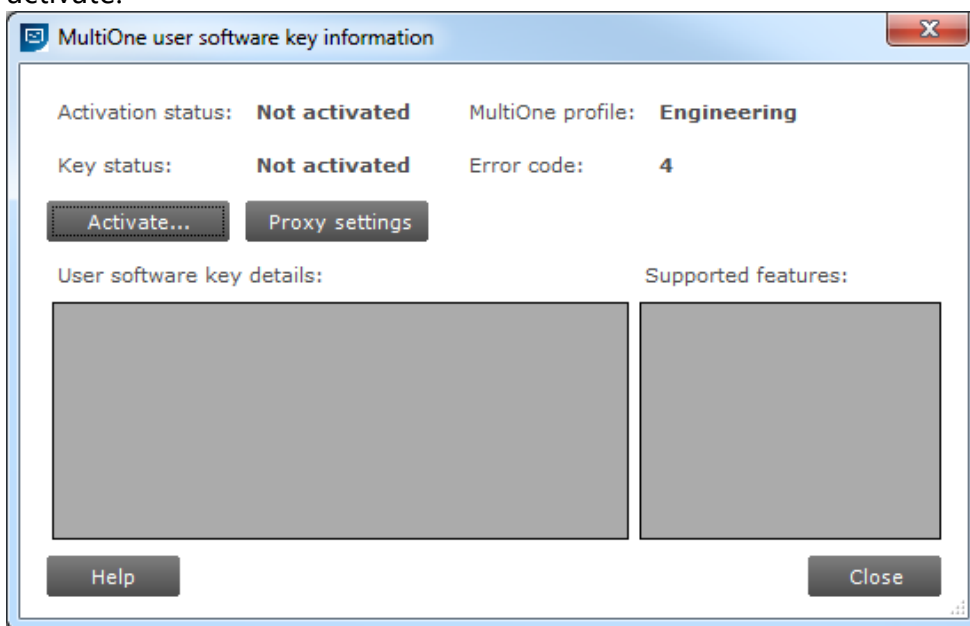


Use the **Activate...** button to continue activation.

Use the **Proxy settings** button to enter the proxy credentials if this is required for your infrastructure. An example of the information that can be entered can be found in chapter [Proxy](#).

Use the **Help** button to show the User Manual.

Select **Activate MultiOne online now** and follow the instructions.

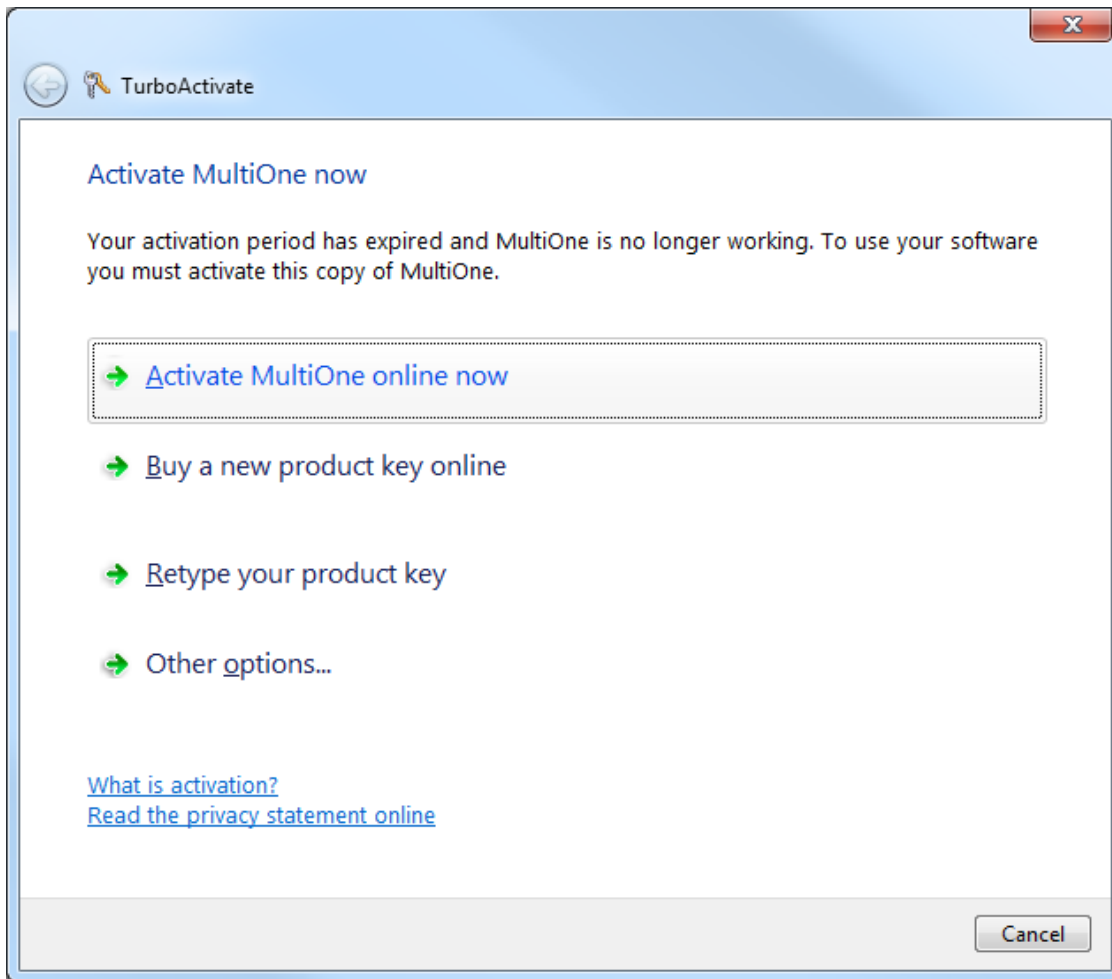


The other items on this window are less relevant. For completeness:

Select **Buy a new product key online** brings you to [www.philips.com/MultiOne](http://www.philips.com/MultiOne). Actually buying keys online is not supported.

Once you have activated MultiOne with a user software key, you can select **Retype your product key** to switch to a different user software key.

The other items shown on the dialog are not supported.

If all goes well the activation is successful and the MultiOne user software key information screen should show the correct details and supported features corresponding to the user software key.

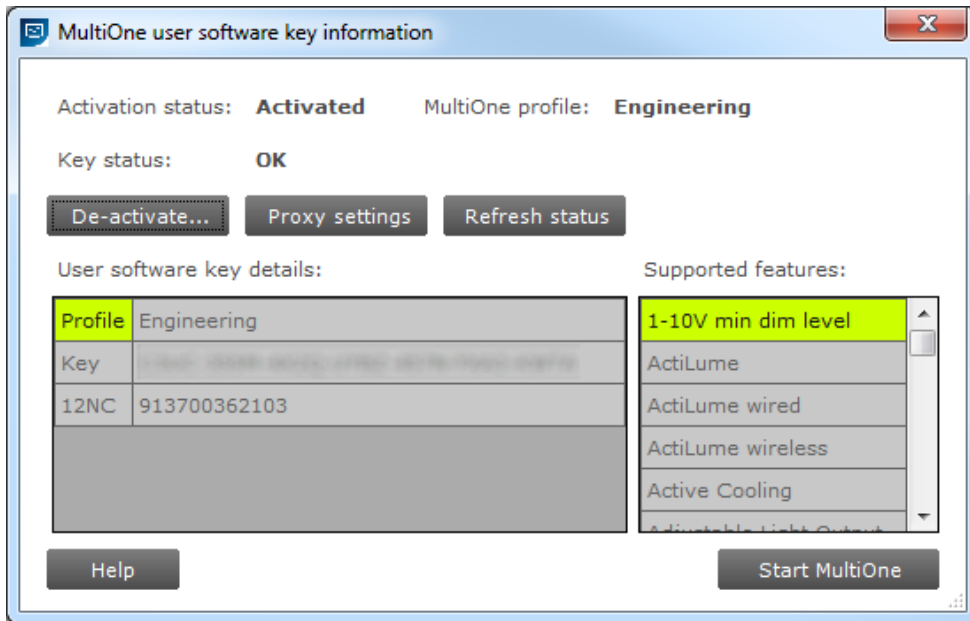

MultiOne is now ready for use!


Use the **Refresh status** button to refresh the license key status.

**Note!** Not all functionality described in this document applies to all MultiOne user software keys. For instance, some device features might not be available, or they might only be partially configurable.



## 7.2 Application mode selector

Once the activation process is done and when starting MultiOne, the first window that appears is the **Application Mode Selector**. Here, you can choose an application mode, based on the tasks you would like to perform. The application window also has links to the documentation.

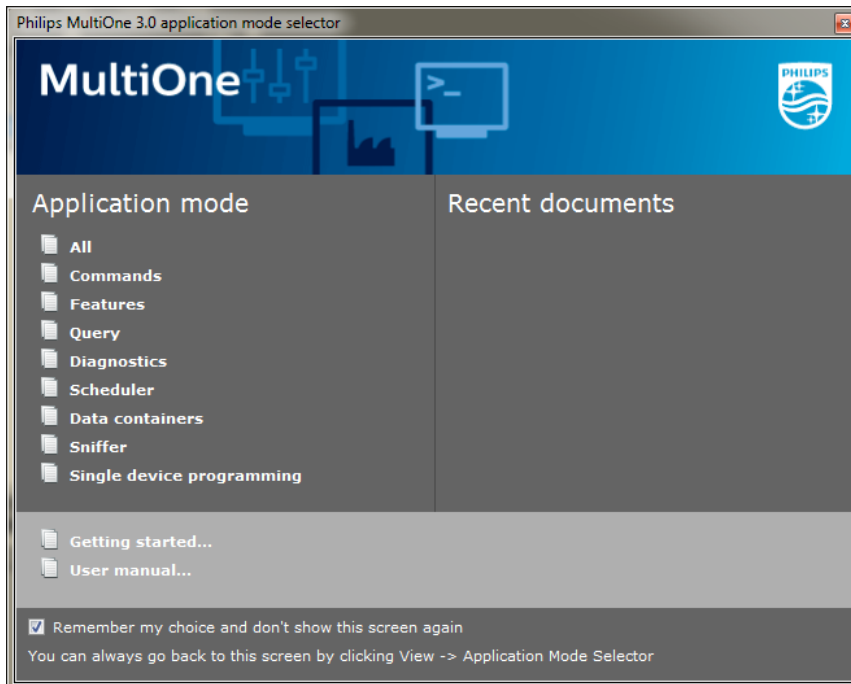

One of the modes is **Single device programming**. This mode simplifies some parts of the device configuration workflow when only one device has been connected. Single device programming is discussed in detail in chapter 0.

If you know that you will mostly perform the same tasks in the future, you can select **Remember my choice** and then click the appropriate application mode. MultiOne will record your choice and The **Application Mode Selector** will not appear again the next time MultiOne is started.

You can always go back to the **Application Mode Selector** by selecting **View → Application Mode Selector** from the main application window.

## 8 Selecting the interface

After the **Application Mode Selector** you must select the interface (USB2DALI, USB2ZigBee, Ethernet or SimpleSet) to work with.

### 8.1 Interface Auto detection

Interface can be automatically detected in case of DALI and SimpleSet.

On first start MultiOne will detect whether DALI or SimpleSet interfaces are connected to your PC or laptop.

- When only one interface is connected this one will be automatically chosen.
- Otherwise the Connection Settings window will appear.

Whenever MultiOne is started again and a previously selected interface is not connected anymore the following selection or action will take place:


- When only one interface is connected (independent of the type of interface) this one will be automatically chosen.
- When two interfaces are connected and one of them is of the same type as the previously selected interface this interface is automatically selected.
- Otherwise the Connection Settings window will appear.

Connecting multiple similar SimpleSet interfaces is currently only supported when using a LCN9610, LCN9620 or LCN9630 interface.

Notice! Whenever MultiOne is started again, if the previously selected interface is not either Dali or SimpleSet the auto detection will not work and MultiOne will start with the previously selected interface.

### 8.2 Interface Manual selection


First select the protocol: **DALI**, **ZigBee**, **Art-Net** or **SimpleSet**, when needed also indicate the selected interface and port or reader (in case of SimpleSet).

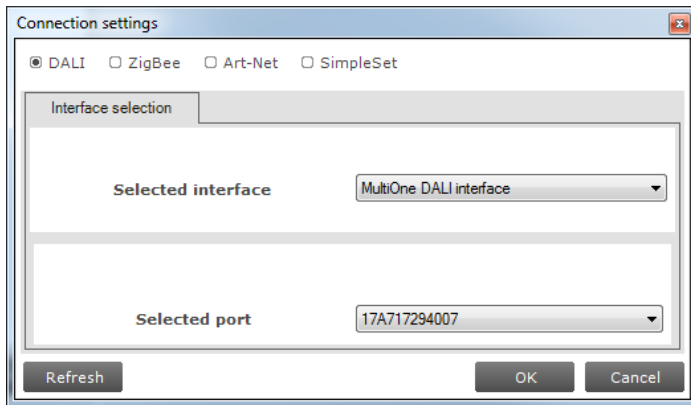

This protocol can always be changed later, by going to the **Tools → Connection settings**.

Notice! For DALI and SimpleSet the unique id of the interface is shown at the port/reader selection. This, to be able to identify which interface is used by which MultiOne instance (when configuring devices in parallel using multiple instances of MultiOne).

When a selected interface contains an outdated firmware version, MultiOne will show a message that it is unable to connect to the selected interface:

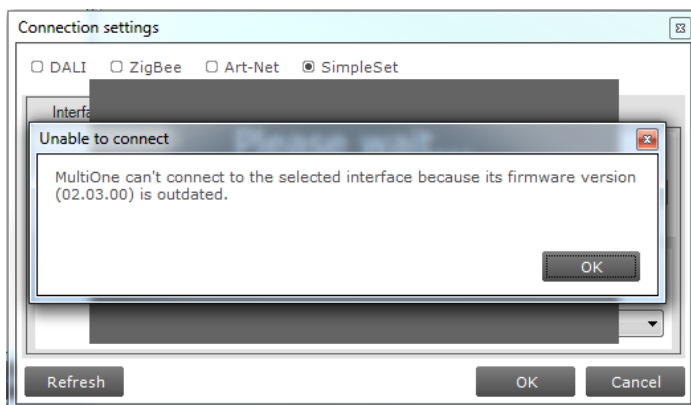

### 8.2.1 Art-Net

For the Art-Net protocol the delay time between sending frames is shown in the dialog. This delay time is set to 28ms and cannot be changed.



**Note!** Please make sure that the selected interface corresponds to the connected Art-Net network and has the correct IP address (for example use the 10.45.67.2 interface to connect with a Luminex network).


**Note!** Please make sure that Windows Firewall is not blocking the Art-Net network, this will cause troubles during scan.

## 9 Working with the Philips LCN8600 MultiOne interface USB2DALI

Before using MultiOne with the USB2DALI interface make sure that all devices that need to be commissioned are connected to the mains and the DALI network. Finally the DALI network must be connected to one of the DALI connectors of the USB2DALI interface.

### 9.1 The main application window

If in the Application Mode Selector screen **All** is selected as application mode, the program will start as follows:

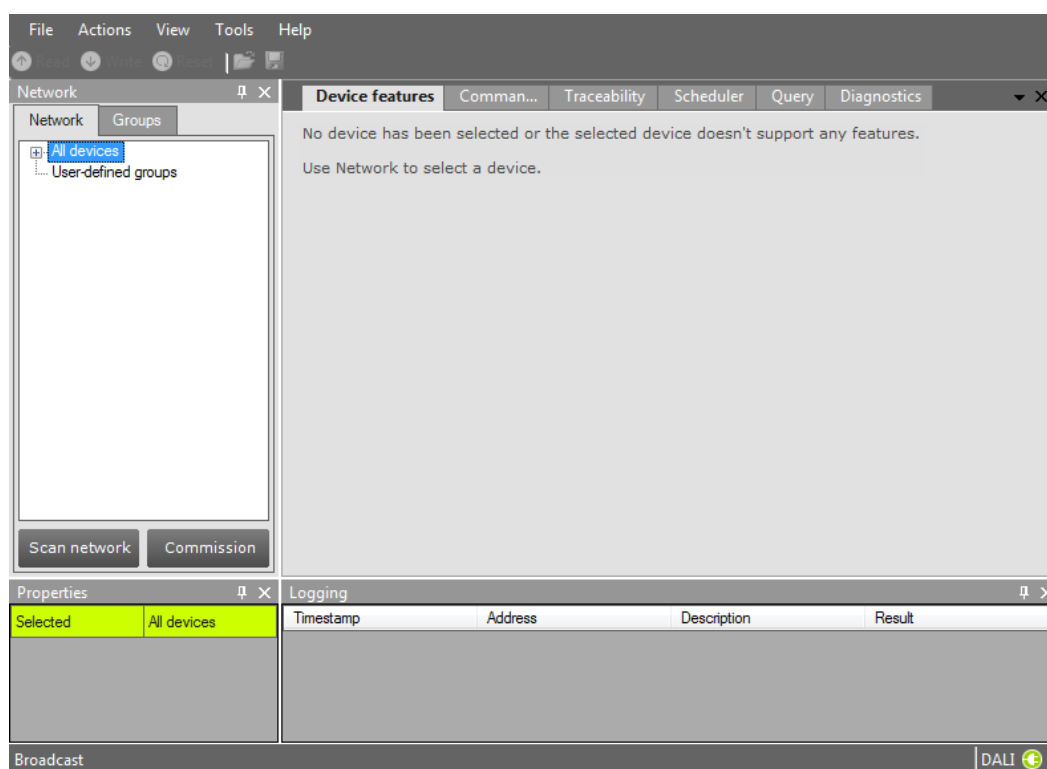


A more thorough explanation on how to communicate with devices can be found in chapters 12.2, 12.3, 12.11 and 12.12 of this manual.

### 9.2 Managing the DALI network

The **Network** panel is used to manage the connected DALI network. A number of tasks can be performed in the **Network**, each of which is detailed below.

#### 9.2.1 Identifying devices

When starting MultiOne, the DALI devices connected to the USB2DALI interface are not automatically identified. There are two methods for identifying the devices with corresponding buttons in the **Network** on the left-hand side of the application window: **Scan network** and **Commission**.

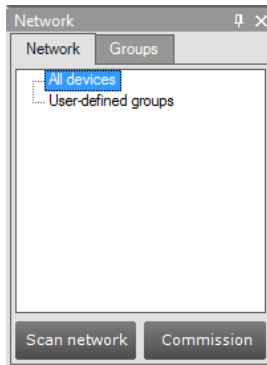

### 9.2.1.1 Scan network

There are two ways to scan a network: by short address or by random address. You can choose which method to use by going to **Tools->Preferences->DALI scanning**.


The key differences between scanning by short address and scanning by random address are the following:

- Scanning by short address will not change the random addresses of the connected devices. You should use this method if random addresses should not be affected. Additional user input might be required to find all connected devices (see below).
- Scanning by random address will change the random addresses of all connected devices. Any devices that do not have a short address yet will be assigned one automatically. Any devices that share the same short address will be automatically assigned (new) unique short addresses. This method is most likely to find all connected devices without user intervention.

**Scan by short address.** This method queries all short addresses without changing anything in the configurations of the connected devices. If all connected devices have a unique short address, this method will be able to find all devices. If, however, some devices share the same short address, or if there are devices without a short address (uncommissioned devices), additional decisions need to be made.

The following situations can occur while scanning a network by short address:


- There are uncommissioned devices. You will see the following dialog:

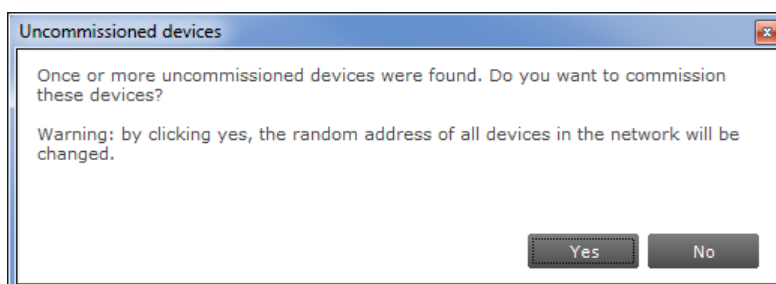

By clicking **Yes**, the uncommissioned devices will be commissioned. As a side effect, the random addresses of all connected devices will be changed.

By clicking **No**, no additional actions will be done and the **Network** will not display all devices.


- There are devices with the same short address. You will see the following dialog:

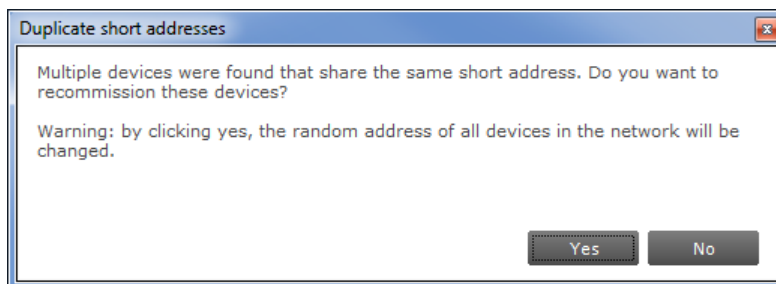

By clicking **Yes**, the devices that have the same short address will be recommissioned. As a side effect, the random addresses of all connected devices will be changed.

By clicking **No**, no additional actions will be done and the **Network** will not display all devices. Errors are likely to occur, indicated by a warning icon next to the name of the device(s).

- There are uncommissioned devices AND devices with the same short address. You will see the following dialog:

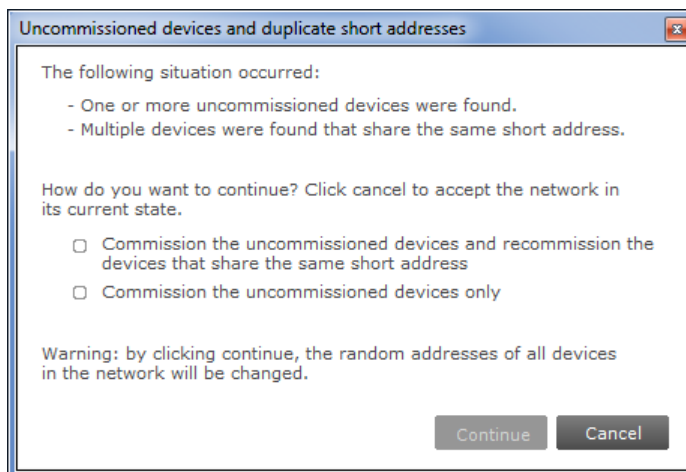

By choosing the first option, all uncommissioned devices will be commissioned, and all devices with the same short address will be recommissioned. By choosing the second option, only the uncommissioned devices will be recommissioned. By clicking **Cancel**, no additional actions will be done and the **Network** will not display all devices. Errors are likely to occur, indicated by a warning icon next to the name of the device(s).

**Scan by random address.** This method re-initializes the random addresses of all connected devices. If there are any uncommissioned devices, or devices that have the same short address, these devices will automatically be (re)commissioned.


### 9.2.1.2 Commissioning

All devices are given a new unique short address, starting at 0. Be aware that existing short addresses are erased and new short addresses are re-assigned to all connected devices. This procedure ensures that all devices have a short address and that there are no duplicate short addresses.

After commissioning or scanning the network, the list of identified devices is shown in the **Network**.

### 9.2.2 Selecting devices for communication

After having commissioned or scanned the network, the **Network** shows all devices present in the DALI network.

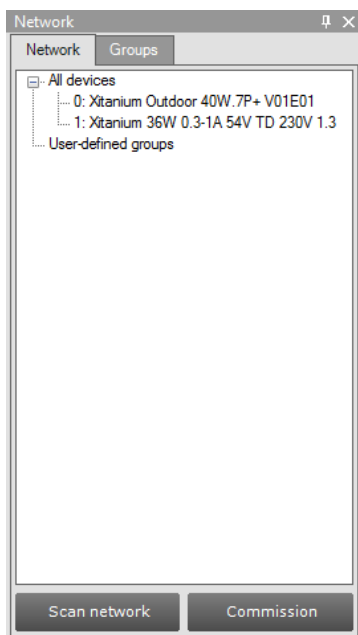

By clicking a device you will make that particular device the active one, meaning that all commands will be sent to this device only, and will be ignored by all other devices. Besides selecting a single device for communication, it is also possible to communicate with groups of devices. The options are:

- All devices in the network. Select **All devices**. All commands will now be sent as broadcast commands. Note that unidentified but connected DALI devices will also respond to commands.




- All user-defined groups. Select **User-defined groups**. All commands will now be sent to devices that belong to a user-defined group. User defined groups are explained in the section 9.2.3.
- A specific user-defined group. Expand **User-defined groups** and select the desired user-defined group. All commands will now be sent to devices that belong to this specific user-defined group.

### 9.2.3 Managing user-defined groups

Using the **Network**, devices can temporarily be grouped into user-defined groups. The purpose of user-defined groups is that they facilitate easy clustering so that a number of devices can be addressed simultaneously.


The user-defined groups are lost when MultiOne is closed.

A new user-defined group can be created by right-clicking **User-defined groups** and selecting **Add new group**.

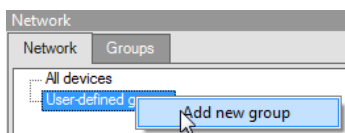


Alternatively choose **Actions** → **Add user-defined group**. A new group is created with a default name. To add a device to a user-defined group, right-click the device, select **Add to custom group** and select one of the available user-defined groups. Alternatively, the device can be dragged onto the desired user-defined group to add it to that group.

To immediately add a device to a new user-defined group, right-click a device and select **Add to user-defined group** and select **Add new group**.

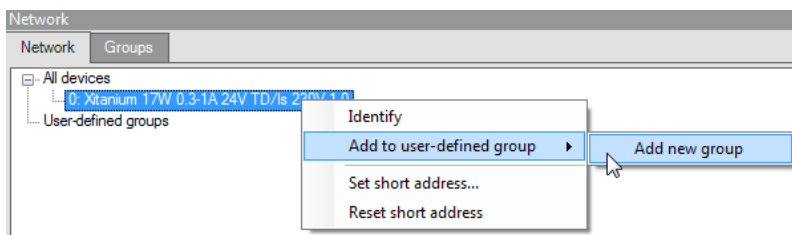


The user-defined group will be created and the selected device will be added to the newly created user-defined group.

To rename a user-defined group, right-click the group and select **Rename**. This will set the user-defined group to edit mode so that the new name can be entered.

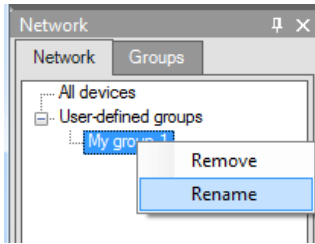

To remove a device from a user-defined group, right-click the device in the group and select **Remove**.

To remove an entire user-defined group (including its devices), right-click the group and select **Remove**.

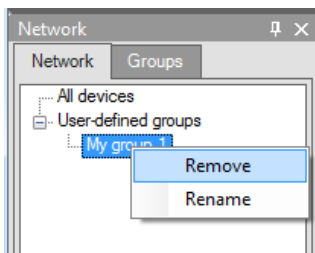


**Note!** The number of devices in a user-defined group is limited to 64.

#### 9.2.4 Managing groups

Once all the devices in the DALI network are commissioned, i.e. have a unique short address, it is possible to work with DALI groups.

Select the **Groups** tab and click **Scan groups**. After having scanned the network for groups, the **Groups** tab shows all the DALI groups and the found devices for every group.

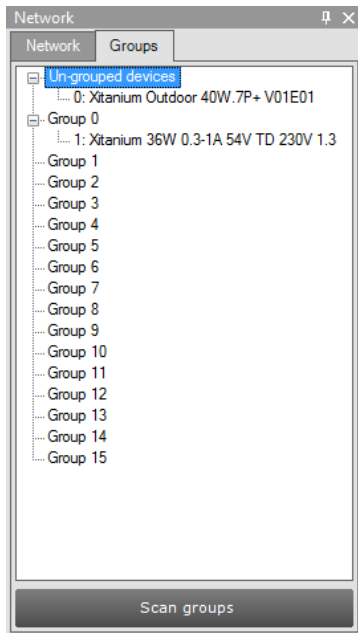


DALI groups are much more comprehensive than user-defined groups. The important difference is that with DALI grouping information is stored in the devices themselves. Therefore, DALI grouping is more permanent than user-defined grouping.


By clicking on a device you will make that particular device the active one, meaning that all actions will be performed on this device only, and will be ignored by all other devices.

The options are:

- With a right-click on an un-grouped device you can:
  - **Identify** the device
  - **Add to**, add the device to one group
  - **Configure...**, add device to multiple groups

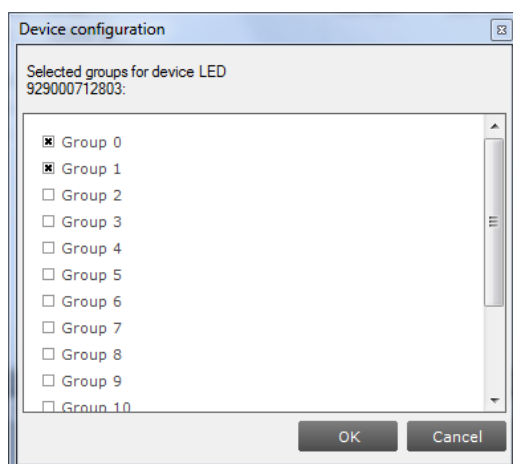


- With a right-click on a device in a group you can:
  - **Identify** the device
  - **Add to**, add the device to one other group
  - **Configure...**, add/remove device to/from multiple groups
  - **Remove**, remove device from current group

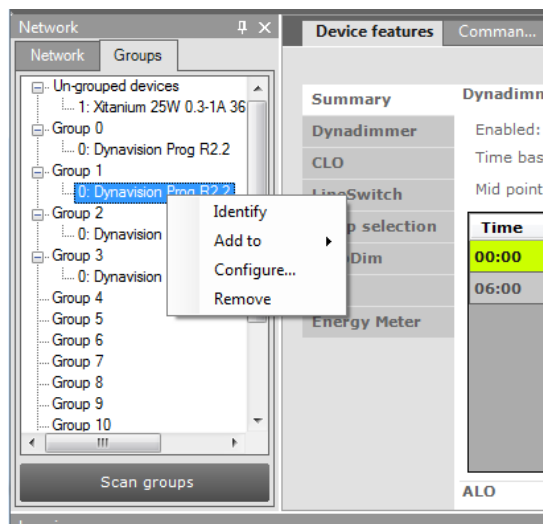

Besides selecting a single device for communication, it is also possible to communicate with a group of devices.

The options are:

- With a right-click on a group you can:
  - **Identify** the devices in the group
  - **Configure...**, add/remove multiple devices to/from the group
  - **Clear group**, remove the devices from the group

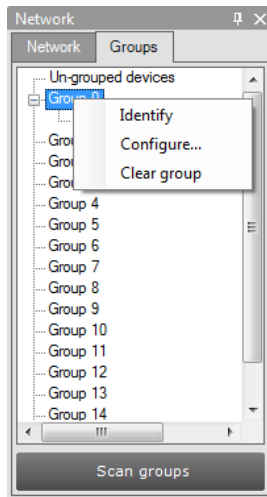


**Note!** The number of devices in a DALI group is limited to 64.

# 10 Working with the Philips LCN8650 MultiOne interface USB2ZigBee


## 10.1 The main application window

If in the Application Mode Selector screen **All** is selected as application mode, the program will start as follows:

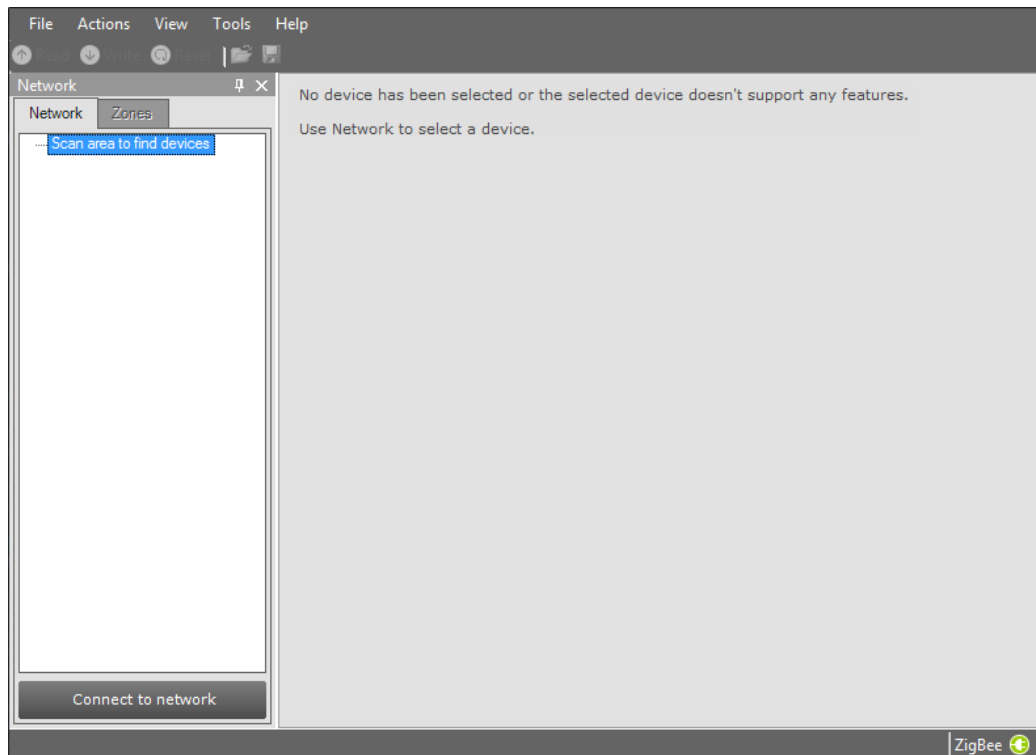

## 10.2 Connecting to a ZigBee network

The **Network** panel is used to manage a connected ZigBee network. A number of tasks can be performed in the **Network** panel, each of which is detailed below.

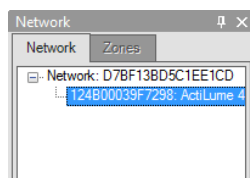

### 10.2.1 Identifying devices

The ZigBee devices and networks in the area of the USB2ZigBee interface are not automatically known.

To find devices and networks in the area click **Connect to network**: MultiOne scans for an open network in the area and connects to the network. After connecting has finished, the network and the found devices are shown in the **Network** panel.

### 10.2.2 Selecting devices for communication


After having connected to the network, the **Network** panel shows all devices and the network to which MultiOne is connected. By clicking on a device or network you will make that particular device or network the active one, meaning that all actions will be performed on this device or network only, and will be ignored by all other devices or networks.

With a right click on a device you can:

- **Identify** the device

## 10.3 Advanced commissioning


To commission a ZigBee network, right click the **Network** panel and choose **Enable advanced commissioning**.

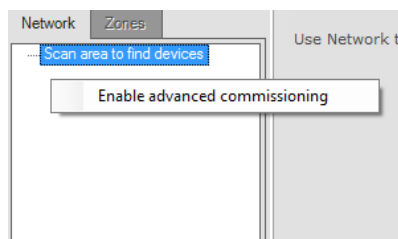

The **Network** panel switches to a different view making it possible to manage ZigBee networks.

### 10.3.1 Identifying devices

Click **Scan area** to scan for all the devices and network in the area of the USB2ZigBee interface. After scan has finished the devices and networks in range of the interface are shown in the **Network** panel.

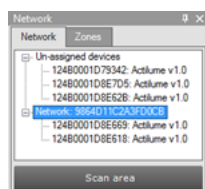

### 10.3.2 Managing networks


The options are:

- With a right-click on an unassigned device you can:

- **Add to**, move the device to an existing network or move the device to a new network
- With a right-click on a device in a network you can:
  - **Add to**, move the device to an existing network or move the device to a new network
  - **Reset**, from network, the device will become unassigned. If the network becomes empty, the network will be removed
- With a right-click on a network you can:
  - **Query network**, to find all devices in the network, including the devices that are out of range of the USB2ZigBee interface
  - **Open network**, to add more devices

### 10.3.3 Managing zones


Once you have scanned the area and found devices and networks in range, it is possible to scan a specific network for zones. Select the **Zones** tab, select the **Network** and click **Scan zones**. After having scanned the network, the **Zones** tab shows the found devices and zones within the specified network.

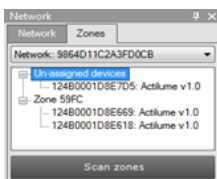


By clicking on a device or zone you will make that particular device or zone the active one, meaning that all actions will be performed on this device or zone only, and will be ignored by all other devices.

- With a right-click on an unassigned device you can:
  - **Identify** the device
  - **Add to**, move the device to an existing or new zone
- With a right-click on a device in a zone you can:
  - **Identify** the device
  - **Add to**, move the device to an another or new zone
  - **Configure...**, move the device to another zone



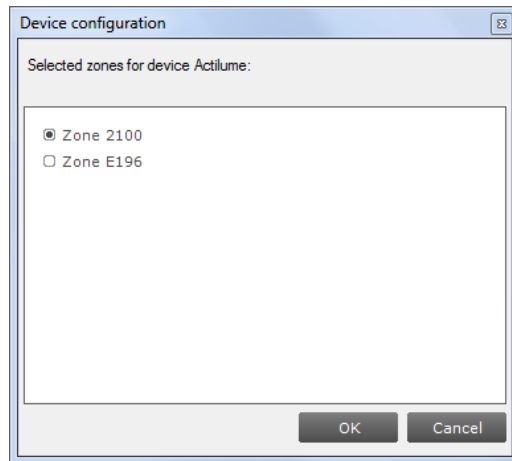

- **Remove**, the device will become unassigned. If the zone becomes empty, the zone will be removed
- With a right-click on a zone you can:
  - **Identify** the zone
  - **Configure...**, add/remove multiple devices to/from the zone. If other zones become empty, they will be removed

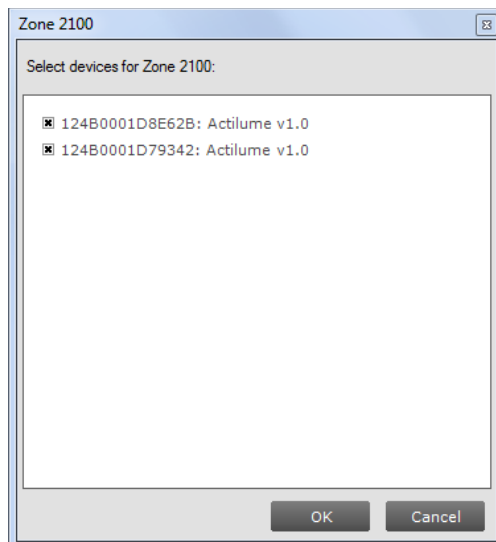


- **Remove zone**, the zone will be removed and the devices will become unassigned

# 11 Working with the Philips MultiOne SimpleSet interface(s)

## 11.1 The main application window

If in the Application Mode Selector screen **All** is selected as application mode, the program will start as follows:

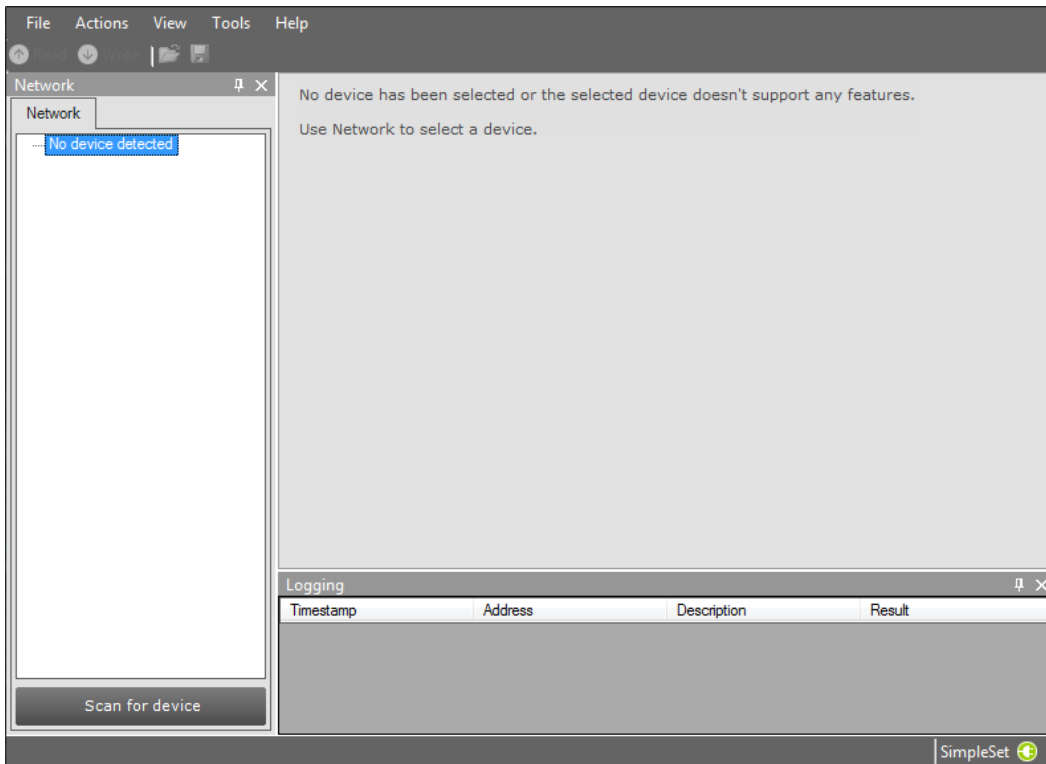

## 11.2 Scanning a SimpleSet device

The **Network** panel is used to manage the scanned SimpleSet devices. A number of tasks can be performed in the **Network** panel, each of which is detailed below.

### 11.2.1 Identifying devices

The SimpleSet device near the SimpleSet interface is not automatically known by MultiOne. To get the device click **Scan for device**: a pop-up will appear indicating the device must touch the interface.



Touch and hold the device close to the SimpleSet interface until the scan has completed. The scanned device will be shown in the **Network** panel.

### 11.2.2 Auto read


After a device gets selected all features are shown on the **Features** tab and auto read gets activated. Auto read automatically start reading the configuration of all features. Progress is shown as described in chapter 12.2

### 11.3 Selecting devices for communication

After having scanned the SimpleSet device, the **Network** panel shows the device. By clicking on a device you will make that particular device the active one, meaning that all actions will be performed on this device only, and will be ignored by all other devices.

### 11.4 Starting communication


In order to communicate with a SimpleSet device, the device has to touch the SimpleSet interface. Before starting the communication MultiOne will show a pop-up when the device is not near the SimpleSet interface. This pop-up waits until the device and the SimpleSet interface touch, or disappears after 20 seconds. After touching the action will be executed. Touch and hold the device close to the SimpleSet interface until all communication has finished.

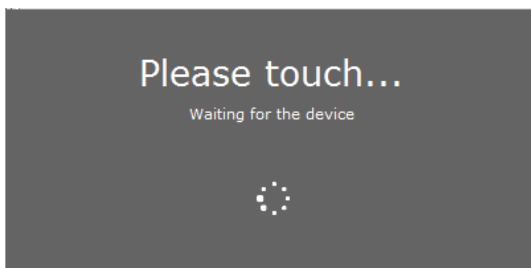

## 12 Working with MultiOne

### 12.1 Viewing device properties


Whenever a device is selected in **Network**, the **Properties** display a number of details for the selected device.

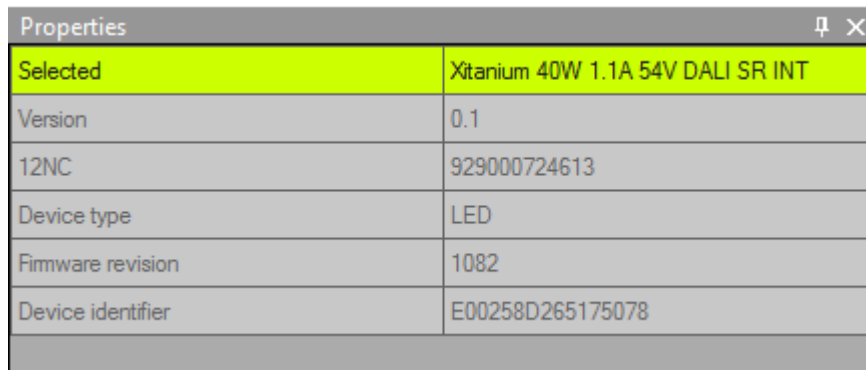

Selected	Xitanium 40W 1.1A 54V DALI SR INT
Version	0.1
12NC	929000724613
Device type	LED
Firmware revision	1082
Device identifier	E00258D265175078

### 12.2 Communicating with a device

 Initiating communication with a device is done by first selecting the device (left-click the device in **Network**) and then clicking **Read**, **Write** or **Reset** on the toolbar.

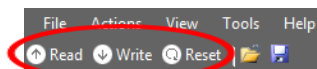

When the **Commands** tab or the **Scheduler** tab is active, these buttons are unavailable. When the **Query** tab is active, all queries are executed when clicking **Read**. When the **Diagnostics** tab is active, all diagnostics information is read (if available in the selected device) when clicking **Read**. The **Write** action is only available on the **Diagnostics** tab when the selected device has 1 or more features. When the Energy Meter is active, all data regarding **Energy Meter** is read (if available in the selected device) when clicking **Read**. When the **Device features** tab is active, the **Read** and **Write** actions are available. The **Reset** action is only available on the **Device features** tab when the selected device has 1 or more features that are resettable. The **Reset** action will set a feature to its factory defaults.

Reading, writing and resetting will always take a few seconds. Operation progress is shown on the status bar of the main application window. On the **Device features** and **Diagnostics** tab, per-feature progress is shown on each of the feature selection tabs. When all information has been successfully read or written, a green tick mark will appear and the text **Status: OK** is shown. If anything goes wrong, a red icon and the text **Status: failed** is shown. When on the **Device features** tab, point your mouse to each status icon to see a more detailed description of the communication result.


Apart from using **Read** and **Write** on the toolbar, you can directly send DALI commands. This can be done on the **Commands** tab and the **Scheduler** tab.

In the **Preferences** window it is possible to enable extra verification when writing (see chapter 12.22).

### 12.3 Configuring device features

You can configure all features that are supported by a specific Philips device. For any device selected in the **Network**, the **Device features** tab displays the set of device features that corresponds to this device. Upon selecting another device, the **Device features** tab will be updated as well. This mechanism ensures that only the features supported by the selected device can be configured.


The **Device features** tab has a panel with a column of tabs on the left-hand side. Each feature has its own tab. For most devices a **Summary** tab is available as well.

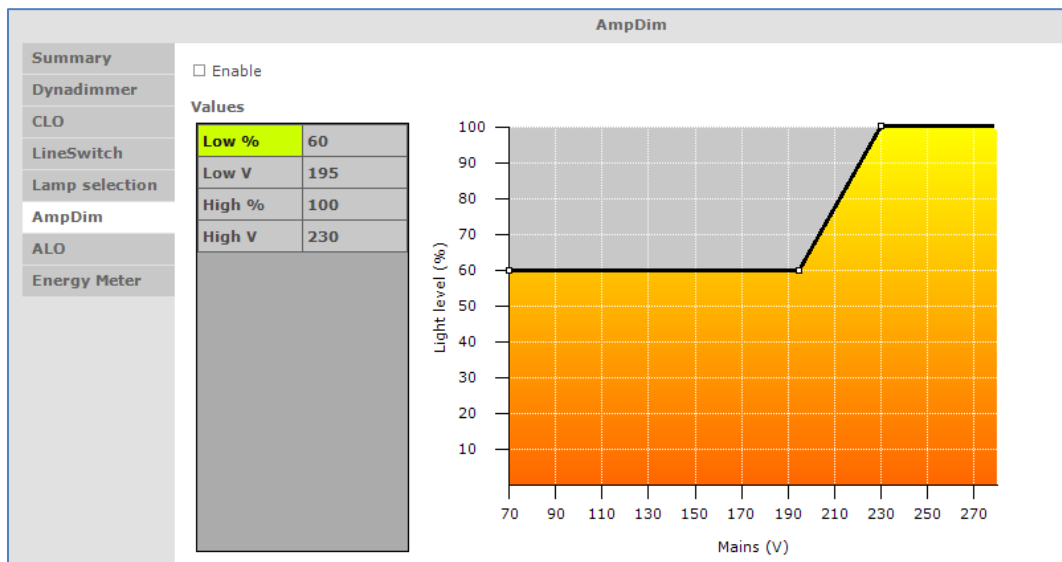


To make sure that the feature information in the **Device features** tab corresponds to the selected device, click **Read** on the toolbar.



Note that some features might be OEM Readout-protected. OEM Readout-protected features are indicated by a padlock icon in the **Read feature configuration** window.

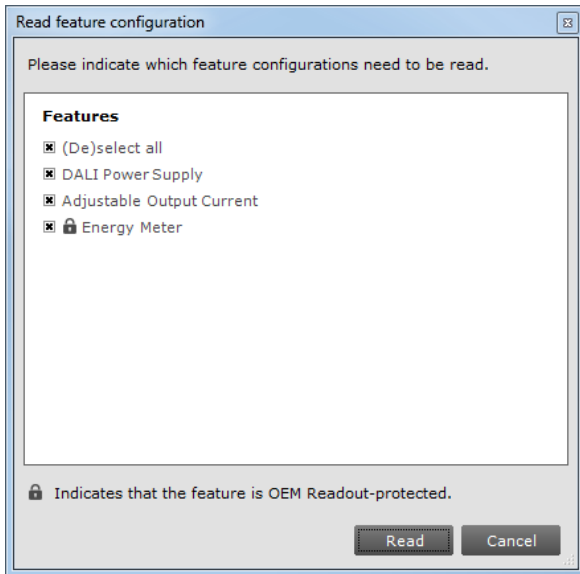



If an OEM Readout-protected feature is read, a dialog will appear asking for an access level and a password.

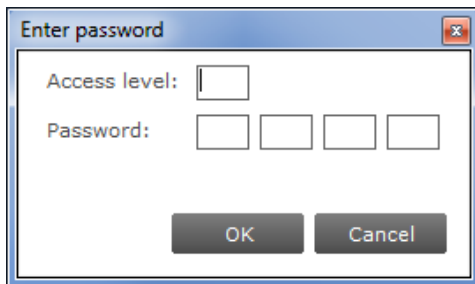


After providing a correct access level and password, and clicking **OK**, the OEM Readout-protected features will be read. By clicking **Cancel** none of the selected features will be read. If an incorrect access level and/or password were provided, the OEM Readout-protected features will receive a status icon indicating failure (see below).

To make sure that the feature information is stored in the selected device, click **Write** on the toolbar. If you want to reset certain features to its default settings, click **Reset** on the toolbar. Be aware that you need to click the **Read** button afterwards to reload the reset values.

Note also that some features might be OEM Write-protected. OEM Write-protected features are also indicated by a padlock icon in the **Write feature configuration** window.

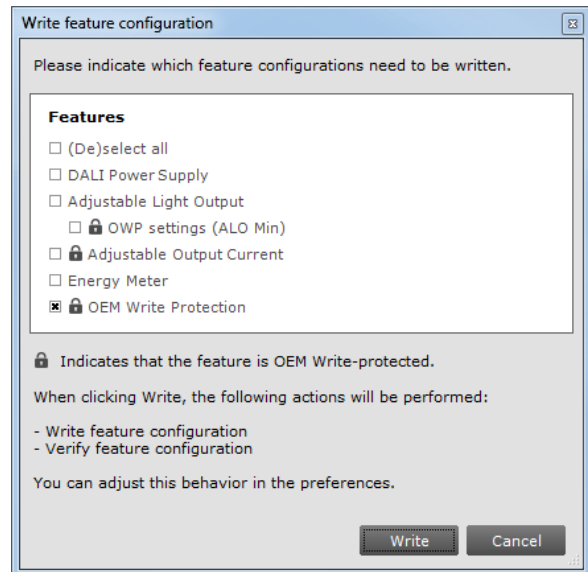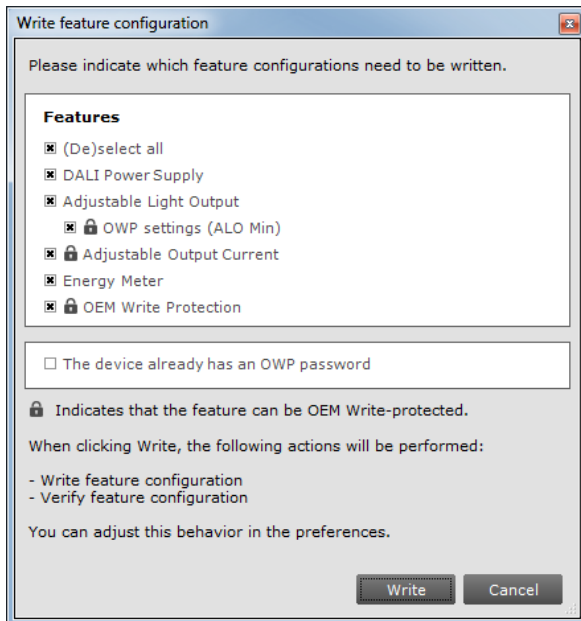

Also note that you must select a check box to indicate that the device already has an OWP password configured. MultiOne does not know this, because the configuration of a device is not always read before a Write action takes place. When the check box is selected and the **Write** button is clicked, a dialog will appear asking for a password. When the OWP configuration was already read, MultiOne knows the current OWP configuration and the check box will not be shown. In that way, MultiOne will show the password dialog only in case if OWP is enabled in the device and a write protected feature is selected.

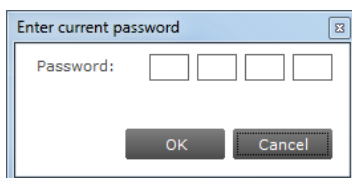

After providing a correct password and clicking **OK**, the OEM Write-protected features will be written. By clicking **Cancel** none of the selected features will be written. If an incorrect password was provided, the OEM Write-protected features will receive a status icon indicating failure (see below).

For **Read**, **Write** and **Reset** actions, status icons will be shown when a feature is being read or written. There are four different colors used for the icons: red, orange, green and grey.

Red means that the read or write action failed. The green icon indicates that reading or writing was successful and that all the data was sent to the driver. This does not mean that all data is actually received (see Write and Verify in chapter 12.18.1). The grey icon is used to display that the read or write action is pending for the specific feature. An orange icon indicates that the last write action for the feature was not

successful and that the feature might not be configured correctly; the orange indicator is only applicable for SimpleSet devices.

<p>Summary</p> <ul style="list-style-type: none"> <li>↑ Dynadimmer</li> <li>↑ CLO</li> <li>↑ LineSwitch</li> <li>↑ Lamp selec...</li> <li>↑ AmpDim</li> <li>↑ ALO</li> <li>↑ Energy Meter</li> </ul> <p><b>Read</b></p>	<p>Summary</p> <ul style="list-style-type: none"> <li>↓ Dynadimmer</li> <li>↓ CLO</li> <li>↓ LineSwitch</li> <li>↓ Lamp selec...</li> <li>↓ AmpDim</li> <li>↓ ALO</li> <li>↓ Energy Meter</li> </ul> <p><b>Write</b></p>	<p>General</p> <ul style="list-style-type: none"> <li>↻ Mode 1</li> <li>↻ Mode 2</li> <li>↻ Mode 3</li> <li>↻ Mode 4</li> <li>↻ Mode 5</li> <li>↻ Mode 6</li> <li>↻ Mode 7</li> </ul> <p><b>Reset</b></p>	<p>Summary</p> <ul style="list-style-type: none"> <li>↑ DALI PSU</li> <li>↑ Dynadimmer</li> <li>↑ ALO</li> <li>↑ AOC</li> <li>↑ CLO</li> <li>↑ LSI</li> <li>↑ EOL</li> </ul> <p><b>Read</b></p>
---	--	---	---

In the following sections you will find an overview of all supported device features in alphabetical order. Features typically belong to one or two product groups (LED, HID or FLUO), but this does not mean that every device belonging to a certain product group will automatically support all of its features listed here. For an overview of supported device features see [Supported features](#).



### 12.3.1 0-10V / 1-10V (SR bridge)

#### Product group

#### CONTROL

Curve selection:

**User specified curve**

Dim level [%]	0-10V / 1-10V
<input type="text" value="1"/>	<input type="text" value="1.0"/>
<input type="text" value="7"/>	<input type="text" value="1.5"/>
<input type="text" value="13"/>	<input type="text" value="1.9"/>
<input type="text" value="19"/>	<input type="text" value="2.3"/>
<input type="text" value="25"/>	<input type="text" value="2.8"/>
<input type="text" value="31"/>	<input type="text" value="3.2"/>
<input type="text" value="37"/>	<input type="text" value="3.6"/>
<input type="text" value="42"/>	<input type="text" value="4.0"/>
<input type="text" value="47"/>	<input type="text" value="4.3"/>
<input type="text" value="52"/>	<input type="text" value="4.7"/>
<input type="text" value="57"/>	<input type="text" value="5.0"/>
<input type="text" value="62"/>	<input type="text" value="5.4"/>
<input type="text" value="67"/>	<input type="text" value="5.7"/>
<input type="text" value="72"/>	<input type="text" value="6.1"/>
<input type="text" value="77"/>	<input type="text" value="6.4"/>
<input type="text" value="83"/>	<input type="text" value="6.9"/>
<input type="text" value="89"/>	<input type="text" value="7.3"/>
<input type="text" value="95"/>	<input type="text" value="7.7"/>
<input type="text" value="100"/>	<input type="text" value="8.0"/>

#### Description

The 0-10V interface requires special configuration to match the 0-10V (or 1-10V) dimming curves of the connected drivers. The SR Bridge needs to correctly and accurately translate the DALI arc power commands to the correct 0-10V dimming voltages for the connected drivers such that the appropriate LED driver output current is achieved. This feature is used to configure the dimming curve by either selecting a predefined fixed curve or specifying a curve manually.

#### Usage

Use the drop down box to select the 0-10V (or 1-10V) curve that should be used for the SR Bridge. There are four fixed curves (1-10V curved, 0-10V linear, 1-9V linear and 0-10V logarithmic) selectable and there is a possibility to select the **User specified** option.


Selecting the 'User specified' ZTV curve makes the **User specified curve** properties visible which can be used to construct a specific 0-10V (or 1-10V) curve. Both the **Dim level** and **0-10V / 1-10V** values can be changed to create a specific 0-10V (or 1-10V) curve.

**Note!** 0-10V linear curve also includes the European 1-8V linear curve.

### 12.3.2 0-10V / 1-10V (LED driver)

#### Product group

LED

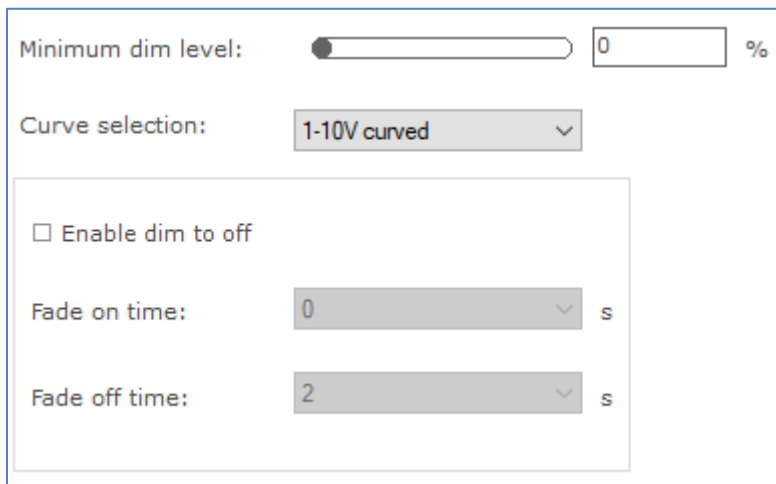

The screenshot displays a configuration panel for an LED driver. At the top, there is a 'Minimum dim level' control consisting of a slider and a text input field set to '0 %'. Below this is a 'Curve selection' dropdown menu currently showing '1-10V curved'. A section containing a checkbox labeled 'Enable dim to off' is currently unchecked. At the bottom, there are two dropdown menus for 'Fade on time' (set to '0 s') and 'Fade off time' (set to '2 s').

#### Description

Use this feature to set the minimum dim level when using 1-10V.

#### Usage

- Use the slider or the text field to select a value. The value represents the light level.
- Use the drop down box to select the wanted curve selection (0-10V linear, 1-9V linear, 1-10V curved or 0-10V logarithmic). The curve selection is device dependent. **Note!** 0-10V linear curve also includes the European 1-8V linear curve.
- Use the Enable dim to off checkbox to enable or disable the dim to off functionality.
- Use the first drop down box to select the wanted fade on time value. This value represents the time to turn on and start dimming up to target dim level.
- Use the second drop down box to select the wanted fade off time value. This value represents the time to start dimming down until the light is off.

### 12.3.3 ActiLume General

#### Product group/family

CONTROL/ActiLume DALI

Configuration:	Parallel link
Mode:	1
IR channel:	A
Region:	EU
Occupancy sharing:	Mode based
<input checked="" type="checkbox"/> Local daylight sensing	
<input checked="" type="checkbox"/> Local presence sensing	
Presence sensor sensitivity:	High
Light sensor reference point:	600 lx
<b>Night mode</b>	
Hold time:	5 minutes
Background level:	20%
Prolong time:	15 minutes
<b>BMS</b>	
<input type="checkbox"/> Send HVAC/sunblind messages to BMS	
<input type="checkbox"/> DALI occupancy reporting	

#### Description

Use this feature to configure general ActiLume settings.

#### Usage

Use the various drop down boxes, check boxes and text fields to make a configuration.

Please refer to the ActiLume DALI gen2 Application Guide for further details.

## Product group/family

CONTROL/ActiLume Wireless

Mode:	<input type="text" value="1"/>
IR channel:	<input type="text" value="H"/>
Region:	EU
<input type="checkbox"/> 100 hour burn-in	
Light sensor reference point:	<input type="text" value="150"/> lx
Reference point correction factor:	<input type="text" value="88"/> %
Occupancy mode override:	<input type="text" value="Path of egress"/>

## Description

Use this feature to configure general ActiLume settings.

## Usage

Use the various drop down boxes, check boxes and text fields to make a configuration.

Please refer to the ActiLume Wireless Application Guide for further details.

### 12.3.4 ActiLume Mode

## Product group/family

CONTROL/ActiLume DALI

Hold time:	<input type="text" value="15"/>	half min								
Prolong time:	<input type="text" value="0"/>	min <input type="checkbox"/> Infinite								
Smart time:	<input type="text" value="10"/>	min								
Grace time:	<input type="text" value="10"/>	s <input checked="" type="checkbox"/> Fade during grace period								
Light status on power up:	<input type="text" value="Lights off"/>									
Retention time:	<input type="text" value="15"/>	min								
Background level:	<input type="text" value="10"/>	%								
Dwell time:	<input type="text" value="0"/>	s								
Light sensor reference point:	<input type="text" value="210"/>	lx								
Occupancy mode:	<input type="text" value="Auto on / auto off"/>	Group 1	<input type="text" value="Auto on / auto off"/>	Group 2	<input type="text" value="Auto on / auto off"/>	Group 3	<input type="text" value="Auto on / auto off"/>	Group 4	<input type="text" value="Auto on / auto off"/>	Group 5
Daylight dependent override:	<input checked="" type="checkbox"/>		<input type="checkbox"/>		<input type="checkbox"/>		<input type="checkbox"/>		<input type="checkbox"/>	
Daylight dependent switching:	<input checked="" type="checkbox"/>		<input type="checkbox"/>		<input type="checkbox"/>		<input type="checkbox"/>		<input type="checkbox"/>	
Daylight dependent regulation:	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>		<input type="checkbox"/>		<input type="checkbox"/>	
Daylight regulation offset:			<input type="text" value="30"/> %		<input type="text" value="50"/> %		<input type="text" value="0"/> %		<input type="text" value="0"/> %	
Switch on level prior to DDR:	<input type="text" value="20"/> %		<input type="text" value="20"/> %		<input type="text" value="100"/> %		<input type="text" value="100"/> %		<input type="text" value="100"/> %	
<b>Mode based linking</b>										
Reaction to mode:	1 <input type="text" value="Ignore"/>	5 <input type="text" value="Ignore"/>	9 <input type="text" value="Ignore"/>	13 <input type="text" value="Ignore"/>						
	2 <input type="text" value="Ignore"/>	6 <input type="text" value="Ignore"/>	10 <input type="text" value="Ignore"/>	14 <input type="text" value="Ignore"/>						
	3 <input type="text" value="Ignore"/>	7 <input type="text" value="Ignore"/>	11 <input type="text" value="Ignore"/>	15 <input type="text" value="Ignore"/>						
	4 <input type="text" value="Ignore"/>	8 <input type="text" value="Ignore"/>	12 <input type="text" value="Ignore"/>	16 <input type="text" value="Ignore"/>						
<b>Group based linking</b>										
Base group:	<input type="text" value="Local occupancy"/>									
Secondary group:	<input type="text" value="Local occupancy"/>									

### Description

Use this feature to configure ActiLume settings that apply to the system's modes. For ActiLume DALI gen2, up to 16 modes are shown, each of which has its own feature tab on the left-hand side. Use the ActiLume Mode feature to configure settings for each individual mode.

### Usage

Use the various drop down boxes, check boxes and text fields to make a configuration. Click the **Reset to factory defaults** button to reset the current mode to the factory defaults.

Please refer to the ActiLume DALI gen2 Application Guide for further details.

### Product group/family

CONTROL/ActiLume Wireless

Hold time:	<input type="text" value="30"/>	half min	
Prolong time:	<input type="text" value="0"/>	min	<input type="checkbox"/> Infinite
Light status on power up:	<input type="text" value="Lights off"/>		
Background level:	<input type="text" value="10"/>	%	
Occupancy mode:	<input type="text" value="Auto on / auto off"/>		
Light sensor reference point:	<input type="text" value="210"/>	lx	

### Description

Use this feature to configure ActiLume settings for that apply to the system's modes. For ActiLume Wireless, up to 32 modes are shown, each of which has its own feature tab on the left-hand side. Use the ActiLume Mode feature to configure settings for each individual mode.

### Usage

Use the various drop down boxes, check boxes and text fields to make a configuration.

Please refer to the ActiLume Wireless Application Guide for further details.

### 12.3.5 ActiLume Scene

#### Product group/family

CONTROL/ActiLume DALI

	Group 1	Group 2	Group 3	Group 4	Group 5
Dim behavior:	Manual dim level ▾	Manual dim level ▾	Manual dim level ▾	Manual dim level ▾	Manual dim level ▾
Dim level:	50 %	50 %	50 %	50 %	50 %

#### Description

Use this feature to configure ActiLume settings that apply to the system's scenes. For ActiLume DALI gen2, 5 scenes are shown, each of which has its own feature tab on the left-hand side. Use the ActiLume Scene feature to configure settings for each individual scene.

#### Usage


Use the various check boxes and text fields to make a configuration.

Please refer to the ActiLume DALI gen2 Application Guide for further details.

### 12.3.6 Active Cooling

#### Product group

LED

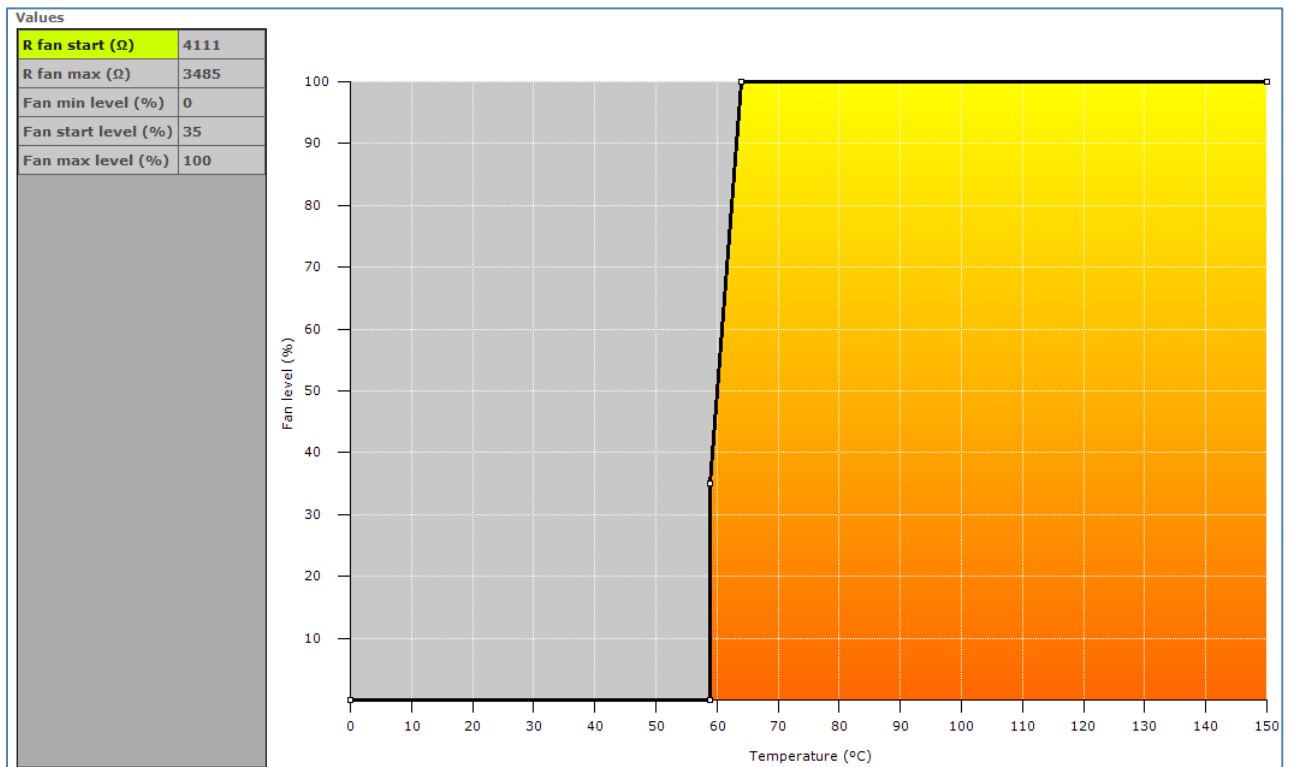

#### Description

Use this feature to control the fan of the LED module and minimize audible noise from the active cooling unit. The driver increases the fan output level (and so the speed of the fan) when temperature of the LED module becomes too high. When the fan output level increases the temperature of the LED module should be reduced.

The customer can specify the temperature limits to make sure the fan output level is kept as low as possible and will only increase when needed so the audible noise is reduced.

### Usage

Drag the points or the lines in the resulting graph to adjust the configuration. Alternatively, use the table to enter values directly.

**Note!** For a detailed technical description of the characteristics of the device model, like constraints and limitations, please refer to [Device-specific technical description](#).

### 12.3.7 Adjustable Light Output

#### Product group

HID

<input checked="" type="checkbox"/> Enable		
ALO:	<input type="range" value="90"/>	<input type="text" value="90"/> %
ALO min:	<input type="range" value="50"/>	<input type="text" value="50"/> %

### Description

Use the Adjustable Light Output (ALO) feature to regulate the light output to a desired optimum value. You can create a “virtual lamp” with output different than what the standard wattages offer.


### Usage

Select the **Enable** check box to use this feature. Use the slider or the text field to select an **ALO** value. The value represents the light level. The **ALO min** value (not available for all devices) can be used to set the lowest possible ALO value.

### 12.3.8 Adjustable Output Current

#### Product group

LED



#### Description

Use this Adjustable Output Current (AOC) feature to adjust the output current to a desired optimum value. You can create a “virtual lamp” with output different than what the standard wattages offer.

#### Usage

The current can be set in two ways:

- Select the **External Rset** check box: Adjustment of the output current is not configured using MultiOne, but the value of an external resistor adjusts the output current


OR

- Use the slider or the text field to select a value. The value represents the nominal output current

### 12.3.9 Adjustable Output Current Multi-Channel

#### Product group

LED

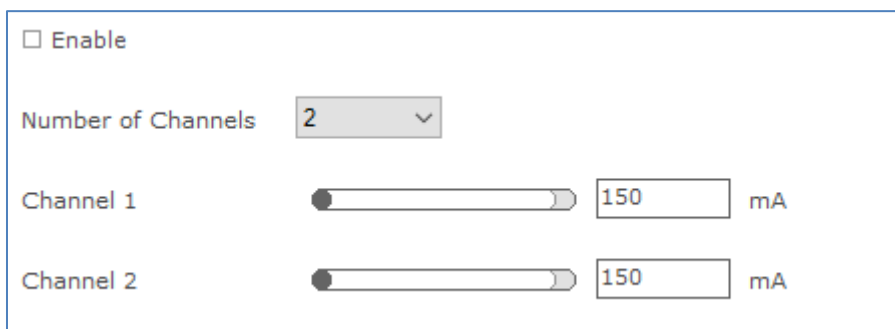

#### Description

Use the Adjustable Output Current Multi-Channel (AOCMC) feature to adjust the output current to a desired optimum value for each active channel. You can create a “virtual lamp” with output different than what the standard wattages offer.

#### Usage

Select the **Enable** check box to enable this feature.



Select the **Number of Channels** box to define the number of channels that will be available to adjust the output current. Use the slider or the text field to select a value for each active channel. The value represents the nominal LED output current.

**Note!** There is a range limit in the values that corresponds with the maximum and minimum values of the total nominal LED current that is used in MultiOne.

### 12.3.10 Adjustable Startup Time

#### Product group

LED



The image shows a UI control for adjustable startup time. It consists of a horizontal slider and a text input field. The slider is positioned at approximately 10% of its range. The text input field contains the value '1000' followed by 'ms'.

#### Description

At power on, the fast fade-up of light can be unpleasant in certain applications. To avoid such a situation, the device fade-up time at startup can be adjusted.


#### Usage

Use the slider or the text field to select a value. The value represents the start fade-up time in milliseconds.

### 12.3.11 AmpDim

#### Product group

HID, LED

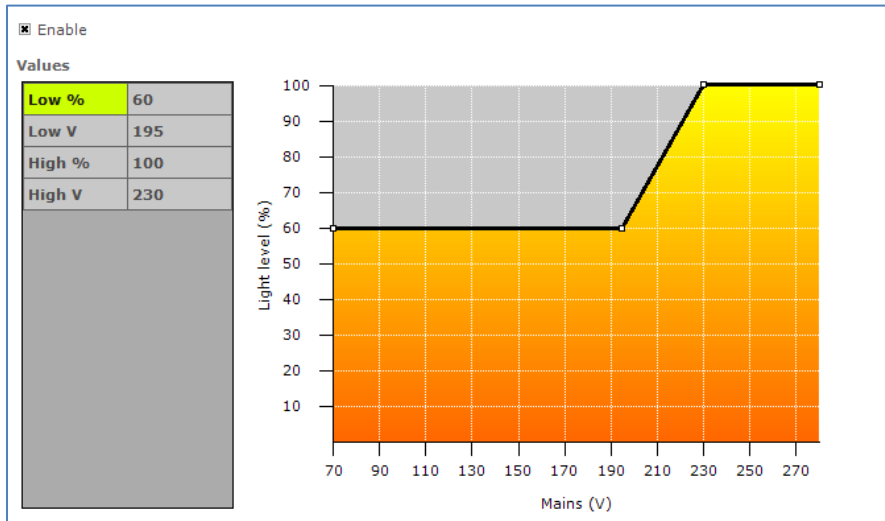

#### Description

Use this feature to adjust the light output of a lamp by adjusting the mains voltage of the device.

#### Usage

Select the **Enable\*** check box to use this feature (note that LED devices do not have this check box). Drag the points or the lines in the graph to create the desired configuration. Alternatively, use the table to directly enter values.

**Note!** For a detailed technical description of the characteristics of the device model, like constraints and limitations, please refer to [Device-specific technical description](#).

\* **Note!** If the device supports interface selection then this feature can only be enabled through the interface selection and the enable will not be shown here.

### 12.3.12 Coded Light On and Off

#### Product group

LED

Enable

#### Description

Use this feature to enable/disable the Coded Light feature in the device.

## Usage

Select the **Enable** check box to use this feature.

### 12.3.13 Coded Mains

#### Product group

#### LED

Enabled  
 Override

Fade time: 7 5,7 s  
Fast fade time: 27 675 ms

Fallback detection time: 5 min

Power on level: 100 %

Scenes

Scene 0 / Fallback: 100 %  Keep last defined dim-level

Scene 1: 0 %	Scene 5: 50 %	Scene 9: 85 %
Scene 2: 1 %	Scene 6: 60 %	Scene 10: 90 %
Scene 3: 10 %	Scene 7: 75 %	Scene 11: 95 %
Scene 4: 35 %	Scene 8: 80 %	Scene 12: 100 %

## Description

Use this feature to configure the coded mains settings that are used when a coded mains command is received from a transmitter regarding the requested dimming scene for the driver.

## Usage

Select the **Enable\*** check box to use this feature and enable the coded mains interface on the driver. This feature has the following parameters:

- **Override:** If the check box is selected, that means the dim level can be overridden by other dimming interfaces.
- **Fade time:** Used to indicate how long it takes to perform a fade when switching scenes. The corresponding timings can be found in the driver specifications, and the corresponding time for the selected **Fade time** is also displayed next to the selection. In case **Fade time** is 0, the **Fast fade time** setting is used.
- **Fast fade time:** Used to indicate how long it takes to perform a fade when switching scenes. The corresponding timings can be found in the driver specifications, and the corresponding time for the selected **Fast fade time** is also displayed next to the selection. In case both **Fade time** and **Fast fade time** are 0, it means that there is no fade and the transition between scenes takes place immediately.

- **Fallback detection time:** Indicates the time after a driver power cycle that is used to wait for a valid coded mains command. In case no valid command is received within this time frame, the driver will switch to the fallback scene (Scene 0).
- **Power on level:** The light level applied when the driver is powered and before the first valid coded mains command is received.
- **Scenes:** Configurable dimming levels for a driver. A driver contains 13 scenes which can be configured individually between 0 and 100%. Scene 0 is the fallback scene which can also be configured as 'keep the last defined dim-level'.


\* **Note!** If the device supports interface selection then this feature can only be enabled through the interface selection and the enable will not be shown here.

### 12.3.14 Coded Mains Standalone Receiver

#### Product group

CONTROL

Control Output:  Autodetect driver type  
 DALI output  
 1-10V output

 When 1-10V output is configured the control output cannot be set to another value. The device is no longer able to be discovered by MultiOne.

#### Description

Use this feature to configure the control output for the coded mains standalone receiver.

#### Usage

Select one of the options to set the desired control output.

### 12.3.15 Constant Light Output

#### Product group


HID, LED

#### 12.3.15.1 HID version


The HID version of Constant Light Output (CLO) has two check boxes. Select the **Enable** check box to use the device's built-in Constant Light Output profile. Select the **Reset** check box to reset this feature, including resetting the lamp operating hours parameters. This is useful when replacing the HID lamp.

### 12.3.15.2 LED version

The Constant Light Output feature for LED devices will show the following window:

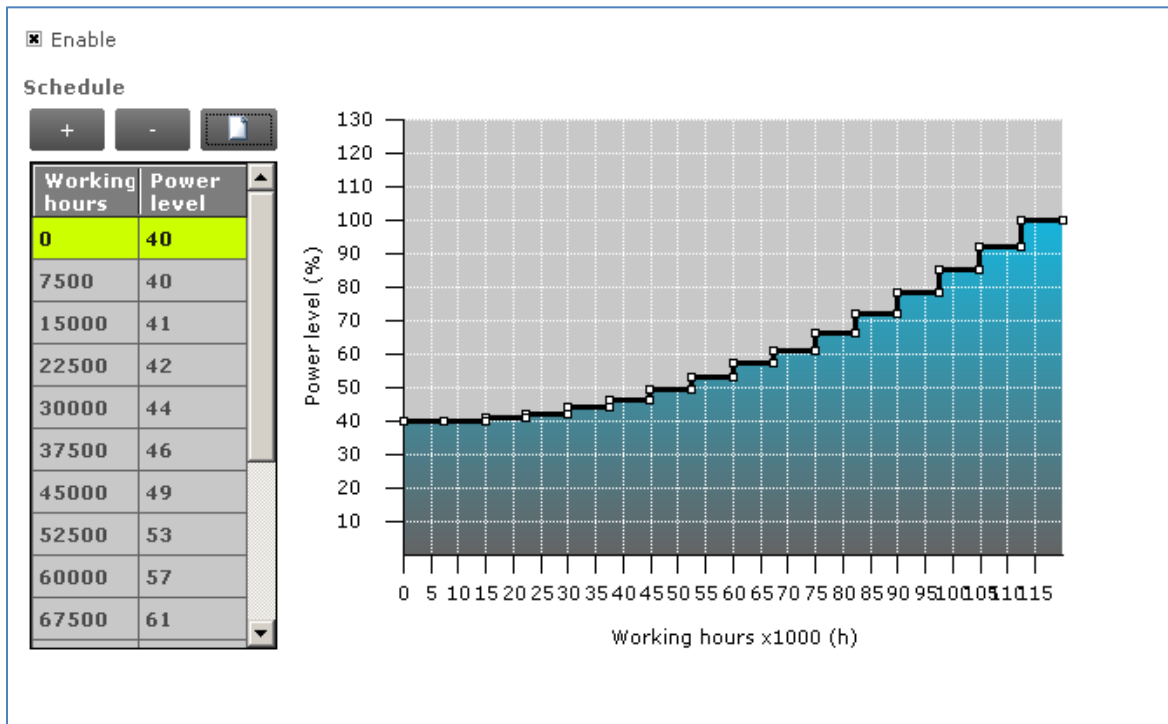

When a newer version of CLO is present in the device, the following window will be displayed:

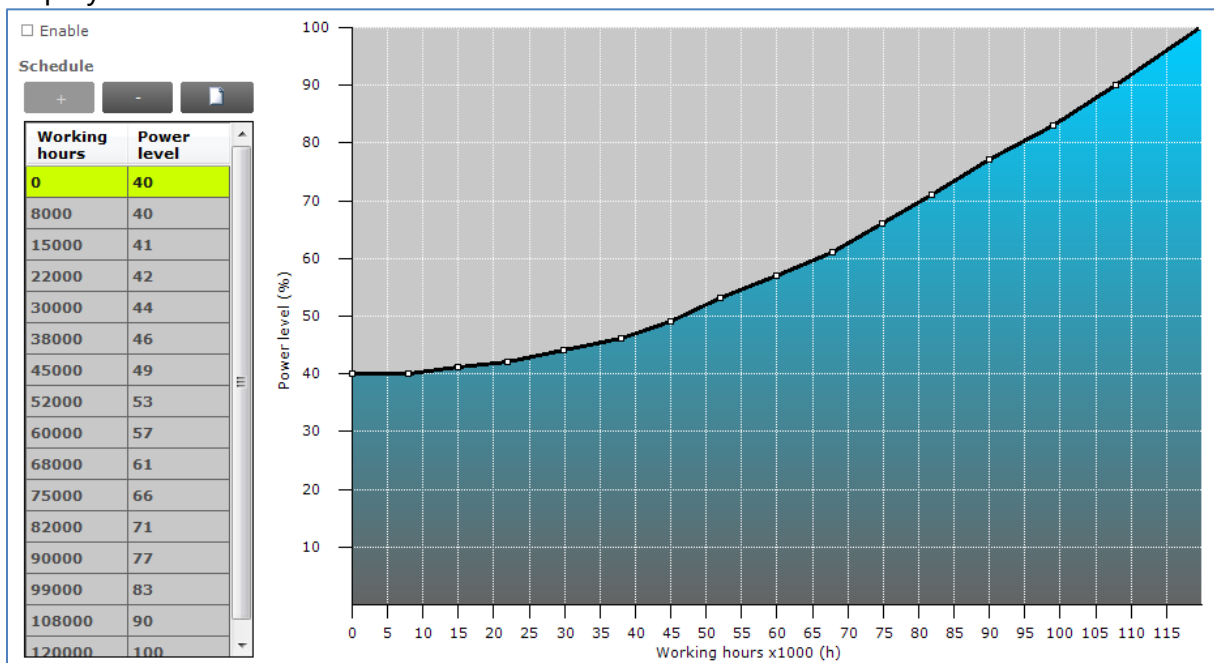


### Description

The lumen output of a LED module usually decreases over its lifetime. To compensate, a schedule can be created that gradually increases the lamp's power level over time.

## Usage

Select the **Enable** check box to use this feature. Click the **New** button to create a default schedule or click the **Plus** button to individually add scenes.

When creating a new schedule, in the dialog window that pops up you can either select an empty schedule, a default schedule or a custom schedule.

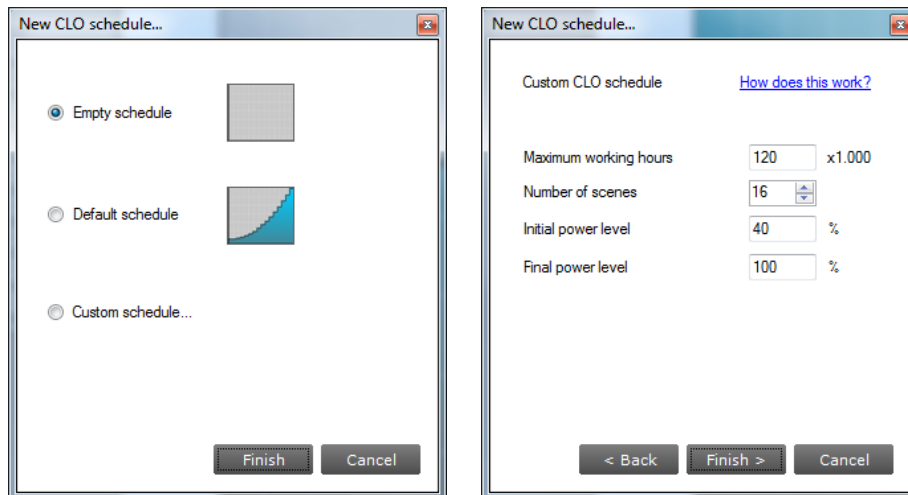

When selecting a custom schedule, you have to enter a number of parameters that will define the CLO schedule. These are:

- **Maximum working hours:** the largest number of working hours for which the CLO schedule is defined. This corresponds to the maximum value of the horizontal axis in the resulting CLO graph.
- **Number of scenes:** the number of scenes (bars in the graph, or in the newer version the points in the graph) into which the total number of burning hours is divided
- **Initial power level:** the power level that is the starting point at 0 burning hours
- **Final power level:** the power level at the end of the defined lifetime (the value given for maximum number of burning hours)

After clicking **Finish** a CLO schedule will be created using linear interpolation of the provided values.

Drag the points or the lines in the resulting graph to adjust the configuration. Alternatively, use the table to enter values directly. Single or multiple table rows can be removed by clicking the **Minus** button.

**Note!** The reliable use of Constant Light Output requires extensive LED specification assessment of life time behavior of LEDs.

### 12.3.15.3 LED version (simplified)

The simplified Constant Light Output feature will show the following window:

Enable  
Maximum working hours:  64000 h  
Initial power level:  80 %

#### Description

The lumen output of a LED module usually decreases over its lifetime. To compensate, a schedule can be created that gradually increases the lamp's power level over time. By configuring the **Maximum working hours** and the **Initial power level** a linear schedule is defined which consists of 16 scenes. The first scene starts at 0h and at the specified initial power level. The last scene starts at the specified working hours and at 100% power level.

#### Usage

Select the **Enable** check box to use this feature. Use the **Maximum working hours** slider to configure the moment in time where the LED module will use the final power level.

Use the **Initial power level** slider to configure at which power level the LED module will initially start.

**Note!** The reliable use of Constant Light Output requires extensive LED specification assessment of life time behavior of LEDs.

### 12.3.16 Constant Light Output Multi-Channel

#### Product group

LED

Enable

Number of Channels

Channel 1

▶ Working hours	0	1000	2000	3000	4000	5000	6000
Power level	100	100	100	100	100	100	100

## Description

Use the Constant Light Output Multi-Channel (CLOMC) feature to adjust the light output for each active channel.

## Usage

 
Select the **Enable** check box to enable this feature.

Select the **Number of Channels** box to define the number of channels that will be available to adjust the light output. Modify the values in the table to achieve the desired schedule.

### 12.3.17 Correlated Color Temperature

#### Product group

LED

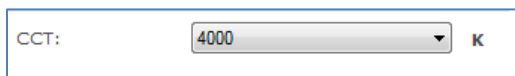

CCT: 4000 K

## Description

The CCT value is the actual **Correlated Color Temperature** value of a Luminaire device. In this way, the user can configure the requested light color of the Luminaire's LED module.

## Usage

Select the **CCT** value from the drop down box to change the Correlated Color Temperature. This value is represented in Kelvin.



## 12.3.18 Correlated Color Temperature Dual Channel

### Product group

#### LED

Min CCT value:  K

Max CCT value:  K

CCT value:  K

Warm efficacy:

Cold efficacy:

Total number of CCT curve entries:

CCT curve value [K]	Warm [%]	Cold [%]
2700	100	0
2800	70	30
2900	30	70
3000	0	100
3100	100	0
3200	100	0
3300	100	0
3400	100	0
3500	100	0
5000	100	0

### Description

Use the **Correlated Color Temperature Dual Channel** (CCTDC) to configure the light color of the Luminaire's LED module.

### Usage

Use the **Min CCT value** slider to select the minimum permitted of **CCT value** of the luminaire's LED module. This value is represented in Kelvin.

Use the **Max CCT value** slider to select the maximum permitted of **CCT value** of the luminaire's LED module. This value is represented in Kelvin.

Use the **CCT value** slider to select the **CCT value** based in **Min CCT** value and **Max CCT** value set. This value is represented in Kelvin.

Use the **Warm efficacy** slider to select a value. This is the number of LEDs that radiate warm light in the LED module.

Use the **Cold efficacy** slider to select a value. This is the number of LEDs that radiate cold light in the LED module.


Select the **Total number of CCT curve entries** to construct the CCT curve that will be available to adjust the LED color. The entries should be in the ascending order of the color temperature.

Each CCT curve entry will represent color temperature with warm percentage and cold percentage.

### 12.3.19 Corridor Mode

#### Product group

FLUO, LED

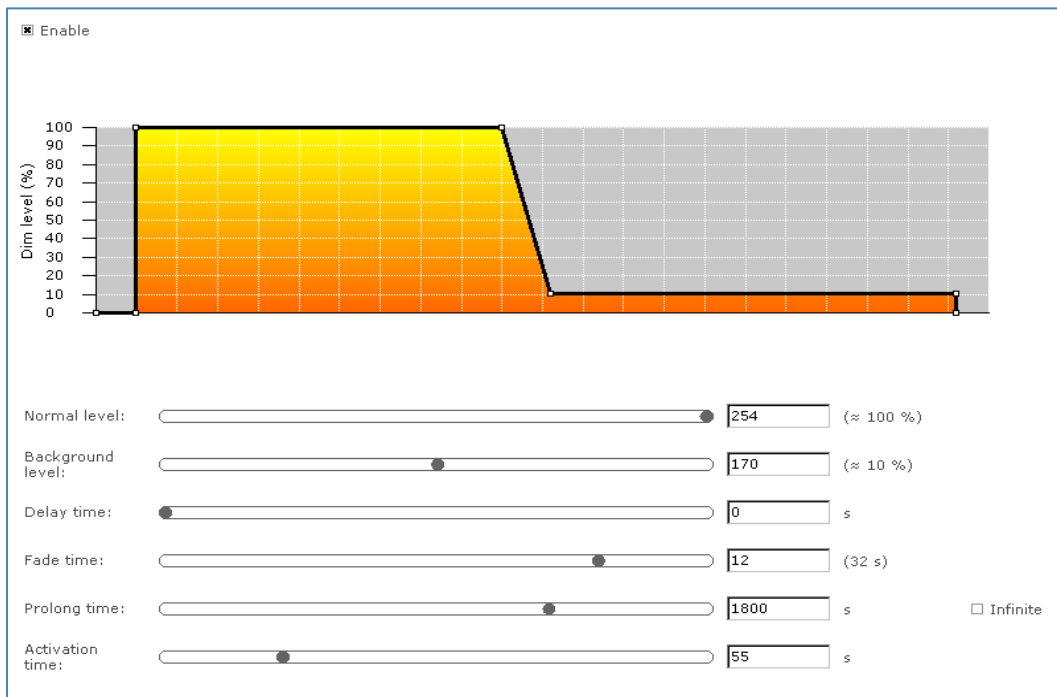

#### Description

Corridor Mode feature depends on Touch and Dim feature. The Corridor Mode feature adjusts the light to a defined level when a presence sensor detects a person. Corridor Mode can only be activated when the device is in Touch and Dim mode.

#### Usage

Select the **Enable** check box to use this feature. It is not possible to activate the driver via Touch and Dim, when this check box is not selected.

This feature has the following parameters:

- **Normal level:** Light level to be set when presence sensor detects activity
- **Background level:** Low light level to be set when no presence is detected after the fade time
- **Delay time:** The time from the moment the sensor has switched off and the moment the device will start to fade to background level
- **Fade time:** The time used to fade from normal level to background level
- **Prolong time:** When reaching background level, the time after which the device will be switched off

- **Activation time:** The time during which a mains signal must be detected, before the device will switch to Corridor Mode

Alternatively to using the sliders, some lines and points in the graph can be dragged to adjust the configuration.

### 12.3.20 DALI 102

#### Product group

#### LED

Power on level:	<input type="range" value="254"/>	254	(≈100 %)	<input type="checkbox"/> Do nothing			
System failure level:	<input type="range" value="255"/>	255	(≈100 %)	<input checked="" type="checkbox"/> Do nothing			
Min level:	<input type="range" value="84"/>	84	(≈1 %)				
Max level:	<input type="range" value="129"/>	129	(≈3 %)				
Fade rate:	<input type="text" value="7"/>						
Fade time:	<input type="text" value="1"/>						
Extended fade time based:	<input type="text" value="1"/>						
Extended fade time multiplier:	<input type="text" value="1"/>						
Operating mode:	<input type="text" value="128"/>			*Operating mode can either be 0 or between 128 and 255			
Short address:	<input type="text" value="62"/>			*Short address can either be 255 or between 0 and 63			
<b>Scenes</b>							
Scene 0:	<input type="text" value="255"/>	Scene 4:	<input type="text" value="255"/>	Scene 8:	<input type="text" value="255"/>	Scene 12:	<input type="text" value="255"/>
Scene 1:	<input type="text" value="255"/>	Scene 5:	<input type="text" value="255"/>	Scene 9:	<input type="text" value="255"/>	Scene 13:	<input type="text" value="255"/>
Scene 2:	<input type="text" value="255"/>	Scene 6:	<input type="text" value="255"/>	Scene 10:	<input type="text" value="255"/>	Scene 14:	<input type="text" value="255"/>
Scene 3:	<input type="text" value="255"/>	Scene 7:	<input type="text" value="255"/>	Scene 11:	<input type="text" value="255"/>	Scene 15:	<input type="text" value="255"/>
<b>Groups</b>							
<input type="checkbox"/> Group 0	<input type="checkbox"/> Group 4	<input type="checkbox"/> Group 8	<input type="checkbox"/> Group 12				
<input type="checkbox"/> Group 1	<input type="checkbox"/> Group 5	<input type="checkbox"/> Group 9	<input type="checkbox"/> Group 13				
<input type="checkbox"/> Group 2	<input type="checkbox"/> Group 6	<input checked="" type="checkbox"/> Group 10	<input type="checkbox"/> Group 14				
<input type="checkbox"/> Group 3	<input type="checkbox"/> Group 7	<input type="checkbox"/> Group 11	<input type="checkbox"/> Group 15				

#### Description

Use the DALI 102 feature to configure DALI settings via **Device features** tab instead of **Commands tab**.

#### Usage

This feature has the following parameters:

- **Power on level:** Light level applied when driver is powered and DALI supply is connected, when **do nothing** is selected, the driver will not act upon power on.
- **System failure level:** Light level applied when driver is powered and no DALI supply is connected, when **do nothing** is selected, the driver will not act upon system failure

- **Min level:** Minimum light level of the driver, this cannot be set lower than the physical minimum level of the driver and cannot be set higher than the **Max level**
- **Max level:** Maximum light level of the driver, this cannot be set lower than the **Min level**
- **Fade rate:** Number of fade steps
- **Fade time:** This is used to indicate how long it takes to perform fade
- **Extended fade time base:** Used to calculate extended fade time
- **Extended fade time multiplier:** Used to calculate extended fade time
- **Operating mode:** Operating mode of the driver
- **Short address:** Short address of the driver
- **Scenes:** A configurable preset level for the driver, a driver contains 16 scenes for which can be configured individually
- **Groups:** Defines in which groups the driver is located

### 12.3.21 DALI 202

#### Product group

LED

Emergency level:	<input type="range" value="254"/>	<input type="text" value="254"/>	(≈100 %)	<input type="checkbox"/> Do nothing
Prolong time:	<input type="range" value="0"/>	<input type="text" value="0"/>	min	
Function test interval:	<input type="range" value="7"/>	<input type="text" value="7"/>	days	
Duration test interval:	<input type="range" value="52"/>	<input type="text" value="52"/>	weeks	
Test execution timeout:	<input type="range" value="7"/>	<input type="text" value="7"/>	days	
Lamp emergency time:	0 hours			
Lamp total operation time:	0 hours			

#### Description

Use the DALI 202 feature to configure DALI settings via **Device features** tab instead of **Commands tab**.

#### Usage

This feature has the following parameters:

- **Emergency level:** Arc power level during emergency, when **do nothing** is selected, the driver will not act upon emergency level
- **Prolong time:** Duration of extended emergency mode
- **Function test interval:** Interval between function tests

- **Duration test interval:** Interval between duration tests
- **Test execution timeout:** Timeout for a pending function or duration test
- **Lamp emergency time:** Accumulated lamp on time while powered by battery
- **Lamp total operation time:** Accumulated lamp on time

### 12.3.22 DALI Power Supply

#### Product group

LED

 Enable

#### Description

Use the DALI Power Supply (DALI PSU) feature to enable the device so it will deliver the power supply for DALI communication by itself.

#### Usage

Select the **Enable** check box to use this feature.

### 12.3.23 Daylight override / Daylight switching

#### Product group

CONTROL

 Enable daylight dependent override  
 Enable daylight dependent switching

#### Description

Use the DLO/DLS feature to configure the daylight dependent settings for the device.

#### Usage

This feature has the following parameters:

- **Enable daylight dependent override:** When the **Enable daylight dependent override** check box is selected, the lights remain off in case occupancy is detected.
- **Enable daylight dependent switching:** Select the **Enable daylight dependent switching** check box to switch the light off in case sufficient daylight is available.

### 12.3.24 DC Emergency

#### Product group

FLUO, LED

Enable  
 Allow dimming  
 Emergency level:  

241

(≈ 70 %)

### Description

This feature is used together with a DC central battery system. The device will dim to a specific level, as soon as a DC voltage is detected at the mains input instead of an AC voltage on the mains input of the device. The dimming of the lamps can either be enabled or disabled during this DC Emergency operation.

### Usage

Select the **Enable** check box to use this feature. Use the slider or the text field to select a value. The value represents the arc power level when in DC Emergency mode (the label on the right gives the approximate light level percentage). Select the **Allow dimming** check box to allow dimming when in DC Emergency mode.

## 12.3.25 Device Info

### Product group

LED

Device model:	
Device label:	
Date/Order code:	
LED reference bin code:	
LED colour code:	
LED bin code:	

### Description

Use the Device Info feature to get or set the device information which may be luminaire specific.

### Usage

Select the Device Info feature tab to read or write the device information.

## 12.3.26 Dimming Interface

### Product group

## LED

Interface	<input type="text" value="DALI"/>	<b>Dimming curve</b>
		<input checked="" type="radio"/> Logarithmic
		<input type="radio"/> Linear

### Description

Use the Dimming Interface feature to select the dimming interface for the device. The actual options are depending on the device model:

- **1-10 V**
- **DALI**
- **Dynadimmer**
- **No dimming**
- **AmpDim**
- **LineSwitch**
- **Coded Mains**

When **DALI** has been selected, an additional setting appears with which the dimming behavior can be set. Options are **Logarithmic** and **Linear** dimming curves.

### Usage

Use Dimming Interface to select the desired dimming interface.

### Product group

FLUO, LED

Interface	<input type="text" value="Automatic selection"/>
-----------	--

### Description

Use the Dimming Interface feature to select the dimming interface for the device.

### Usage

The available dimming interfaces are stored in the device and therefore need to be read out. When the interfaces are found it will be possible to select **Automatic selection** (enable all interfaces), **No dimming** (disable all interfaces) or a **single** interface.

### Product group

LED

Interface	<input type="text" value="Dynadimmer"/>	Can be overridden by
		<input type="checkbox"/> 1-10V
		<input type="checkbox"/> LineSwitch

## Description

Use the Dimming Interface feature to enable dimming interfaces for the device.

## Usage

The available dimming interfaces are stored in the device and therefore need to be read out. When the interfaces are found it will be possible to select and enable the main interface. Some interfaces have the possibility to be overridden by another interface. If that's the case the **Can be overridden by** part will show the other possible interfaces that can be enabled together with the main dimming interface.

**Note!** Once a **Can be overridden by** interface was selected, the main selected dimming interface still needs its **override** option to be set accordingly. This can be done by going to the specific interface feature and **enable** the **override** option there.

### 12.3.27 Driver addressing

#### Product group

LED

DMX address:	<input type="text" value="1"/>
<input checked="" type="checkbox"/> Enable	
Group size:	<input type="text" value="2"/>
Group address:	<input type="text" value="1"/>

## Description

Use the Driver addressing feature to determine the DMX settings for the device.

## Usage

- **DMX address:** DMX address
- **Enable:** When the check box is cleared the grouping feature within one DMX address is not used.
- **Group size:** Number of devices that operate within one group, all responding to the same DMX address.
- **Group address:** Device number within the group of devices that respond to the same address.



## 12.3.28 Driver Temperature Limit

### Product group

LED

Enable  
Start dim:  25 °C  
Stop dim:  75 °C  
Shut Down:  95 °C  Disabled  
Dim level:  5 %

### Description

Use the Driver Temperature Limit feature to determine the temperature protection settings for the device.

### Usage

Select the **Enable** check box to use this feature. Use the sliders to changes the values for this feature.

- **Enable:** Select the **Enable** check box to use this feature.
- **Start dim:** Set the temperature at which dimming start.
- **Stop dim:** Set the temperature at which the dimming stops.
- **Shut down:** Set the temperature at which the dim level will be set to zero. When selecting the N/A checkbox, the shutdown temperature is not applied
- **Dim level:** Set the dim level for the Stop dim temperature.

## 12.3.29 Dwell Time

### Product group

CONTROL

<input type="checkbox"/> Activated
<input checked="" type="checkbox"/> Enabled

### Description

Use the Dwell Time feature to postpone present detection for a certain time.

### Usage


This feature has the following parameters:

- **Activated:** Select the **Activated** check box to activate the feature.
- **Enabled:** Select the **Enabled** check box to turn Dwell Time on.

### 12.3.30 Dynadimmer

#### Product group

HID, LED

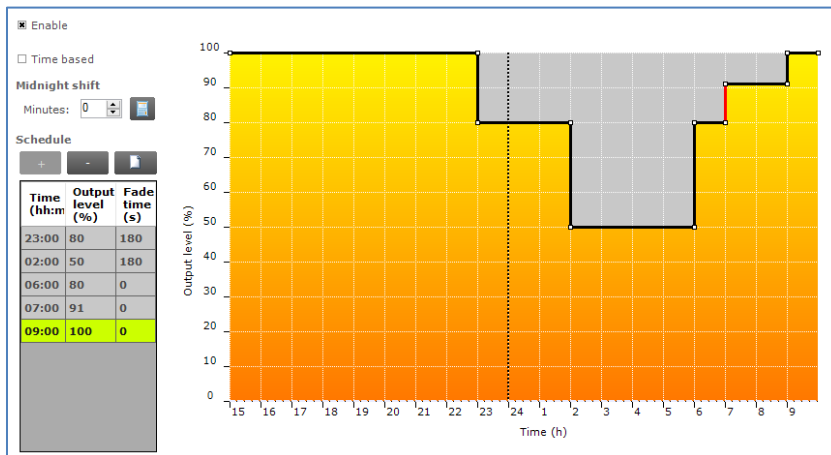

#### Description

Use Dynadimmer to create a dynamic dimming schedule over a period of time.

#### Usage

Select the **Enable\*** check box to use this feature. This feature has a number of options, depending on the device model:

- **Time based:** switch between absolute and relative time schedules. When the **Time based** check box is cleared, the Dynadimmer schedule will use its automatically learned midnight point as a reference for timekeeping. When the **Time based** check box is selected, the reference point is the moment when the mains are switched on. Selecting the **Time based** check box changes the graph and removes its dotted midnight line. Note that not all devices support Time based Dynadimmer.
- **Midnight shift:** the midnight point depends on the geographical location. Enter the midnight shift in minutes or use the midnight shift calculation window to automatically adjust the midnight point by the specified offset. Use the calculation button to either manually provide latitude and longitude coordinates or to choose a predefined location. The midnight shift option is unavailable when the **Time based** check box has been selected.

The midnight shift calculation dialog window looks as follows:

- **Latitude:** the latitude of the location in degrees, minutes and seconds. The value that represents the degrees cannot be negative.
- **N-S:** the direction for latitude of the location. The user can either select North or South value.
- **Longitude:** the longitude of the location in degrees, minutes and seconds. The value that represents the degrees cannot be negative.
- **E-W:** the direction for longitude of the location. The user can either select East or West value.
- **Time zone:** the time zone of the location. For GMT+1 enter 1, for GMT-1 enter -1, and so on.
- **Daylight saving:** indication whether daylight saving should be dealt with or not.

Click **OK** to save result of your calculation as the new midnight shift. Note that clicking **OK** is not directly saving your data to the driver. To save midnight shift to a driver you will have to write the whole feature.

Click the **New** button to create a default schedule or click the **Plus** button to add scenes individually. Drag the points or the lines in the graph to create the desired configuration. Alternatively, use the table to enter values directly. Remove single or multiple table rows by clicking the **Minus** button.

**Note!** The device will follow the dimming schedule. When the output level in the dimming schedule is below the physical min level of the selected lamp, the physical min level will be used. However, some devices are also capable to switch off during the dimming schedule, if a scene was configured at 0 %. The physical min level of the selected lamp is indicated by the gray-dotted line in the graph.

**Note!** This feature can contain the **override** check box in some cases. If the check box is selected, that means the dim level can be overridden by other dimming interfaces.

\* **Note!** If the device supports interface selection then this feature can only be enabled through the interface selection and the enable will not be shown here.

### 12.3.30.1 *Physical min level*

In order to see the correct physical min level of a lamp after Lamp Selection do not forget to switch the driver off for a few seconds. After switching it on again the selected lamp is activated. To see the physical min level of the selected lamp in the graph, click **Read** on the toolbar.

### 12.3.30.2 *Location or custom location*

For some device models, only the midnight point offset is stored in the device and **NOT** the (custom) location. In those cases the location information and the custom location is only used to calculate the midnight point offset. After reading out the device, MultiOne tries to match the midnight point offset with a location. In case the midnight point offset does not match to a location or the midnight point offset matches multiple locations, MultiOne will show "No location".

For a technical description of the characteristics of the device model, like constraints and limitations, please refer to [Device-specific technical description](#).

## 12.3.31 **End Of Life indication**

### **Product group**

LED



The image shows a user interface for the 'End Of Life indication' feature. It includes a checked checkbox labeled 'Enable'. Below the checkbox is a horizontal slider with a circular knob on the left. To the right of the slider is a text input field containing the number '0', followed by a small 'h' representing hours.

### **Description**

Use this feature to warn the user at the end of the guaranteed lifespan of the LED module. Once the end of guaranteed life is reached, the device will flash the lamp for 5 seconds and then continue normal operation. LED flashing will happen every time at startup once the device's working hours have exceeded the number of hours specified as End Of Life. This feature uses the same burning hours counter as the Light Source Operating Hours and Constant Light Output features.


### **Usage**

Select the **Enable** check box to use this feature. Use the slider or the text field to select a value. The value represents the guaranteed lifetime in hours.

### 12.3.32 FCC

#### Product group

CONTROL

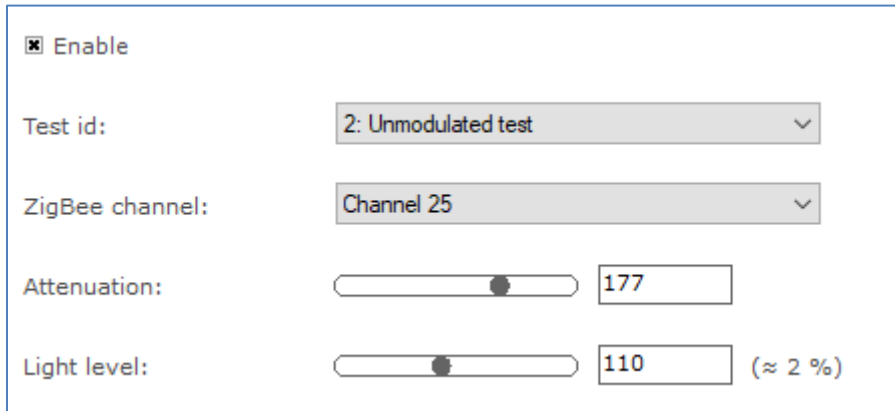

The screenshot shows a configuration panel for the FCC test. It includes a checked 'Enable' checkbox, a 'Test id' dropdown menu set to '2: Unmodulated test', a 'ZigBee channel' dropdown menu set to 'Channel 25', an 'Attenuation' slider and text field set to '177', and a 'Light level' slider and text field set to '110' with a note '(≈ 2 %)'.

#### Description

Use this feature to enter the settings for the FCC test, and to enable the FCC test.

#### Usage

Select the **Enable** check box to use this feature. The feature has the following parameters:

- **Test id:** use the drop down box to select the test.
- **ZigBee channel:** use the drop down box to select the ZigBee channel for the test.
- **Attenuation:** use the slider or the text field to select a value. The value represents the attenuation for the test.
- **Light level:** use the slider or the text field to select a value. The value represents the light level for the test.

### 12.3.33 Field Task Tuning

#### Product group

CONTROL



The screenshot shows a slider control for Field Task Tuning, with a text field next to it displaying the value '37' and a '%' symbol.

#### Description

Use this feature in combination with the **EasySense** so the light output can be limited according to the selected value.

#### Usage


The field task tuning level is intended as maximum light level (clip level) of the luminaire. The light output shall not be scaled against the field task tuning level.

If this level is below 100%, not the whole DALI range will be used. This is acceptable, since when a lot of daylight is present also a small part of the range is used.

### 12.3.34 Field Task Tuning / Occupancy Sensing / Daylight Harvesting

#### Product group

#### CONTROL

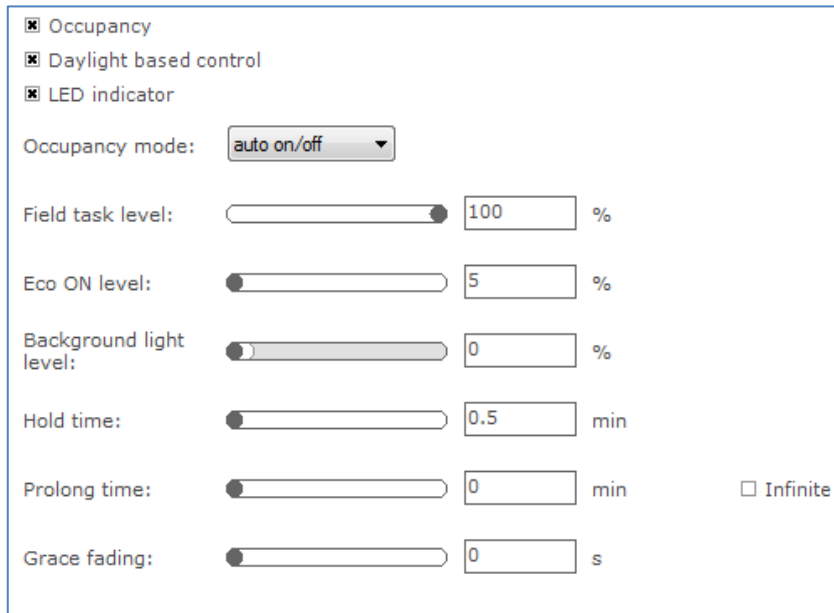

Occupancy  
 Daylight based control  
 LED indicator

Occupancy mode: auto on/off ▼

Field task level:  100 %

Eco ON level:  5 %

Background light level:  0 %

Hold time:  0.5 min

Prolong time:  0 min  Infinite

Grace fading:  0 s

#### Description

This is a combined feature of [Field Task Tuning](#) and [Occupancy Sensing/ Daylight Harvesting](#), use this feature to ensure the correct functioning of the **EasySense**.

#### Usage

The **Field task level**, **Background light level** and **ECO ON level** are related to each other. The **Background light level** is the light level at which the lights will glow when no occupancy is detected, and it should be lower or equal to the **Eco ON level**. The **Eco ON level** should be lower or equal to the **Field task level** and it can be overruled with a switch. The **Field task level** is intended as maximum light level (clip level) of the luminaire.

For the usage of all the other parameters, please refer to [Occupancy Sensing/ Daylight Harvesting](#) feature.

### 12.3.35 Lamp Burn-in

#### Product group

FLUO

Enable

Burn-in level :  Use default

250 [≈ 90 %]

Burn-in time:  Use default

6000 min

#### Description

Lamp Burn-in prevents dimming below a predefined level in the first hours of a lamp's life. This is to ensure that the lamp will be properly "burned in" before dimming.

#### Usage

Select the **Enable** check box to use this feature. This feature has of two parameters:

- **Burn-in level:** use the slider or the text field to select a value. The value represents the maximum arc power level for dimming (the label on the right gives the approximate light level in percent). Alternatively, select the **Use default** check box to use the default value.
- **Burn-in time:** use the slider or the text field to select a value. The value represents the time in minutes during which the burn-in level is active. Alternatively, select the **Use default** check box to use the default value.

### 12.3.36 Lamp Selection

#### Product group

HID, FLUO

Selection HID Cosmopolis 45W

#### Description

Use the Lamp Selection feature to select the lamp type that is connected to the device. Options depend on the device model.

#### Usage

Use **Selection** to select the lamp type. Note that this feature has to be read first in order for the options to become available. To read the feature configuration, click **Read** on the toolbar.



**Note!** After selecting a different lamp, it is necessary to switch the driver off for a few seconds. After switching is on again the selected lamp is activated.

### 12.3.37 Light Source Operating Hours

#### Product group

LED



A horizontal slider control with a black dot at the far left. To the right of the slider is a text input field containing the number '0' and a unit 'h'.

#### Description

Use this feature to manually set or reset the number of operating hours for the LED module. This is useful when replacing the LED module, thereby resetting features like Constant Light Output and End Of Life indication.


#### Usage

Use the slider or the text field to select a value. The value represents the number of operating hours.

### 12.3.38 LineSwitch

#### Product group

HID, LED

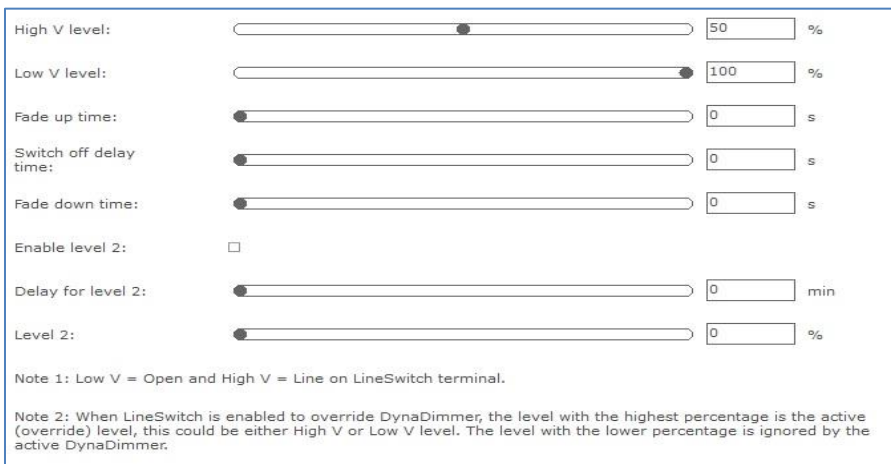

A control interface for LineSwitch with the following elements:

- High V level: slider at 50%, text input '50' %
- Low V level: slider at 100%, text input '100' %
- Fade up time: slider at 0, text input '0' s
- Switch off delay time: slider at 0, text input '0' s
- Fade down time: slider at 0, text input '0' s
- Enable level 2: checkbox (unchecked)
- Delay for level 2: slider at 0, text input '0' min
- Level 2: slider at 0, text input '0' %

Note 1: Low V = Open and High V = Line on LineSwitch terminal.

Note 2: When LineSwitch is enabled to override DynaDimmer, the level with the highest percentage is the active (override) level, this could be either High V or Low V level. The level with the lower percentage is ignored by the active DynaDimmer.

#### Description

This feature provides an interface for easy dimming via pilot-line or external sensor (presence) of a group of lamps. Dimming to desired level can be controlled by applying a 230V between the DALI inputs. The fade times can also be set using the fade on-, fade off and switch off delay time.

## Usage

Select the **Enable\*** check box to use this feature. This feature has the following parameters:

- **High V level:** Use the slider or the text field to select a value. The value represents the light level to be set when high voltage is detected on the mains.
- **Low V level:** Use the slider or the text field to select a value. The value represents light level to be set when low voltage is detected on the mains.
- **Fade up time:** Use the slider or the text field to select a value. The value represents the fade on time to be used.
- **Switch off delay time:** Use the slider or the text field to select a value. The value represents the switch off delay time to be used.
- **Fade down time:** Use the slider or the text field to select a value. The value represents the fade off time to be used.

In case the device supports Level 2 settings, these will be visible on the UI. Select the **Enabled Level 2\*\*** check box to use the second dim level function. This option has the following parameters:

- **Delay for Level 2:** Use the slider or the text field to select a value. The value represents the delay time to be used in activation of the second dim level.
- **Level 2:** Use the slider or the text field to select a value. The value represents the light level to be set when the second dim level is active.

When the [Switch Off delay time] is programmed in combination with the second level, the dim level during the switch off delay is the active level (depending on the polarity this is [High V level] or [Low V level]). The [Delay for Level 2] will start after the [Switch Off delay time] has expired.


\* **Note!** If the device supports interface selection then this feature can only be enabled through the interface selection and the enable will not be shown here.

\*\* **Note!** When the LineSwitch function is disabled, the enabled second level function is implicitly also not effective. The second level uses the same fade up and fade down times as the High V and Low V levels.

### 12.3.39 Load Fault Indicator Thresholds

#### Product group

CONTROL

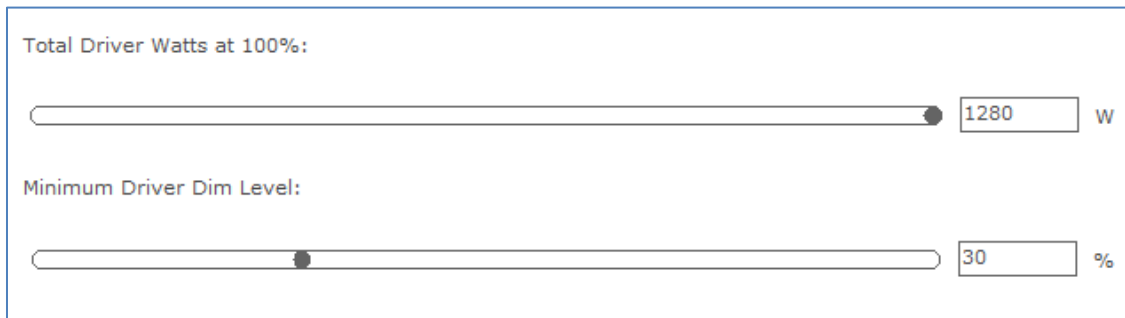

Total Driver Watts at 100%:

1280 W

Minimum Driver Dim Level:

30 %

#### Description

To allow the SR Bridge to set the DALI lamp failure detection properly, the SR Bridge must be configurable to set a power limit that corresponds to the lamp failure level. This involves setting the correct maximum power of all downstream drivers combined and the minimum detection dimlevel for which the SR Bridge will not update the lamp failure status.

#### Usage

This feature has the following parameters:

- **Total Driver Watts at 100%:** Use the slider or the text field to select a value. This value corresponds to the maximum power of all downstream drivers combined.
- **Minimum Driver Dim Level:** Use the slider or text field to select a value. This value corresponds to the minimum detection dimlevel for which the SR Bridge will not update the lamp failure status.

### 12.3.40 Logical Signal Input

#### Product group

LED

Enabled

Mode: Occupancy sensor

Active dim level: 
90.55
%

Inactive dim level: 
50
%

Polarity:   
 Active when LSI input is Low  
 Active when LSI input is High

Fade on time: 
10
s

Hold off delay: 
16220
s

Fade off time: 
40
s

Switch off delay: 
40000
s

Enable output off

## Description

Use this feature to configure an additional input signal that can be used to connect sensors (e.g. occupancy or photo sensors) to a driver without the need for a sophisticated OLC.

## Usage


Select the **Enable** check box to use this feature. This feature has the following parameters:

- **Mode:** Use the drop down box to select the sensor connected to the logical signal input.
- **Active dim level:** Use the slider or the text field to select a value. The specified value represents the active dim level in percent. The active dim level is the dim level which will be used when the input voltage level is equal to the selected polarity, i.e. the input signal is active.
- **Inactive dim level:** Use the slider or the text field to select a value. The specified value represents the inactive dim level in percent. The inactive dim level is the dim level which will be used when the input voltage level is opposite to the selected polarity, i.e. the input signal is inactive.
- **Polarity:** Use the radio buttons to select the polarity of the input voltage on which LSI should be active.
- **Fade on time:** Use the slider or the text field to select a value. The specified value represents the fade on time in seconds. The fade on time is the time used to softly fade from the inactive dim level to the active dim level from the moment the LSI state becomes active.
- **Hold off delay:** Use the slider or the text field to select a value. The specified value represents the hold off delay in seconds. The hold off

delay is the applied delay when LSI switches from active to inactive before the fade off starts.

- **Fade off time:** Use the slider or the text field to select a value. The specified value represents the fade off time in seconds. The fade off time is the time used to softly fade from the active dim level to the inactive dim level from the moment the LSI state becomes inactive and the hold off delay has passed.
- **Switch off delay:** Use the slider or the text field to select a value. The specified value represents the switch off delay in seconds. The switch off delay is the applied delay when the fade off time is expired and Enable output off is enabled.
- **Enable output off:** Use the check box to enable or disable switching the output.

The schematic below gives a visual representation of the usage of the different parameters.

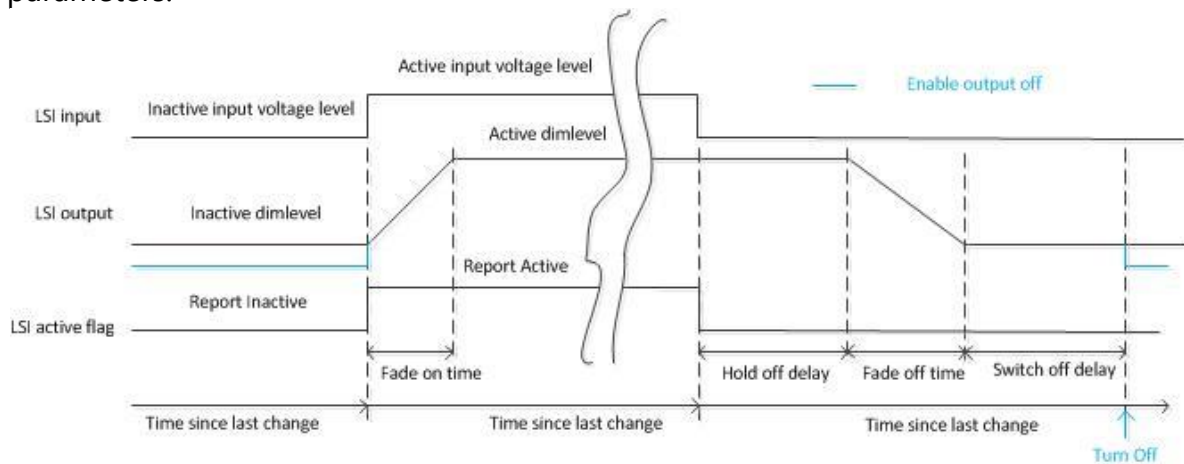

### 12.3.41 Lumen Level

#### Product group

LED

Luminaire efficiency correction enabled

Light output ratio (LOR):  100 %

Lumen output:  500 lm

#### Description

This feature provides an interface for setting the lumen output value of a device.

#### Usage

Select the **Luminaire efficiency correction enabled** check box to use the **Light output ratio (LOR)** slider. This slider is used to configure the range and step size of the **Lumen output** slider.

The Light output ratio percentage will change the Lumen output slider min range, max range, current value and step size by the same percentage.

### 12.3.42 Luminaire (Fixture) Information

#### Product group

LED

Content format ID:	<input type="text" value="Unformatted content"/>	<input type="checkbox"/>
GTIN (EAN13):	<input type="text" value="9999999999999"/>	
Identification number:	<input type="text" value="18446744073709551615"/>	<input type="checkbox"/> Use device UID
Additional info (101):	<input type="text" value="Some extra information"/>	

#### Description

Luminaire (Fixture) Information contains three mandatory fields: the **Content format ID** to select the content format, the **GTIN** and the **Identification number** of the luminaire which are used as traceability information for OEMs.

Depending on the selected **Content format ID**, additional fields are available for storing more detailed information. For example, when selecting 'Unformatted content' as **Content format ID**, the **Additional info** field can be used for additional control gear information.

#### Usage

- **Content format ID:** Select the format in which to store the information. Additional fields to fill are shown on the UI (or in some cases only their maximum allowed length change) when changing the **Content format ID**.
- **GTIN:** Use the textbox to change the value. The **GTIN** always contains 13 digits: if the value given by the user is less than 13 digits, leading 0s will be added till the number reach 13 digits.
- **Identification number:** Use the textbox to change the value. The **Identification number** can have up till 15 digits, however, the value given by the user shall not exceed the value shown above in the picture.
- Select **Use device UID** checkbox to enable copy identification number at power-on. If the checkbox is enabled, the field **Identification number** is not editable.


Additional fields are available for storing more detailed information.

**Note!** If the field **Use device UID** is changed, the user will need restart the device.

### 12.3.43 Luminaire Production Test

#### Product group

CONTROL

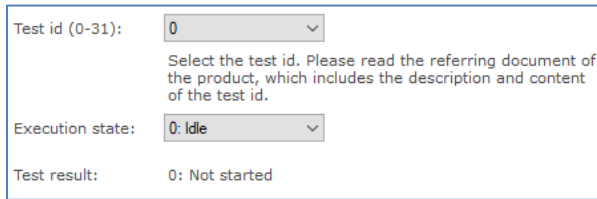

The screenshot shows a control interface for the Luminaire Production Test. It contains three main sections: a dropdown menu for 'Test id (0-31)' with the value '0' selected, a text instruction 'Select the test id. Please read the referring document of the product, which includes the description and content of the test id.', another dropdown menu for 'Execution state' with '0: Idle' selected, and a 'Test result' field showing '0: Not started'.

#### Description

This feature provides an interface to execute specific tests and validate the result.


#### Usage

- **Test id (0-31):** Use the drop down box to select the test id to be executed.
- **Execution state:** Use the drop down box to select the execution state.
  - **Idle:** No test to execute.
  - **Start:** Execute test at power up or when new test is selected
- **Test result:** Result of the test.
  - **Not started:** No test executed.
  - **Passed:** Test executed successfully, test not started at power up.
  - **Failed:** Test failed and will be started again at next power up.
  - **Unknown test id:** Test not implemented, not started at next power up.

### 12.3.44 LumiStep

#### Product group

LED

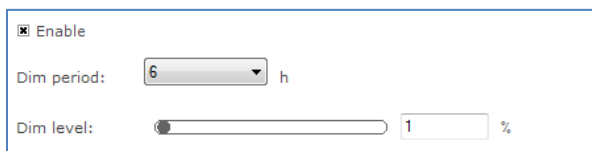

The screenshot shows the LumiStep control interface. It features a checked 'Enable' checkbox, a 'Dim period' dropdown menu set to '6' with an 'h' unit indicator, and a 'Dim level' control consisting of a slider and a text input field set to '1' with a '%' symbol.

#### Description

This feature provides a simplified version of Dynadimmer.

#### Usage

Select the **Enable\*** check box to use this feature. This feature has the following parameters:

- **Dim period:** Use the drop down box to select the wanted dim period. This is the time period the dim level will be used.

- **Dim level:** Use the slider or the text field to select a value. The value represents the dim level in percent. The dim level will be used during the dim period.

\* **Note!** If the device supports interface selection then this feature can only be enabled through the interface selection and the enable will not be shown here.

### 12.3.45 Min Dim Level

#### Product group

LED



The image shows a user interface for setting the minimum dim level. It consists of a blue-bordered box containing the following elements: a checked checkbox labeled 'Enable', a horizontal slider with a dark grey knob positioned at the far left, and a text input field containing the number '1' followed by a percent sign (%).

#### Description

This feature provides an interface for setting the min dim level of a device.

#### Usage

Select the **Enable** check box to use this feature. Use the slider or the text field to select a value. The value represents the min dim level in percentage.



## 12.3.46 Motor Control

### Product group

#### CONTROL

The screenshot displays a configuration interface for motor control, organized into three sections: Enable Tilt, Enable Pan, and Enable Zoom. Each section contains a checked checkbox and several adjustable parameters:

- Enable Tilt:**
  - Minimum tilt range: Slider and text field set to -90 °
  - Maximum tilt range: Slider and text field set to 90 °
  - Tilt full range steps: Slider and text field set to 3580 steps
  - Minimum tilt speed: Dropdown menu set to 0.5 °/s
  - Maximum tilt speed: Dropdown menu set to 100 °/s
  - Current tilt speed: Dropdown menu set to 25 °/s
- Enable Pan:**
  - Minimum pan range: Slider and text field set to -180 °
  - Maximum pan range: Slider and text field set to 180 °
  - Pan full range steps: Slider and text field set to 3000 steps
  - Minimum pan speed: Dropdown menu set to 0.5 °/s
  - Maximum pan speed: Dropdown menu set to 100 °/s
  - Current pan speed: Dropdown menu set to 25 °/s
- Enable Zoom:**
  - Minimum zoom range: Slider and text field set to -180 °
  - Maximum zoom range: Slider and text field set to 180 °
  - Zoom full range steps: Slider and text field set to 3000 steps
  - Minimum zoom speed: Dropdown menu set to 0.5 °/s
  - Maximum zoom speed: Dropdown menu set to 100 °/s
  - Current zoom speed: Dropdown menu set to 25 °/s

### Description

This feature provides an interface for setting the motor control for tilt, pan and zoom functions of a device.

### Usage

For each functions it is possible to configure the following parameters:


- Select the **Enable Tilt/Pan/Zoom** check box to use tilt/pan/zoom functionality.
- **Minimum tilt/pan/zoom range:** Use the slider or the text fields to select a value. The specified value represents the minimum range for tilt/pan/zoom function in degrees.
- **Maximum tilt/pan/zoom range:** Use the slider or the text fields to select a value. The specified value represents the maximum range for tilt/pan/zoom function in degrees.

- **Tilt/Pan/Zoom full range steps:** Use the slider or the text fields to select a value. The specified value represents the full range steps for tilt/pan/zoom function in number of steps.
- **Minimum tilt/pan/zoom speed:** Use the drop down box to select the minimum speed for tilt/pan/zoom function.
- **Maximum tilt/pan/zoom speed:** Use the drop down box to select the maximum speed for tilt/pan/zoom function.
- **Current tilt/pan/zoom speed:** Use the drop down box to select the current speed for tilt/pan/zoom function.

### 12.3.47 Module Temperature Protection

#### Product group

LED

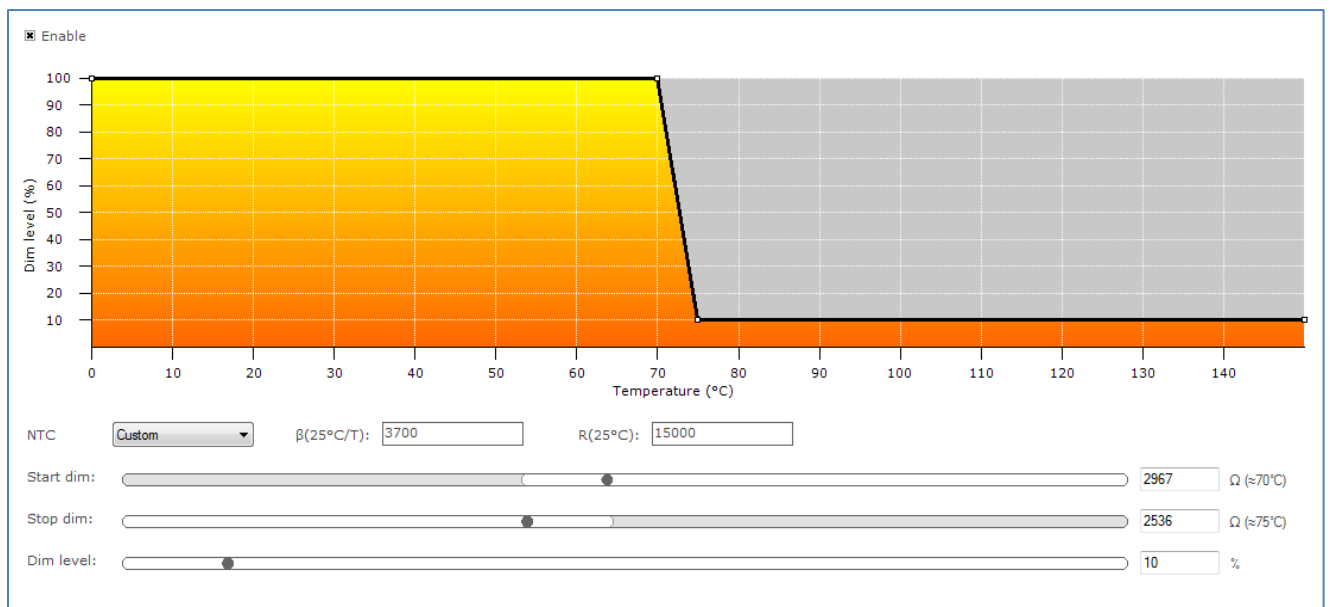

#### Description

Use this feature to regulate lamp power when the LED module gets too hot. At a certain temperature the lamp starts to dim in order to control temperature. At a critical temperature level the lamp will switch off completely.

#### Usage


Select the **Enable** check box to use this feature. Drag the points or the lines in the resulting graph to adjust the configuration. Alternatively, use the sliders to change values directly. Based on the device model, the feature is shown in either temperature (degrees Celsius) or resistance values (in Ohm).

**Note!** For a detailed technical description of the characteristics of the device model, like constraints and limitations, please refer to [Device-specific technical description](#).

## 12.3.48 NTC on LEDset

### Product group

LED

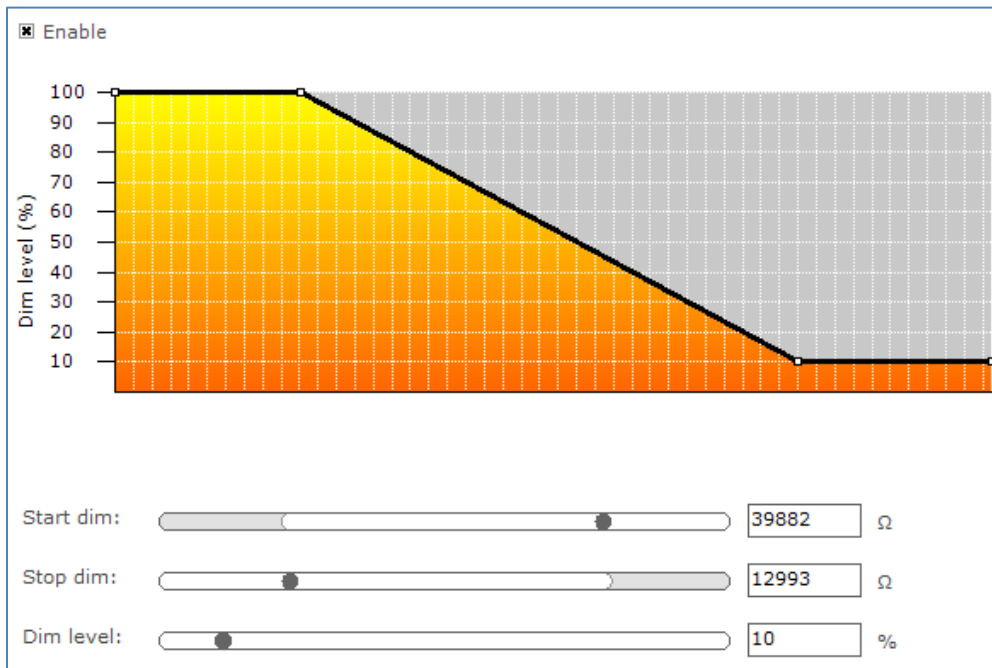

### Description

Use this feature to regulate lamp power when the LED module gets too hot. At a certain temperature the lamp starts to dim in order to control temperature. Configure the resistance values to determine the dimming behavior.

### Usage

Select the **Enable** check box to use this feature. Drag the points or the lines in the resulting graph to adjust the configuration. Alternatively, use the sliders to change values directly.

**Note!** For a detailed technical description of the characteristics of the device model, like constraints and limitations, please refer to [Device-specific technical description](#).

## 12.3.49 Occupancy Sensing / Daylight Harvesting

### Product group

#### CONTROL

Hold time:  15 min

Prolong time:  0 min  Infinite

Background light level:  20 %

Grace fading:  0 s

Occupancy

Daylight based control

LED indicator

Occupancy mode:

Eco ON level:  5 %

### Description

Use this feature in combination with the **EasySense** to setup an occupancy sensing and/or a daylight harvesting mode. The occupancy sensing mode configures how light is being controlled, based on occupancy information. The daylight harvesting mode configures how light is being controlled, based on the amount of light in an indoor space (contribution of natural light entering the indoor space).

### Usage

The **Hold time** is the time whereby occupancy is no longer detected but the lights are still on and being regulated. The **Prolong time** is the time at which the background level is maintained at a fixed level. **Background light level** is the light level at which the lights will glow when no occupancy is detected and **Grace fading** is the time during which the lights are being dimmed down from the current light level to the background level.

The **Occupancy** check box enables/disables the occupancy sensing mode. The **Daylight based control** check box enables/disables the daylight harvesting mode. When the **LED indicator** is enabled, the 2 LED indicators on the sensor will become active. The yellow LED indicates whether the sensor is functional. The red LED indicates whether occupancy is detected when the hold time is not expired yet.


The **Occupancy mode** defines how the lights of the system will behave.

The **Eco ON level** is used relative to the **Field task tuning level**. Only difference is that the Eco ON level can be overruled with a switch. This can result in additional energy savings.

### 12.3.50 Occupancy sharing / Group light behavior

#### Product group

CONTROL

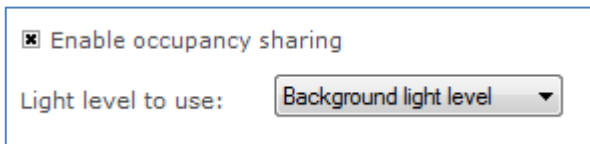

Enable occupancy sharing

Light level to use: Background light level

#### Description

Use the OS/GLB feature to configure advanced grouping settings for the device.

#### Usage

This feature has the following parameters:

- **Enable occupancy sharing:** When the **Enable occupancy sharing** check box is selected, the group occupancy sharing is enabled.
- **Light level to use:** Select the **Background light level** or **Task light level** to indicate the desired light behavior when group is occupied and group occupancy sharing is enabled.

### 12.3.51 OEM Write Protection

#### Product group

LED




OEM Write Protection	
Summary	<b>OEM Write Protected features</b>
DALI PSU	<input type="checkbox"/> (De)select all
ALO	<input type="checkbox"/> DALI PSU
AOC	<input type="checkbox"/> ALO
OWP	<input checked="" type="checkbox"/> ALO Min
ECO FactoryLink	<input checked="" type="checkbox"/> AOC
<b>Set the OEM Write Protection password</b>	
New password:	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
Verify password:	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
The password must contain 4 numbers (0-255).	

#### Description

OEM Write Protection (OWP) defines a password that will be set in the driver so the data of OEM Write-protected features can only be written to the driver by providing the configured password.

#### Usage

When one or more of the **OEM Write Protected features** check boxes are selected, a password needs to be entered. This password must contain 4 numbers between 0 and 255. Passwords containing 0-0-0-0 and 255-255-255-255 are not allowed. The password needs to be verified before it can be stored in the driver. Once a password

is configured into the device, it is necessary to provide the current password when writing other features that are OEM Write-protected. These features are indicated by a padlock icon  in the **Write** screen.

When the OWP feature is read, only the values of the feature check boxes are shown on-screen, so it is not possible to retrieve the currently configured password.

### 12.3.52 Push Button Unit LCU2070

#### Product group

CONTROL/ActiLume DALI

Red:	<input type="text" value="All groups"/>
Purple:	<input type="text" value="Group 1"/>
Green:	<input type="text" value="Group 3"/>
Yellow:	<input type="text" value="Group 5"/>

#### Description

The push button unit can be used to trigger one or all groups when a button is pressed. In total there are four different buttons that can be configured.

#### Usage

Use the drop down boxes to select the group(s) that should be triggered when the corresponding button is pressed.

### 12.3.53 Push Button Unit LCU2071

#### Product group

CONTROL/ActiLume DALI

Red:	<input type="text" value="Scene 1"/>
Purple:	<input type="text" value="Scene 6"/>
Green:	<input type="text" value="Scene 11"/>
Yellow:	<input type="text" value="Scene 16"/>

#### Description

The push button unit can be used to trigger a scene when a button is pressed. In total there are four different buttons that can be configured.

### Usage

Use the drop down boxes to select the scene that should be triggered when the corresponding button is pressed.

## 12.3.54 Quick Lamp Start

### Product group

FLUO

Enable

### Description

When the **Enable** check box is selected, the lamp can be switched on immediately without the necessity for preheating the lamp. The preheat sequence (typically between 0.6 seconds and 1.0 seconds) will thus be skipped. This is possible because heating of the electrodes is not turned off.

### Usage

Select the **Enable** check box to use this feature.

## 12.3.55 Relay Switched Output

### Product group

CONTROL

Internal relay behavior

Always stays closed

Switches with SR input commands

### Description

Use this feature to enable or disable the relay of the SR Bridge. This relay allows SR Bridge to switch off the connected DALI drivers either via the relay (disconnect input mains) or by giving a DALI OFF command.

### Usage

Select one of the options to set the desired internal relay behavior.

## 12.3.56 Self Contained Emergency

### Product group

LED

Output power:	<input type="range" value="100"/>	<input type="text" value="100"/>	%
Region selection:	<input type="text" value="Europe"/> ▼		
Duration test acceptance time:	<input type="range" value="180"/>	<input type="text" value="180"/>	Minutes
SelfTest mode:	<input type="text" value="DALI"/> ▼		
Function test interval:	<input type="text" value="28"/>	Days	
Duration test interval:	<input type="text" value="24"/>	Weeks	
Battery type:	<input type="text" value="NiMH"/> ▼		
Battery capacity:	<input type="text" value="Auto detect"/> ▼	<input type="checkbox"/>	Enable manual selection

### Description

Use the Self Contained Emergency (SCEM) feature to adjust the battery of rechargeable cells to create light in case of mains power outage.

### Usage

- **Output power:** use the slider or the text field to select a value. The value represents the percentage of output power. The default is 100%.
- **Region selection:** use the drop down box to select the region specific mode. The default is Europe.
- **Duration test acceptance time:** use the slider or the text field to select a value. The value represents the emergency time. If the region selection is set to Australia mode, the emergency duration is fixed at 90 minutes.
- **SelfTest mode:** use the drop down box to select the standard mode (DALI or Fixed). The default is fixed.
- **Function test interval:** use the textbox to set the value. The value represents the number of days. If the selftest mode is set to fixed, the function test interval is set to 28.
- **Duration test interval:** use the textbox to set the value. The value represents the number of weeks. If the selftest mode is set to fixed, the duration test interval is set to 24.
- **Battery type:** use the drop down box to select the battery type value.



- **Battery capacity:** use the drop down box to select the battery capacity size. The value represents the capacity of battery cell count. This value only can be changed once the Enable manual selection is checked.

### 12.3.57 SR Power Supply

#### Product group

LED

 Enable

#### Description

Use the SR Power Supply (SR PSU) feature to enable the device so it will deliver the power supply for DALI communication by itself.

#### Usage

Select the **Enable** check box to use this feature.

### 12.3.58 Step Dimming

#### Product group

LED

Enable  
 Mode:  Bi-level  Tri-level  
 Bi active dim level:   %

Enable  
 Mode:  Bi-level  Tri-level  
 Tri line 1 dim level:   %  
 Tri line 2 dim level:   %

#### Description

Step dimming is the basic dimming requirement for energy efficiency.

#### Usage

Select the **Enable** check box to use this feature.

Select Bi-level radio button to edit Bi active dim level.

Select Tri-level radio button to edit Tri line dim levels.

### 12.3.59 Touch and Dim

#### Product group

FLUO, LED

Use last known level  
Power on level:   (≈ 1 %)  
 Ignore toggle limits

#### Description

This feature defines the startup behavior of a touch and dim controlled device after a power failure during dimming.

#### Usage

When the **Use last known level** check box is selected, the device will start up at the last known dim level that was used during dimming.

If this is not checked the power on level can be configured between 0 and 100% of the light.

When the **Ignore toggle limits** check box is selected, the normal toggle limits are ignored and dimming starts directly.

If this is not checked the normal toggle limits are used.

## 12.4 Using the features summary

For most devices an additional tab is shown on the **Device features** tab, called **Summary**. The **Summary** tab gives a compact overview of the settings that have been entered for all the features of this device. As the features are different per product group, the summary is also different. The features cannot be changed on the **Summary** tab.

**Lamp selection**

Selected: HID CDO 250W

---

**Dynadimmer** **AmpDim**

Enabled: Yes Enabled: No

TimeBased: No

Mid point shift: 0 min

Time	Level	Fade
00:00	1	180
06:00	100	180

<b>Low percentage</b>	60
Low voltage	195
High percentage	100
High voltage	230

---

**ALO** **CLO** **LineSwitch**

Enabled: No Enabled: No Enabled: No

Output: 100 % High voltage level: 100 %

Low voltage level: 50 %

 
**Disabled features**

- CLO
- LineSwitch
- AmpDim
- ALO


## 12.5 Saving and opening a feature configuration file

To save and open a feature configuration file, the **Device features** tab must be active.

Feature configurations can be saved to a file for later use. To do so, first select the **Device features** tab to make feature configurations for the selected device. Then, click the disk icon on the toolbar or select **File** → **Save as**.

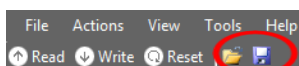


A dialog window pops up that lists the features of the device:

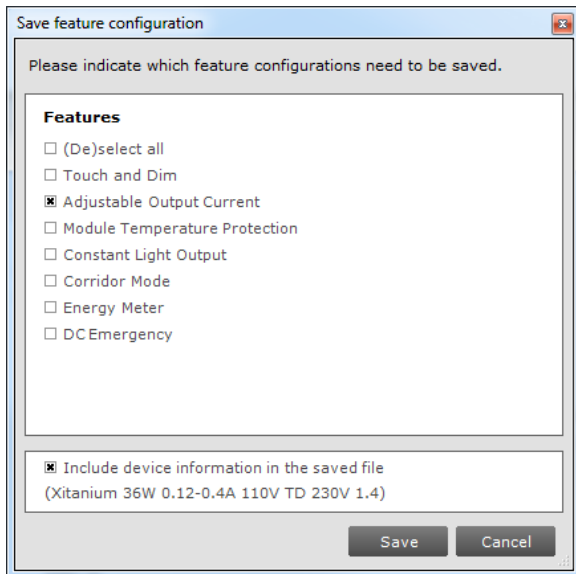

Select any number of features and click **Save**. The save file dialog window appears. Choose a location and a file name and click **Save**. The selected features will now be written to the file.


It is also possible to save the device information alongside the features. This data can later be used in MultiOne Workflow to ensure the configuration can only be configured in the saved device model.

As mentioned before, some features can be OEM Write-protected. These features will be marked with a padlock icon in the dialog.

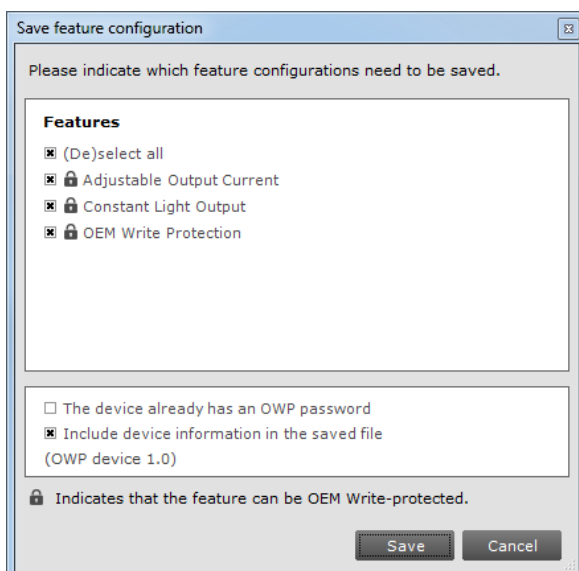


In this case it is possible to save the current password alongside the features, so MultiOne Workflow can use this password to be able to write the data of the features that are OEM Write-protected to the driver.

When using SimpleSet, MultiOne compares the provided password with the password in the device before writing the new data. When there is a mismatch, an error message will be shown.

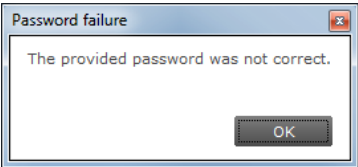

When using DALI, it is also possible to save DALI settings along with the feature configuration. This can be done by checking the **Include DALI settings in a separate file**.

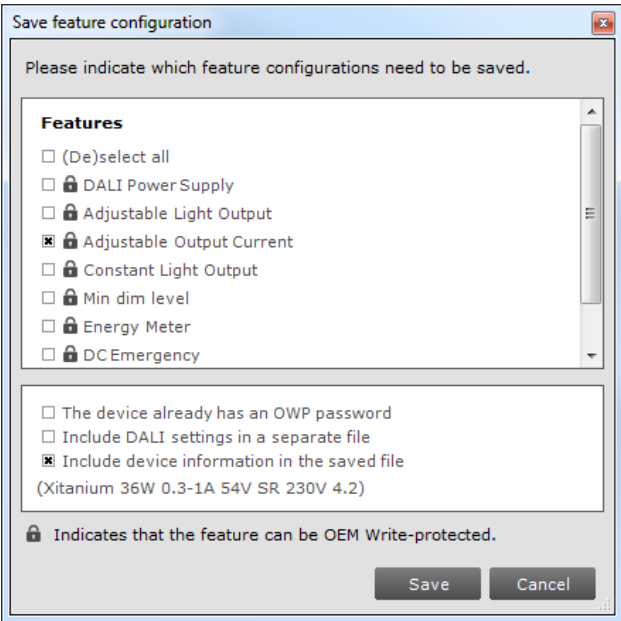

Note that this feature can be enabled or disabled from [Preferences](#).

To open a feature configuration file, click the folder icon on the toolbar or select **File** → **Open**. The open file dialog window appears. Select a file and click **Open**.



The contents of the **Device features** tab are updated to show the information that was read from the file.

Only feature configurations are stored in the file. This means that a file made for a certain device can be read into the **Device features** tab for a different device. MultiOne attempts to read as many feature configurations as possible.

Example: a feature configuration file exists that was made for device D1, which has features AOC, CLO and MTP. A different device, D2, has features AOC and Touch and Dim. When opening the feature configuration file for device D1 while device D2 is selected, only the configuration for feature AOC will be read, since features CLO and MTP are not supported by device D2.

Feature configuration files can be distributed to other users of MultiOne. This user then opens the file and configures the connected device.

## 12.6 Configuring a single device

There are situations in which only one device will be configured at the time. In this case it is not necessary to have the full functionality of the **Network**, including **Scan** and **Commission** buttons. To optimize the workflow for single device configuration, select **Single device programming** in the **Application Mode Selector**.

When **Single device programming** has been selected, MultiOne will automatically scan the DALI network and select the connected device for communication. In this mode, the **Network** panel is collapsed by default. If multiple devices have been found, MultiOne will show a message and switch to regular configuring mode.

## 12.7 Configuring multiple DALI devices (simultaneously)

There are situations in which multiple devices need to be configured at the same time. The procedure to simultaneously configure multiple devices of the SAME TYPE AND VERSION is as follows:

1. Connect maximum 64 devices of the SAME TYPE AND VERSION, in parallel to the DALI connectors of the USB2DALI interface
2. Connect the USB2DALI interface to the USB port (both black and red USB plugs (USB-A)).
3. Connect the devices to the mains.
4. Start MultiOne
5. Choose **Tools → Preferences**
6. Clear the **Write & verify** check box and click **OK**
7. Click the **Commission** button on the **Network** panel to start commissioning.
8. Choose **Actions → Add virtual device**.
9. Select the device of the same type and version as the ones connected on the **Network** panel.
10. Select the **Device features** tab
11. Change any of the features.
12. Click **Write** on the toolbar.

**Note!** There will not be an individual confirmation for every device. So if any of them failed to be configured, it is not known which one.

**Note!** Remember that applications can be affected by the availability of the short address.

## 12.8 Configuring multiple DALI devices (consecutively)

There are situations in which multiple devices need to be configured one after another. The procedure to consecutively configure multiple devices of the SAME TYPE AND VERSION should follow the next steps.

### 12.8.1 MultiOne

1. Connect one device
2. Connect the USB2DALI interface to the USB port (both black and red USB plugs (USB-A))
3. Connect the device to the mains
4. Start MultiOne
5. If needed, select **All** in the **Application mode selector**
6. Click **Scan network** in the **Network** panel to start scanning
7. Select **File**→**Open** to open the required feature configuration file
8. Right click the device in the **Network** panel and select **Reset short address**
9. Select the **Device features** tab
10. Click **Write** on the toolbar
11. Replace device
12. Click **Write** on the toolbar
13. Replace device
14. Etc.

**Note!** Remember that applications can be affected by the removal of the short address.

## 12.9 Configuring multiple ZigBee devices

There are situations in which multiple devices need to be configured one after another. The procedure to configure multiple devices of the SAME TYPE AND VERSION is described below.

1. Join multiple devices in a ZigBee network
2. Connect the USB2ZigBee interface to the USB port
3. Start MultiOne
4. If needed, select **All** in the **Application mode selector**



5. Click **Connect to network** in the **Network** panel to start scanning
6. Right click in the **Network** panel and select **Add virtual device...**
7. Select the device you want to configure and click **OK**
8. Configure the virtual device as desired
9. Select the virtual device in the **Network** panel and click **Write to current network...** in the **Actions** menu
10. (De)select the features you want to write in the pop-up that appears and click **Write**


**Note!** When devices of different types and/or versions are joined in the same network, only the features that correspond to the features of the virtual device will be configured. All other features will be ignored.

## 12.10 Offline feature configuration preparation


When a device or network is not present, it is still possible to prepare a feature configuration. This might be useful when you would like to prepare a feature configuration file that can be read at a later time, and written to the device when it is connected. To make a configuration you need to add one or more virtual devices.

To add a virtual device, right-click **All devices** in the **Network** and choose **Add virtual device**.

Alternatively choose **Actions** → **Add virtual device**.

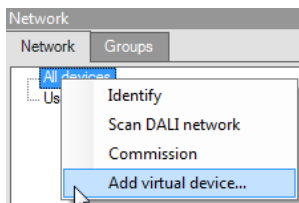

A dialog window pops up that lists all devices supported by MultiOne.

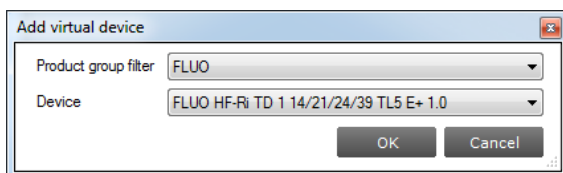

Make a selection and click **OK**. An item called **Virtual devices** appears in the **Network**. Expand it by clicking the **+** sign to see the list of virtual devices. Note that virtual devices do not have a short address and MultiOne will show **Broadcast** on the location of the short address. Virtual devices can only be addressed using broadcast commands.

Select a virtual device and select the **Device features** tab. The device features are shown as if the device was physically connected. Configure the features as desired, and then save the feature configuration to a file. You have now made a feature configuration file without being connected a device.

## 12.11 Sending DALI commands


To manually send DALI commands select the **Commands** tab.

The **Commands** tab contains the following tabs:

- 102 tab
- 202 tab

The **102** tab has the following specific pane:

- Light control

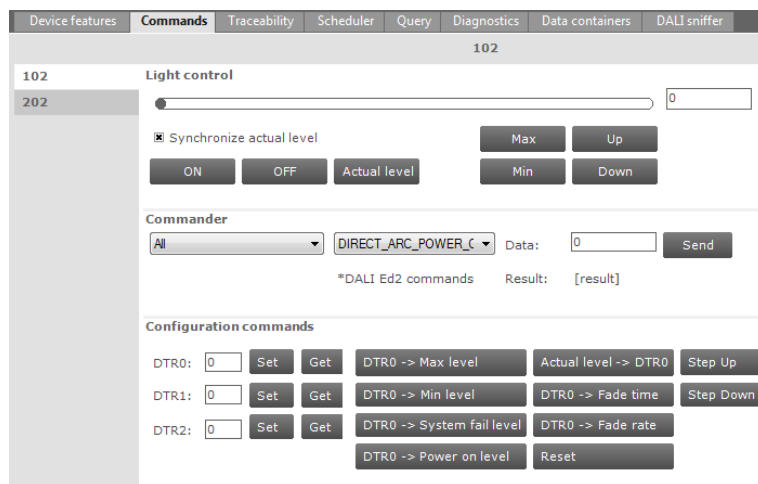


### Light control

This pane offers a number of buttons to immediately influence the behavior of the device. These controls are useful when quick feedback in terms of light is desired. Selecting the **Synchronize actual level** check box will reflect the actual light level in the slider after each command.

The **202** tab has the following specific pane:

- Control Device

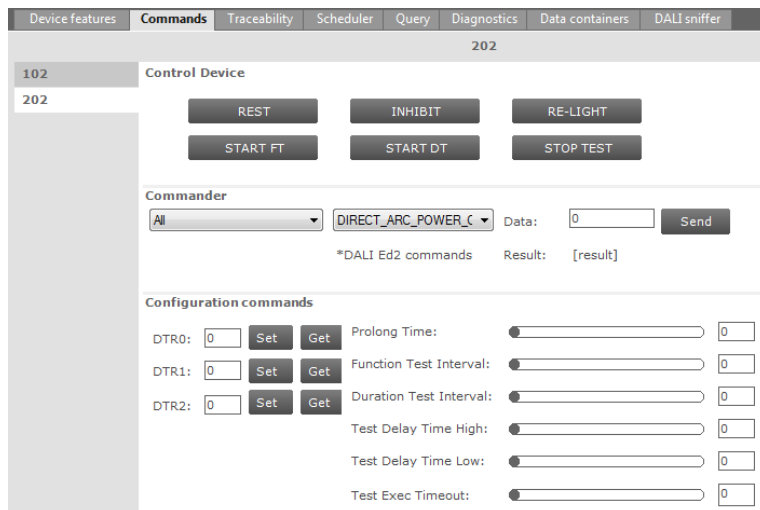

## Control Device

This pane gives direct access to emergency controls that immediately influence the behavior of the emergency device. These controls allow users to get quick feedback in terms of the behavior of an emergency device in different situations.

Both tabs contain the following panes:

- Commander
- Configuration commands

## Commander

To send a DALI command as a broadcast command, first select **All devices** in the **Network**, then select the DALI command in the **Commander** pane and finally click the **Send** button. To send a DALI command to a specific address or group, select the corresponding device or group in the **Network**.

**Note!** DALI Ed2 commands are marked by an asterisk (\*).

## Configuration commands

Both tabs contain this pane. However, the content of this pane is different for each tab. To manually set or get the so-called DTR (Data Transfer Register) values of the device, use the buttons in the left part of this pane.

To use the actual DTR value of the device with a number of DALI commands, go to 102 tab to use the buttons in the right part of this pane. Besides a number of DALI commands using the DTR value, other DALI102 commands such as **Reset**, **Step Up** and **Step Down** are directly available.

To configure values like **Prolong Time**, **Function Test Interval**, **Duration Test Interval**, **Test Delay Time High**, **Test Delay Time Low** and **Test Execution Timeout**

that are needed while using emergency commands, go to 202 tab to use the sliders or text fields in the right part of this pane to modify their values. The allowed range for those values is between 0 and 255.

### 12.12 Traceability

The Traceability tab summarizes how many times the configuration of the device was changed, when the last configuration change happened using unknown software and a pane showing details of the first, second and last configuration change (if present).

The screenshot shows the Traceability tab with the following summary and table:

Total number of configuration changes: 2  
 Most recent configuration change with unknown software: 1 operating hours

	Date	Software	Interface
First	9/23/2014 3:07:00 PM	MultiOne Workflow 0.6	DALI
Second	9/26/2014 2:03:00 PM	MultiOne Workflow 0.6	DALI

Every entry in the list shows the date of the configuration change, which software version was used and which type of interface was used at the time of the configuration change.

### 12.13 Working with DALI command scripts

To run a series of DALI commands, a script can be created in the Scheduler tab. This script can be executed any number of times. Furthermore it is possible to save the script to a file for easy reuse.

The screenshot shows the Scheduler tab with the following configuration:

**Add item**

Items	Response
For infinite	
DIRECT_ARC_POWER_CONTROL : data 123	
QUERY_SCENE_LEVEL_0 : data 0	FF
End For	

**Selected item**

- Start time: 11:13:47
- Delay (ms): 100
- Device address(es): Selected device
- Command: ArcPowerControl → DIRECT\_ARC\_POWER\_CON
- \*DALI Ed2 commands
- Data: 123

Buttons: Play, Pause, Stop

The Scheduler tab has the following panes:

- Add item

- A **CMD** button to insert DALI commands
- A **FOR** button to insert a loop, consisting of a FOR and an END FOR
- Selected, containing buttons to work with (**Up, Down, Delete, Clear All**) the currently selected item in the schedule
- Items, representing the schedule
- Selected item, the settings of the currently selected item
- Schedule playback buttons (**Play, Pause, Stop**)

To add a command to the schedule, click the **CMD** button. The command is added to the schedule and it is automatically highlighted. On the **Selected item** pane, choose the desired DALI command and settings. By selecting the **Start time** check box and providing a time, this command will be sent at an exact moment in time.

Alternatively, commands can be sent relative to each other. Select the **Delay** check box and provide a value in milliseconds to do so. At **Device address** you can select to which device to send this command. You can choose between the currently selected device, a broadcast or one of the 64 available short addresses (0-63). Then, select which DALI command will be sent by using the two drop down boxes; the first selects the command group and the second selects the actual command. If a command parameter is required, enter it into the **Data** field.

**Note!** DALI Ed2 commands are marked by an asterix(\*).

By repeatedly clicking the **CMD** button, a series of DALI commands can be created. Each command has its own settings.

 
A schedule can also contain loops. A loop has a FOR-item, one or more commands, and finally an END FOR-item to mark the end of the loop. Click the **FOR** button to create a loop. By default, the loop will run infinitely (that is, until schedule playback is manually stopped or paused by clicking **Stop** or **Pause**). To change the number of times the loop will be executed, select the FOR-item and enter a value for **Maximum count** on the **Selected item** pane.

To rearrange the schedule, select a command and use the **Up** and **Down** buttons to move this up or down respectively. Delete a command by clicking the **Delete** button. To clear all the commands use **Clear All** button.

To start, pause, or stop a schedule playback, use the **Play, Pause** and **Stop** buttons. If the command is a query, the return data of the executed command will be displayed.

To save a schedule to file for later use, click the disk icon on the toolbar. Alternatively, select **File** → **Save** or **File** → **Save As**. Choose a location, a filename and click **Save**. The schedule has now been saved.

To open a previously stored schedule, click the folder icon on the toolbar.

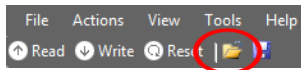

Alternatively, select **File** → **Open**. Choose a schedule file and click **Open**. The **Scheduler** tab now shows the schedule from the file.

## 12.14 Querying devices

 
To automatically execute a number of standard DALI query commands select the **Query** tab.

DALI Ed 1					
Status	194	Max level	254	Scene level 0	255
Control gear present	255	Min level	126	Scene level 1	255
Lamp failure	255	Power on level	254	Scene level 2	255
Lamp power on	0	System failure	254	Scene level 3	255
Limit error	0	Fade time/rate	7	Scene level 4	255
Reset state	0	Groups 0 - 7	0	Scene level 5	255
Version number	1	Groups 8 - 15	0	Scene level 6	255
Extended version	0	Random address H	125	Scene level 7	255
Content DTR 0	3	Random address M	17	Scene level 8	255
Content DTR 1	100	Random address L	172	Scene level 9	255
Content DTR 2	2	Missing short address	255	Scene level 10	255
Device type	0	Power failure	255	Scene level 11	255
Physical min	126			Scene level 12	255
Actual level	255			Scene level 13	255
				Scene level 14	255
				Scene level 15	255

DALI Ed 2					
Operating mode	0	Next device type	0	Manufacturer mode	0
Light source type	0	Extended fade time	0	Control gear failure	0


To make sure that the information in the **Query** tab corresponds to the selected device, click **Read** on the toolbar.

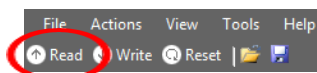

## 12.15 Accessing Diagnostics

You can configure all diagnostics features that are supported by a specific Philips device. For a device selected in the **Network**, the **Diagnostics** tab displays the set of diagnostics features that corresponds to this device. Upon selecting another device, the **Diagnostics** tab will be updated as well. This mechanism ensures that only the features supported by the selected device can be configured.

The **Diagnostics** tab has a panel with a column of tabs on the left-hand side. Each feature has its own tab.

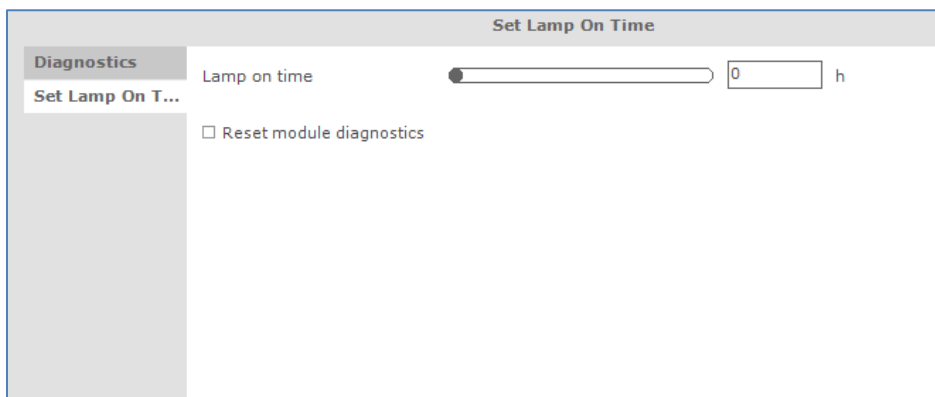

The **Read** and **Write** functionality for **Diagnostics** works the same way as what has been described in chapter 12.3 of this manual.

### 12.15.1 Diagnostics

#### Product group

HID, LED and CONTROL


#### Description

Use this feature to consult the diagnostics values.

Note that some diagnostics might be OEM Readout-protected and require a password before being read out.



### 12.15.1.1 Diagnostics for a HID

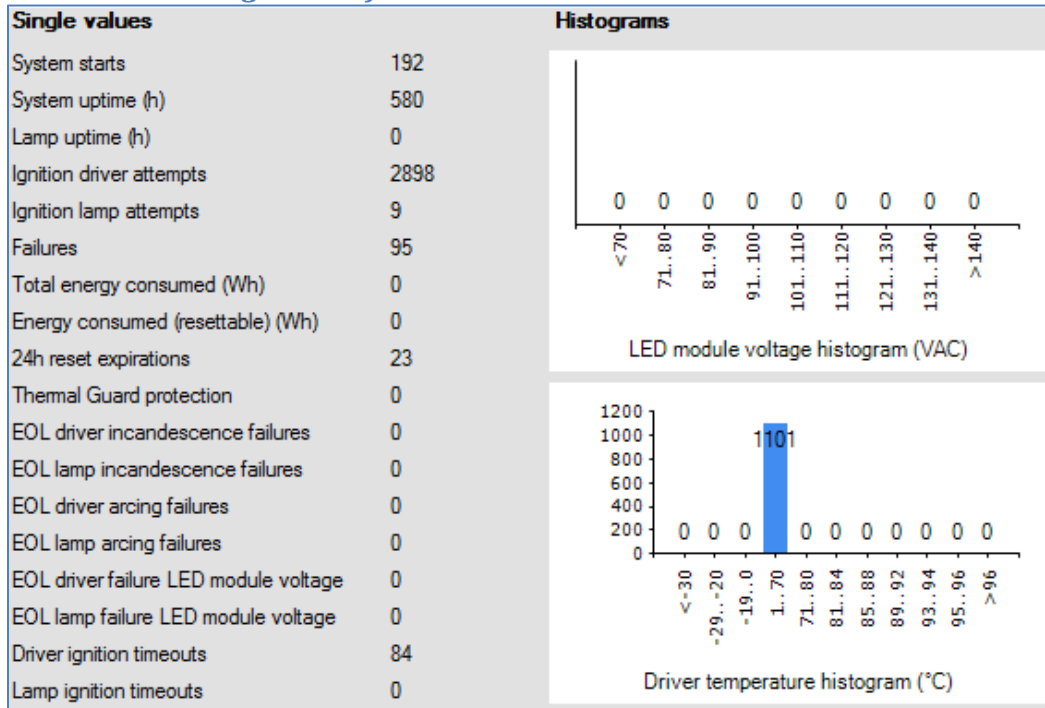

A brief explanation of all HID diagnostics is given below.


Table 1 HID diagnostics

Diagnostic	Description
<b>System starts</b>	Number of times the HID driver was switched on (via the mains).
<b>System uptime (s)</b>	Total time the HID driver was on.
<b>Lamp uptime (s)</b>	Total lamp burning time.
<b>Ignition driver attempts</b>	Number of times the HID driver attempted to ignite a lamp.
<b>Ignition lamp attempts</b>	Number of times the HID driver attempted to ignite the lamp, since last lamp replacement <sup>a)</sup> .
<b>Failures</b>	Total number of failures detected by the HID driver.
<b>Total energy consumed</b>	Total energy consumed by the HID driver.
<b>Energy consumed (resettable) (Wh)</b>	Energy consumed since last user-reset.
<b>24H reset expirations</b>	HID driver was operating for more than 24 hours; any failures blocking driver to operate the lamp are cleared
<b>Thermal Guard Protection</b>	Thermal Guard activated as a consequence of high temperature level.
<b>EOL driver incandescence failures</b>	End-Of-Life situation showing incandescent mode of operation of the lamp.

<b>EOL lamp incandescence failures</b>	End-Of-Life situation showing incandescent mode of operation of the lamp, since last lamp replacement <sup>a)</sup> .
<b>EOL driver arcing failures</b>	End-Of-Life situation showing an arcing mode of operation of the lamp.
<b>EOL lamp arcing failures</b>	End-Of-Life situation showing an arcing mode of operation of the lamp, since last lamp replacement <sup>a)</sup> .
<b>EOL driver failure lamp voltage</b>	End-Of-Life situation showing a lamp voltage level that was out of operating range.
<b>EOL lamp failure Lamp voltage</b>	End-Of-Life situation showing a lamp voltage level that was out of operating range, since last lamp replacement <sup>a)</sup> .
<b>Driver ignition timeouts</b>	Failed to successfully ignite the lamp.
<b>Lamp ignition timeouts</b>	Failed to successfully ignite the lamp, since last lamp replacement <sup>a)</sup> .
<b>Cycling driver failures</b>	Cycling of the lamp (extinguished for more than N times subsequently) [where N depends on lamp type].
<b>Cycling lamp failures</b>	Cycling of the lamp (extinguished for more than N times subsequently), since last lamp replacement [where N depends on lamp type] <sup>a)</sup> .
<b>Extinguished failures driver</b>	Detection of an extinguished lamp.
<b>Extinguished failures lamp</b>	Detection of an extinguished lamp, since last lamp replacement <sup>a)</sup> .
<b>Mains high failures</b>	Mains voltage level detected that was too high to continue operation.
<b>Mains low failures</b>	Mains voltage level detected that was too low to continue operation.
<b>Bus failures</b>	Bus voltage level detected that was out of operating range.
<b>Vmid failures</b>	Midpoint voltage level detected that was out of operating range.
<b>Short circuits</b>	Short circuit detected in the lamp connection.
<b>ZCD failures</b>	Critical failure detected in lamp or driver.
<b>Over Power Protection failures</b>	Over power detected.
<b>Invalid lamp table failures</b>	HID driver switched-on with a non-supported or corrupt lamp table selected.

a) lamp replacement triggers an erase of predefined lamp-specific items such as ignition attempts, lamp errors.

### 12.15.1.2 Diagnostics for a LED

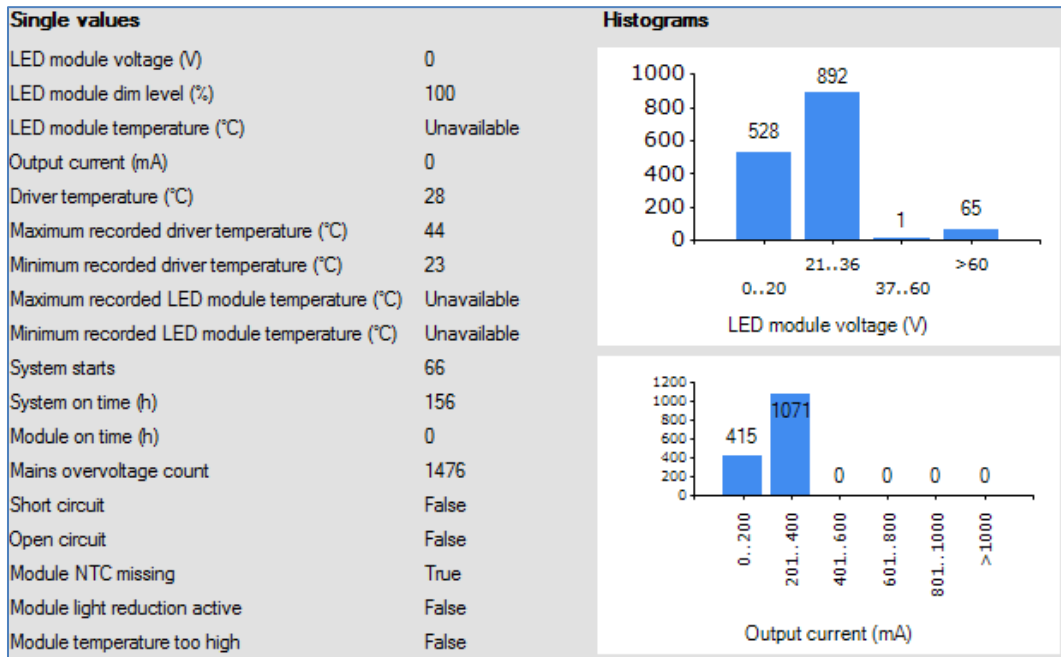

A brief explanation of all LED diagnostics is given below.

Table 2 LED diagnostics

Diagnostic	Description
<b>LED module voltage (V)</b>	Represents the output LED module voltage.
<b>LED module current (mA)</b>	Represents the output LED module current
<b>LED module dim level (%)</b>	Represents the current dim level set by the LED driver. Takes into account all factors that can influence dimming like Constant Light Output, Module Temperature Protection, all dimming interfaces etc.
<b>LED module temperature (°C)</b>	Represents the LED module temperature. Available only when Module Temperature Protection is selected and an NTC value is selected.
<b>Driver temperature (°C)</b>	Represents the internal driver temperature. It does not represent $T_{case}$ of the driver. Though there is a correlation between $T_{case}$ and internal driver temperature, the difference can vary depending on current setting of driver.
<b>System starts</b>	Represents the number of times the LED driver is powered ON.

<b>System on time (h)</b>	Represents the hours the LED driver is ON. (LED module is OFF)
<b>Module on time (h)</b>	Represents the number of hours the LED <b>module</b> is powered ON.
<b>Module energy consumed</b>	Represents the energy consumed by LED module alone. Only output parameters (LED module voltage and current) are used to calculate energy. The LED driver energy consumption is not accounted. Hence it does <b>not</b> represent true <b>input</b> energy consumption of the LED system.
<b>Short circuit</b>	This indicates if output LED module is shorted.
<b>Open circuit</b>	This indicates if output LED module is open or not connected to LED driver
<b>Module NTC missing</b>	This indicates missing NTC on the LED module. Available only when Module Temperature Protection is selected and 10k NTC is selected. Missing NTC flag will not be activated if 15k+390 Ω NTC is selected.
<b>Module temperature reduction active</b>	This indicates light level reduction due to module temperature being active.
<b>Module temperature too high</b>	This indicates whether the LED module temperature exceeds 90 °C causing module to turn OFF.
<b>Mains too low</b>	This indicates that the LED driver is not operating since input voltage at power ON is too low.
<b>Adjustable Startup Time active</b>	This indicates that the LED driver is in the startup phase as defined by the Adjustable Startup Time. For example if the Adjustable Startup Time is set to 20000 ms, and the diagnostic information is read at startup within 20 s, this check box will be selected indicating startup condition.

### 12.15.1.3 Subset of LED diagnostics

Single values	
System on time (HH:MM)	02:43
Module on time (HH:MM)	02:43
System starts	730
Maximum recorded driver temperature (°C)	90
Minimum recorded driver temperature (°C)	13
Maximum recorded LED module temperature (°C)	64
Minimum recorded LED module temperature (°C)	16
Mains overvoltage count	2

Table 3 Subset of LED diagnostics

Diagnostic	Description
<b>System starts</b>	Represents the number of times the LED driver is powered ON.
<b>System on time (h)</b>	Represents the hours the LED driver is ON. (LED module is OFF).
<b>Module on time (h)</b>	Represents the number of hours the LED <b>module</b> is powered ON.
<b>Maximum recorded driver temperature (°C);</b>	Maximum driver temperature ever reached during the lifetime of the driver.
<b>Minimum recorded driver temperature (°C)</b>	Minimum driver temperature ever reached during the lifetime of the driver.
<b>Maximum recorded module temperature (°C)</b>	Maximum module temperature ever reached during the lifetime of the driver.
<b>Minimum recorded module temperature (°C)</b>	Minimum module temperature ever reached during the lifetime of the driver.
<b>Mains overvoltage count</b>	Number of times the mains exceeded the maximum allowed mains voltage level.

<b>Mains overvoltage count</b>	<b>Number of times the mains exceeded the maximum allowed mains voltage level.</b>
--------------------------------	--

### 12.15.1.4 Motor control diagnostics

#### Single values

Lamp on time	56 hours 3 minutes
Pan motor on time	0 hours 0 minutes
Tilt motor on time	0 hours 0 minutes
Zoom motor on time	0 hours 0 minutes
Pan motor move count	10
Tilt motor move count	5
Zoom motor move count	0

Table 4 Motor control diagnostics

Diagnostic	Description
<b>Lamp on time(h)</b>	Represents the number of hours the lamp is on.
<b>Pan motor on time(h)</b>	Represents the number of hours the pan motor is on.
<b>Tilt motor on time(h)</b>	Represents the number of hours the tilt motor is on.
<b>Zoom motor on time(h)</b>	Represents the number of hours the zoom motor is on.
<b>Pan motor move count</b>	Represents the number of times of the pan motor received a movement command.
<b>Tilt motor move count</b>	Represents the number of times of the tilt motor received a movement command.
<b>Zoom motor move count</b>	Represents the number of times of the zoom motor received a movement command.

### 12.15.1.5 Emergency Diagnostics

#### Single values

Lamp emergency time (h)	0
Lamp total operation time (h)	0
Last duration test time (m)	0
Time since last duration test (m)	0
Total number of discharge cycles	0

Table 5 Emergency diagnostics

Diagnostic	Description
<b>Lamp emergency time(h)</b>	Represents the number of hours the lamp was in emergency mode.
<b>Lamp total operation time(h)</b>	Represents the number of hours the lamp is on.

<b>Last duration test time (m)</b>	Represents the number of minutes the last duration test took to run.
<b>Time since last duration test (m)</b>	Represents the time passed since the last performed duration test, mentioned in days, hours or minutes.
<b>Total number of discharge cycles</b>	Represents the total number of battery discharge cycles.

## 12.15.2 Set Lamp On Time

### Product group

LED

Lamp on time  h

Reset module diagnostics

### Description

Use this feature to set the lamp on time or reset the diagnostics values.

### Usage

Use the slider or the text field to set the **Lamp on time** value.

Select the **Reset module diagnostics** check box to reset the following diagnostics:

- Lamp on time counter
- Maximum and minimum module temperature
- Module Steady state temperature histogram
- Lamp On Cycles

## 12.16 Accessing Energy Meter

Some devices from the product groups FLUO and HID support Energy Meter. To access energy meter, select a device in the **Network** and select the **Energy Meter** tab. Upon clicking **Read** on the toolbar, the device's energy meter information will be read and displayed. Use this tab to get an indication of the (total) energy consumption of the device.

The value for **Energy consumed** can be reset by pushing the **Reset** button. For some drivers the value for Energy Consumed will automatically reset when MultiOne detects the device. The value for **Total energy consumed** cannot be reset. The **Actual power consumption** is the power currently being used.

Energy Meter might look as follows:

Reset Meter	
Energy consumed	0,0 dWh
Total energy consumed	0 Wh
Actual power consumption	0,0 W

A brief explanation of all Energy Meter is given below.

Table 6 Energy Meter

Energy Meter	Description
<b>Energy consumed</b>	Represents the energy consumed between a period of times of a device
<b>Total energy consumed</b>	Represents the total energy consumed of a device
<b>Actual power consumption (W)</b>	Represents a snapshot of the actual power consumption of a device

## 12.17 Accessing Installer

You can configure all installer features that are supported by a specific Philips device. For a device selected in the **Network**, the **Installer** tab displays the set of installer features that corresponds to this device. Upon selecting another device, the **Installer** tab will be updated as well. This mechanism ensures that only the features supported by the selected device can be configured.



The **Installer** tab has a panel with a column of tabs on the left-hand side. Each feature has its own tab.



### 12.17.1 Coded Light Randomize

#### Product group

LED

 Randomize


#### Description

Use this feature to create a random id for coded light data.

#### Usage


When the **Randomize** flag is enabled, the device will generate a new random id, write this id into coded light data and clear the flag.

## 12.18 Working with the DALI Sniffer

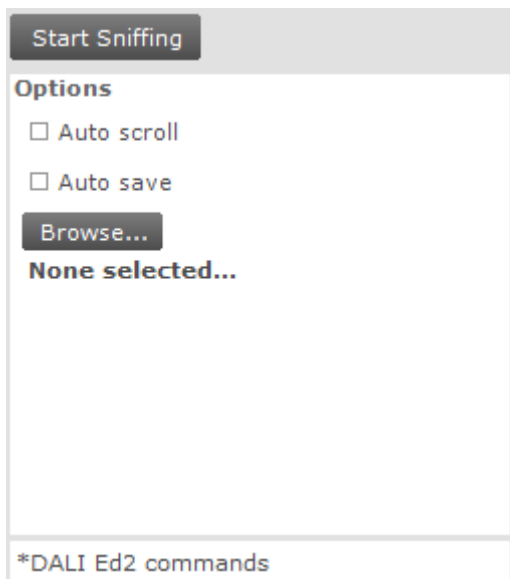

- **Start Sniffing/Stop Sniffing:** When clicked, starts/stops the actual sniffing
- **Auto scroll:** When checked the result window automatically scrolls to the latest entry.
- **Auto save:** Automatically save the sniffing results to the selected file
- **Browse...:** Select file to store sniffing results.

 To save the result to a file that is not the auto save file, click on the save button in the menu bar.

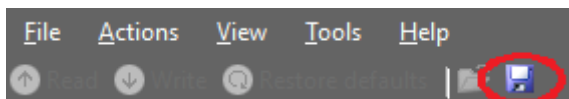

An example:

Timestamp	Time Delta Between Frames(us)	Answer	Data	Address	Command ID	Command	Error
6/12/2015 09:48:53.4	0	Write	0x0590	SHORT_2	Cmd_144	QUERY_STATUS	
6/12/2015 09:48:53.4	20820	Read	0x82	-	-	130	
6/12/2015 09:48:53.5	32550	Write	0x0591	SHORT_2	Cmd_145	QUERY_CONTROL_G...	
6/12/2015 09:48:53.5	20460	Read	0xFF	-	-	255	
6/12/2015 09:48:53.5	29140	Write	0x0592	SHORT_2	Cmd_146	QUERY_LAMP_FAILU...	
6/12/2015 09:48:53.5	20890	Read	0xFF	-	-	255	
6/12/2015 09:48:53.6	32090	Write	0x0593	SHORT_2	Cmd_147	QUERY_LAMP_POW...	
6/12/2015 09:48:53.6	34490	Write	0x0594	SHORT_2	Cmd_148	QUERY_LIMIT_ERROR	
6/12/2015 09:48:53.6	36490	Write	0x0595	SHORT_2	Cmd_149	QUERY_RESET_STA...	
6/12/2015 09:48:53.7	55260	Write	0x0597	SHORT_2	Cmd_151	QUERY_VERSION_N...	
6/12/2015 09:48:53.7	20480	Read	0x08	-	-	8	
6/12/2015 09:48:53.8	27870	Write	0x05FF	SHORT_2	Cmd_255	QUERY_EXTENDED_...	
6/12/2015 09:48:53.8	35940	Write	0x0598	SHORT_2	Cmd_152	QUERY_CONTENT_D...	
6/12/2015 09:48:53.8	20910	Read	0x12	-	-	18	
6/12/2015 09:48:53.8	34080	Write	0x059C	SHORT_2	Cmd_156	QUERY_CONTENT_D...	

<b>Column 1 - Timestamp:</b>	The time stamp of the message
<b>Column 2 - Time delta between Frames (us)</b>	The time difference in microseconds between two consecutive commands
<b>Column 3 - Answer</b>	The answer type, either an read or write message
<b>Column 4 - Data</b>	The data being send or received
<b>Column 5 - Command ID</b>	The ID of a command (only if a command is used)
<b>Column 6 - Command</b>	The known DALI command name, if no command then decimal value of the received Data
<b>Column 7 - Error</b>	The kind of error that might have occurred

The color of a line in the sniffer pane indicates the type of the DALI command.

### 12.18.1 Sniffing with multiple interfaces


It is possible to sniff multiple DALI networks on the same PC. To do this:

- Connect multiple USB2DALI devices to the PC.
- In MultiOne go to the Preferences window and select the **Show connection settings on startup** option.
- Start MultiOne multiple times and select different interfaces.
- Once all MultiOnes are started, start in each MultiOne the sniffer.

**Note!** When multiple MultiOnes connect to the same interface, the sniffing will not work anymore.

## 12.19 Art-Net export functionality

Art-Net has the possibility to export different features from multiple drivers to extensible markup language (.xml) type of file for easy usage later on. The export functionality is available under the **Actions** menu.

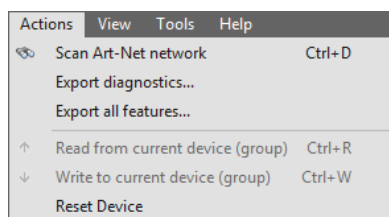

The following two options are available to the user:

- **Export diagnostics:** Retrieve the diagnostic values from the selected device(s)

- **Export all features:** Retrieve all features from the selected device(s)

If the user selects either one of the options he will then be able to select the drivers from which he would like to export the information from. The shown list contains all available devices from the network, even the ones that do not support this functionality, but the user will be unable to select the non-supported devices.

Selected devices			
4 device(s) found			
<input type="checkbox"/>	UID	Device name	Supported
<input type="checkbox"/>	50:68:41:54:B0:33	LED HP 350W 1.10 1.16	Yes
<input type="checkbox"/>	50:68:41:54:B0:34	LED HP 350W 1.10 1.16	Yes
<input checked="" type="checkbox"/>	50:68:41:54:B0:35	LED HP 350W 1.10 1.16	Yes
<input type="checkbox"/>	50:68:41:54:B0:36	LED HP 350W 1.10 1.16	Yes

Once all needed devices are selected the user could **start exporting** the data.

Please wait while exporting diagnostics...  
 Processing Device: 50:68:41:54:B0:33: LED HP 350W 1.10 1.16  
 Progress: 4 device(s) remaining


During the export the user will receive short updates on what device currently is being processed and how many devices are still remaining.

Summary								
Time:	0 hours 0 min 6 sec 501 ms							
Result:	4 device(s) exported successfully							
<input type="checkbox"/>	Address	Device	Version	Result	Date	MultiOne version	Diagnostics version	LED modu volta
<input checked="" type="checkbox"/>	50:68:41:54:B0:33	LED HP 350W 1.10	1.16	OK	8/27/2015 12:07 PM	2.10.0.0	0	0
<input type="checkbox"/>	50:68:41:54:B0:34	LED HP 350W 1.10	1.16	OK	8/27/2015 12:07 PM	2.10.0.0	0	0
<input type="checkbox"/>	50:68:41:54:B0:35	LED HP 350W 1.10	1.16	OK	8/27/2015 12:07 PM	2.10.0.0	0	0
<input type="checkbox"/>	50:68:41:54:B0:36	LED HP 350W 1.10	1.16	OK	8/27/2015 12:07 PM	2.10.0.0	0	0


Once the export is finished the user is then presented with the final result in a simple overview. The user could make a selection of what devices it would like to save the data from and **save** this to a supported file type.

## 12.20 DALI Firmware update

MultiOne can be used to update the driver firmware of DALI devices. The remote firmware update functionality is available under the **Actions** menu when at least one device is discovered in the network.

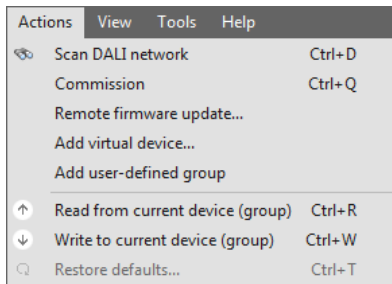

On selecting the Remote firmware update option the user is asked to select the update file. After selecting the file, the details of the file are displayed.

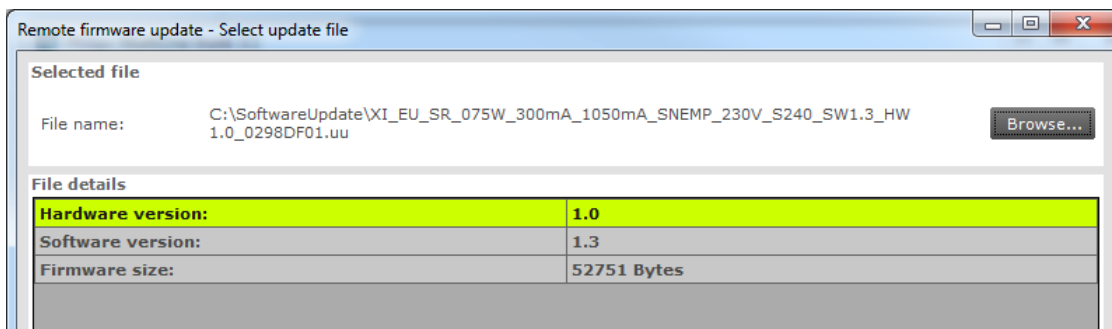


Click **Next** to continue the update procedure. On the following screen the user can configure the update settings used during the update procedure. If the connected device needs a password and access level before the remote firmware update can start, then the **Password** and **Access level** fields will be enabled so that the user can specify them.

The following update settings can be specified:


- **Password:** The password needed for unlocking the device before the remote software update can start.
- **Access level:** The access level needed for unlocking the device before the remote software update can start.
- **Number of attempts:** The number of automatic attempts done for every update step in case a failure occurs during the remote firmware update procedure.

**Note!** If a 4-byte password is desired, fill the first 3 text boxes with 0.


Click **Next** to continue the update procedure.

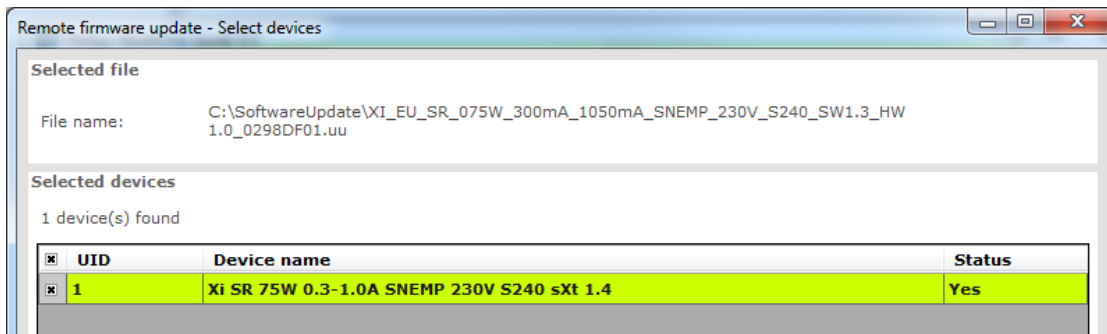

All supported devices for this update procedure are retrieved and listed. The status column describes the reason why a device is or isn't supported. The user can select the devices from the list and when one or more supported devices are selected the user can press **Start** to start the remote firmware update. During the update, the user can see the progress status, the different stages of the update and is able to abort the update procedure.

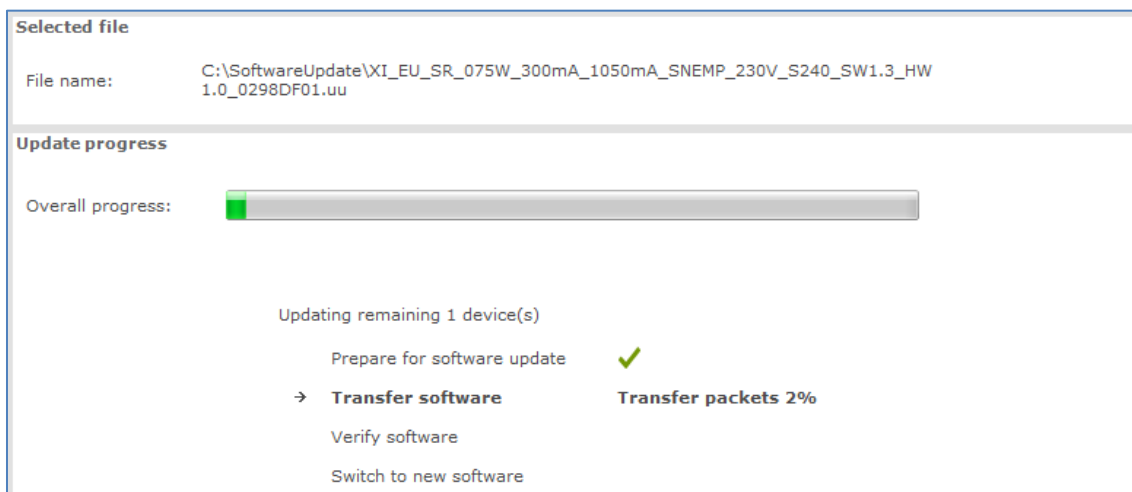

Once the update is finished, the final result is shown to the user in a simple overview.

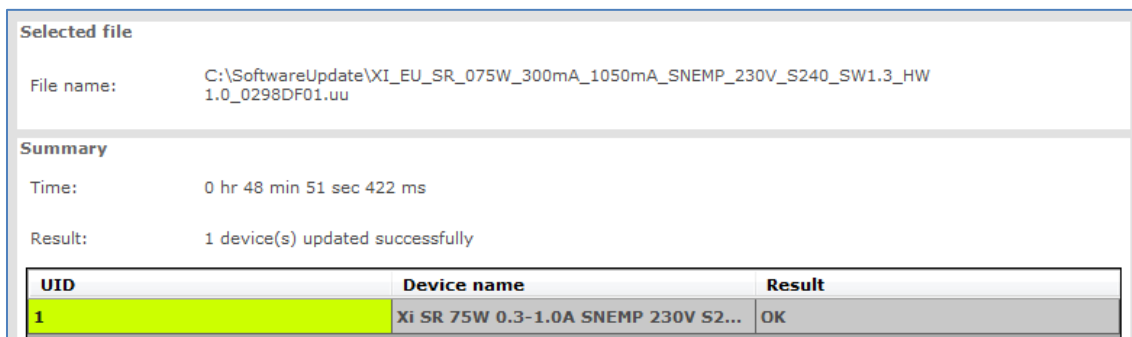

## 12.21 The logging window

The **logging window** shows the communication related to the features currently being read or written or when DALI commands are sent or received through the USB2DALI interface.



Timestamp	Address	Description	Result
29-3-2012 13:41:16	3	Constant Light Output: readin...	success
29-3-2012 13:41:16	3	Constant Light Output: readin...	success
29-3-2012 13:41:16	3	Adjustable Light Output: readi...	success
29-3-2012 13:41:14	3	AppDim: reading values	success

### Timestamp

The time the feature was read or written or the time the command was sent. The format of the timestamp is: <date> <time>.

### Address

The short address to which the feature or command was sent. In case **Broadcast** is mentioned, all devices are addressed.

### Description


The name of the feature or the actual DALI command.

### Result

Result of the communication.


## 12.22 Setting preferences

MultiOne has a preferences window that allows you to customize the way MultiOne works. To access the preferences window select **Tools** → **Preferences**.

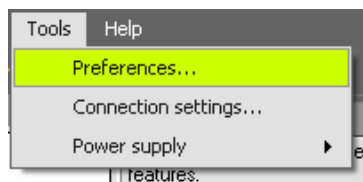

The **Preferences** window that pops up allows you to set MultiOne preferences.



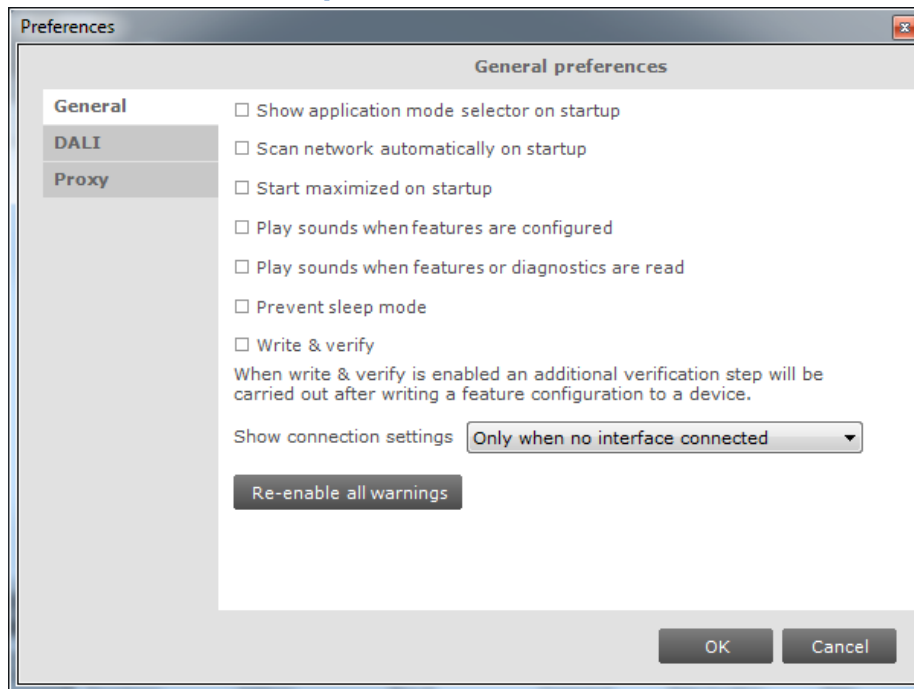



## 12.22.1 General preferences




The following list summarizes the available preferences and gives an explanation for each.

- **Show application mode selector on startup.** When MultiOne is started you are presented with a screen that allows you choose an application mode, based on the tasks you would like to perform. You can disable this screen by clearing the **Show application mode selector on startup** check box. Changing this settings only takes effect once MultiOne is restarted.
- **Scan network automatically on startup.** By selecting this check box MultiOne will automatically initiate a network scan on startup. Changing this settings only takes effect once MultiOne is restarted.
- **Start maximized on startup.** By selecting this checkbox MultiOne will be started full screen. Changing this settings only takes effect once MultiOne is restarted.
- **Play sounds when features are configured.** When this check box is selected, MultiOne will make a sound when a feature configuration is (un)successfully written to a driver.
- **Play sounds when features, diagnostics or energy meter are read.** When this check box is selected, MultiOne will make a sound when a feature configuration is (un)successfully read from a driver, when energy meter or when diagnostics are (un)successfully read from a driver.



- **Prevent sleep mode.** By selecting this check box MultiOne will prevent the PC or laptop from automatically entering the sleep mode as long as MultiOne is active.
- **Write & verify.** By default, MultiOne will write parameters to the connected device(s) without checking the state of the device afterwards. By enabling **Write & verify** you force MultiOne to perform an additional verification step by reading back the written parameters immediately after writing. If the received values differ from the parameters that were written, MultiOne will alert you that there is a deviation between MultiOne and the device.  
The **Write & verify** uses different status icons than **Write**. When a **Write & verify** action is successful the icon will be totally green . When the verify action has failed the entire icon will become red.  A pending action will be displayed as a grey icon.  It is also possible that a part of the **Write & verify** fails. To help indicate where the action failed, two extra icons exist. If the first half of the icon is red and the second part is grey,  then the write action failed. When the first part is green and the second part is red,  then the read action has failed. It is possible to have both the Write & verify as orange,  this means that the feature might not be configured correctly because the program could not verify the result.
- **Show connection settings.** Changing this setting allows you to control the appearance of Connection Settings window when MultiOne starts. The following options are possible:
  - Only when no interface connected:** Connection Settings window will be shown on startup only when there are no interfaces connected.
  - Always on startup:** Connection Settings window will always be shown on startup.
  - Never on startup:** Connection Settings window will never be shown on startup.
- **Re-enable all warnings.** MultiOne produces a number of warnings that you can disable by selecting their **Don't show this message again** check box. If you would like to reset all suppressed warnings click the **Re-enable all warnings** button.


## 12.22.2 DALI

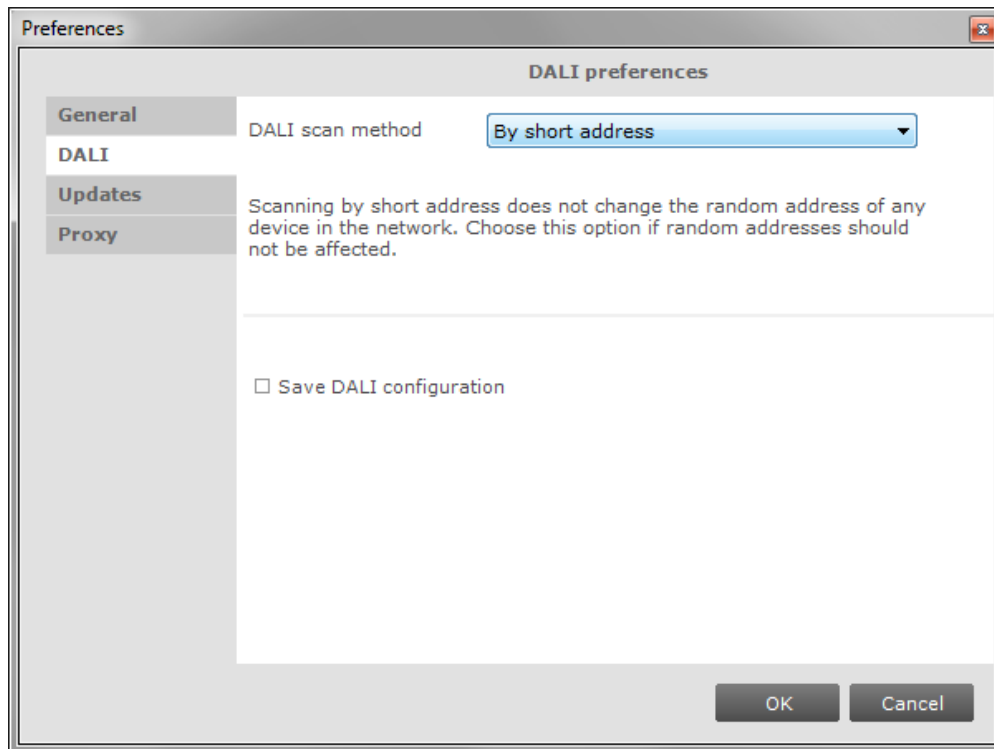

- **DALI scan method.** Changing this setting allows the user to control the way in which a DALI network is scanned. The following options are possible:
  - By short address:** DALI devices are scanned by their short address.
  - By random address:** DALI devices are scanned by their random address.
- **Save DALI configuration.** Checking this setting give the users the ability to save DALI settings when saving a feature file. By clearing this check box, the save DALI settings option will not appear when saving a feature file.


For more details on the DALI scan methods, see [Identifying devices](#).

### 12.22.3 Updates

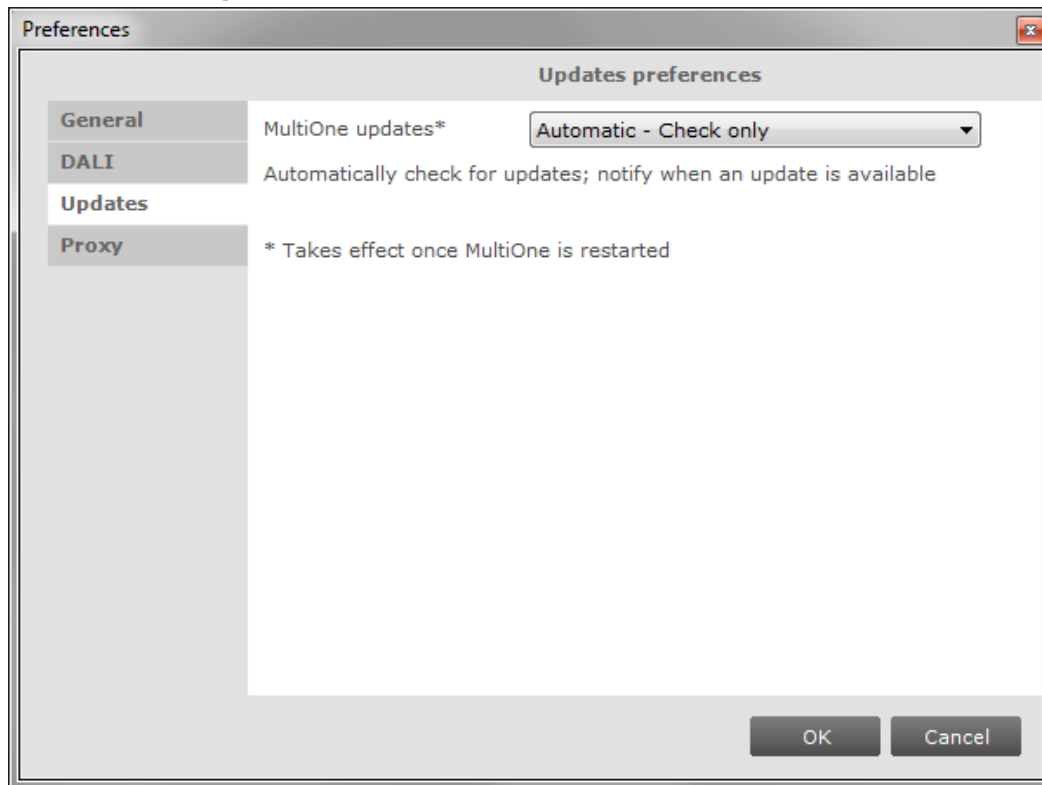

- **MultiOne updates.** Changing this setting allows the user to control the update method of MultiOne. The following options are possible:
  - Automatic – Check, download, install:** MultiOne will automatically check for updates and if available download and install them automatically.
  - Automatic – Check, download only:** MultiOne will automatically check for updates and if available download them. The user then has to agree to let MultiOne update itself.
  - Automatic - Check only:** MultiOne will automatically check for updates and notify the user if a new version is available. The user can then allow MultiOne to download and install the update.
  - Manual:** MultiOne will do nothing and the user has to force MultiOne to check, download and install any update.

## 12.22.4 Proxy

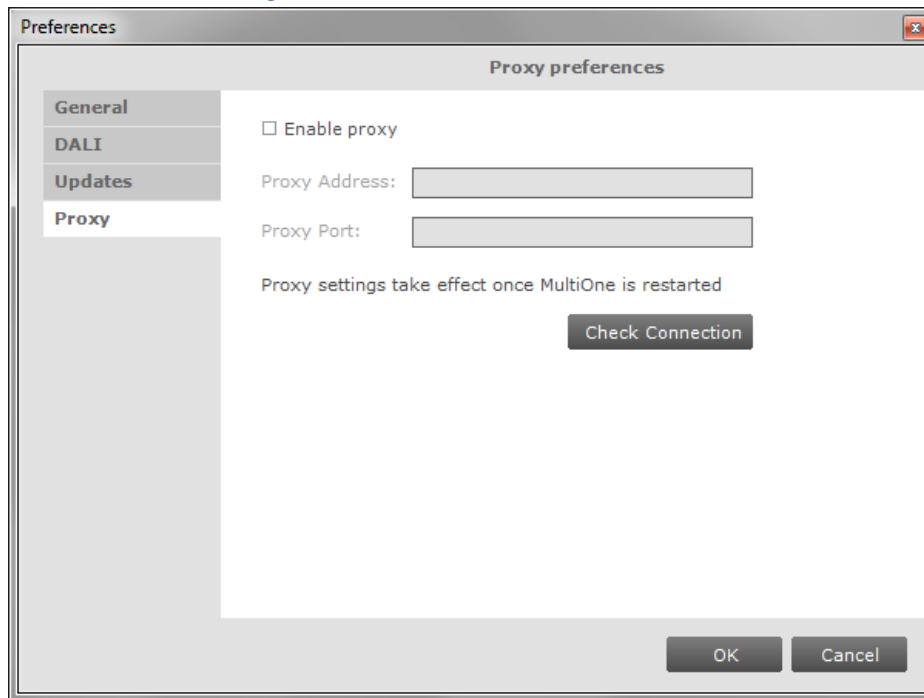

- **Proxy address**

The proxy address that needs to be used by MultiOne.

Examples:

1.1.1.1 or proxy.mycompany.com

http://1.1.1.1 or https://1.1.1.1

https://proxy.mycompany.com or https://proxy.mycompany.com

- **Proxy Port**


The port that needs to be used by MultiOne

Examples:


80, 8080, 8888

## 12.23 Manually selecting the USB2DALI interface

MultiOne will automatically detect the USB2DALI interface that is connected to the PC. However when multiple interfaces are connected it will use the interface on the port that is found first. It is possible to manually change the port that is used by selecting **Tools** → **Connection settings**.

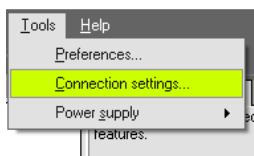


In the pop-up window it is then possible to select the desired port.

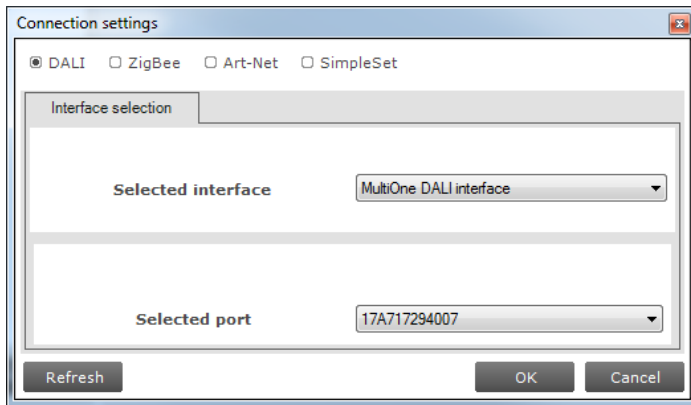

Notice! The unique id of the interface is shown at the port selection. This, to be able to identify which interface is used by which MultiOne instance (when configuring devices in parallel using multiple instances of MultiOne).

## 12.24 Enabling/Disabling the power supply of the USB2DALI interface

The USB2DALI interface will automatically detect if the DALI bus is powered by another device (for example a DALI power supply). If the DALI network is not powered, it will use its internal power supply.

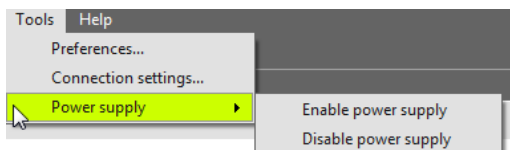

If, during operation, the DALI network is changed in a way that it requires the USB2DALI interface to switch on or off its internal power supply, you can do so using the option **Tools → Power supply**.

## 12.25 Supported features

The table below gives an overview of all features that are supported by MultiOne and to which product groups they apply.

Table 7 Supported features

Device feature	Product group				
	LED		HID	FLUO	CONTROL
	Indoor	Outdoor			
<b>0-10V / 1-10V (SR bridge)</b>					X
<b>0-10V / 1-10V (LED driver)</b>		X			
<b>ActiLume General</b>					X
<b>ActiLume Mode</b>					X
<b>ActiLume Scene</b>					X

<b>Active Cooling</b>	X			
<b>Adjustable Light Output</b>			X	
<b>Adjustable Output Current</b>	X	X		
<b>Adjustable Output Current Multi-Channel</b>	X	X		
<b>Adjustable Startup Time</b>		X		
<b>AmpDim</b>		X	X	
<b>Constant Light Output</b>	X	X	X	
<b>Constant Light Output Multi-Channel</b>	X	X		
<b>Coded Light</b>	X			
<b>Coded Light Randomize</b>	X			
<b>Coded Mains</b>	X	X		
<b>Coded Mains Standalone Receiver</b>				X
<b>Correlated Color Temperature</b>	X	X		
<b>Correlated Color Temperature Dual Channel</b>	X	X		
<b>Corridor Mode</b>	X			X
<b>DALI 102</b>	X	X		
<b>DALI 202</b>	X	X		
<b>DALI Power Supply</b>	X			
<b>Daylight override / Daylight switching</b>				X
<b>Device Info</b>		X		
<b>Dimming Interface</b>		X		X
<b>Driver addressing</b>		X		
<b>Driver Temperature Limit</b>		X		
<b>Dwell Time</b>				X
<b>Dynadimmer</b>		X	X	
<b>DC Emergency</b>				X
<b>End Of Life indication</b>		X		
<b>FCC</b>				X
<b>Field Task Tuning</b>				X
<b>Field Task Tuning / Occupancy Sensing / Daylight Harvesting</b>				X

<b>Lamp Burn-in</b>				X
<b>Lamp Selection</b>			X	X
<b>Light Source Operating Hours</b>		X		
<b>LineSwitch</b>		X	X	
<b>Load Fault Indicator Thresholds</b>				X
<b>Logical Signal Input</b>	X			
<b>Lumen Level</b>	X	X		
<b>Luminaire (Fixture) Information</b>	X	X		
<b>Luminaire Production Test</b>				X
<b>LumiStep</b>		X		
<b>Min Dim Level</b>	X			
<b>Motor Control</b>				X
<b>Module Temperature Protection</b>	X	X		
<b>NTC on LEDset</b>	X	X		
<b>Occupancy Sensing / Daylight Harvesting</b>				X
<b>Occupancy sharing / Group light behavior</b>				X
<b>OEM Write Protection</b>	X	X		
<b>Push Button Unit LCU2070</b>				X
<b>Push Button Unit LCU2071</b>				X
<b>Quick Lamp Start</b>				X
<b>Relay Switched Output</b>				X
<b>Self Contained Emergency</b>	X			
<b>Set Lamp On Time</b>	X			
<b>SR Power Supply</b>	X			
<b>Step Dimming</b>	X	X		
<b>Summary</b>	X	X	X	X
<b>Touch and Dim</b>	X			X

## 12.26 Device-specific technical descriptions

For a detailed technical description of the characteristics of the devices, please visit the product-specific Philips web sites:

Table 8 Product-specific Philips web sites

Product group	Visit:
LED	<a href="http://www.philips.com/Xitanium">www.philips.com/Xitanium</a>
HID	<a href="http://www.philips.com/Xtreme">www.philips.com/Xtreme</a>
FLUO	<a href="http://www.philips.com/HFR-Intelligent">www.philips.com/HFR-Intelligent</a>
CONTROL	<a href="http://www.philips.com/Actilume">www.philips.com/Actilume</a>

## 12.27 Error handling

### 12.27.1 Reporting and correction of errors/warnings when reading from a feature configuration file

When, after opening a feature configuration file, incorrect parameters are detected, MultiOne tries to correct these parameters for the selected (virtual) device. When a correction is made, a red border will be shown. In cases when no logical correction can be made, an orange border will be shown.

### 12.27.2 Reporting of errors when reading from a device

When after reading from a device a mismatch is signaled between the parameters of the device and MultiOne, MultiOne will not correct the parameters, but will show a red border.

### 12.27.3 Reporting of errors when entering incorrect values in a feature

Entering an incorrect value for a parameter will be indicated by a red border.


## 12.28 Troubleshooting

**Problem:** After starting MultiOne, no devices are displayed.

**Solution:** Click the **Scan network** button on the **Network** panel to start discovering the devices in the network. If the devices connected have already a DALI short address this will not be changed. Devices without a short address will be programmed with a short address. When the **Commission** button is clicked, the short addresses of all connected devices will be renewed, whether they already had a short address or not.


**Problem:** I would like to assign a specific short address to a device.

**Solution:** First scan the network for devices. Right-click the device you would like to give a short address and select **Set short address**.

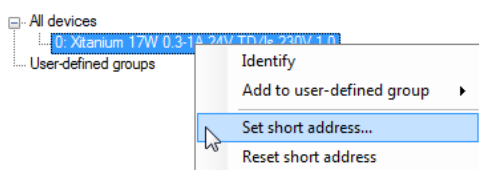




A dialog window will appear in which you can enter the desired short address.

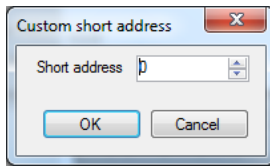


Click **OK** to program the short address into the device.

**Problem:** I would like to remove the short address of a device.

**Solution:** First scan the network for devices. Right-click the device whose short address you would like to remove and select **Reset short address**.

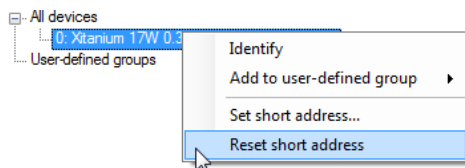


You will be informed that the short address was reset.

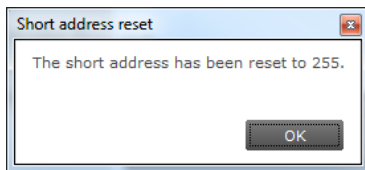

**Problem:** I would like to configure the special features of the connected device.

 **Solution:** After scanning the network for devices, a device has to be selected by clicking it in the **Network**. Select the **Device features** tab. The related features will appear. To update the view to the actual status of the features, click **Read** on the toolbar. If you now change any of the features, and want this to be stored into the device, click **Write** on the toolbar.

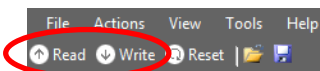

**Problem:** I would like to know more technical details of a device.

**Solution:** Please refer to the Philips website for more detailed information

## 13 Keyboard shortcuts


Keyboard shortcuts can make it easier to work with MultiOne without using the mouse.

Table 9 Keyboard shortcuts


	USB2DALI interface	USB2ZigBee interface
<b>The File menu</b>	Working with feature configuration files	
<b>Ctrl+O</b>	Open a feature configuration file	Not supported
<b>Ctrl+S</b>	Save a feature configuration file (Save)	Not supported
<b>Ctrl+Shift+S</b>	Save a feature configuration file (Save As)	Not supported
<b>Alt+F4</b>	Exit MultiOne	
<b>The Action menu</b>	<b>Working with devices</b>	
<b>Ctrl+D</b>	Scan network	Scan area
<b>Ctrl+Q</b>	Commission	Not supported
<b>Ctrl+R</b>	Read from current device	Not supported
<b>Ctrl+W</b>	Write to current device	Not supported
<b>The Tools menu</b>		
<b>Ctrl+M</b>	Open the Application mode selector	
<b>The Help menu</b>		
<b>Shift+F1</b>	Open the Getting started document	
<b>F1</b>	Open the User manual	

## 14 Software Update



MultiOne has the possibility to update itself to a newer version. This can be done either automatically or manually and can be set in the preference window, see the Setting Preferences for more info.

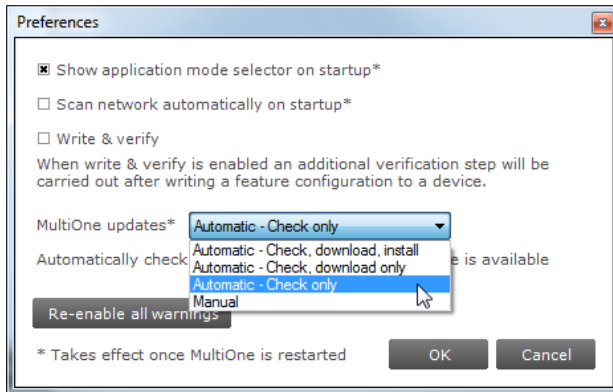


If the preference is set to Manual then the user can check for an update on MultiOne by selecting **Help** → **Check for updates** option.

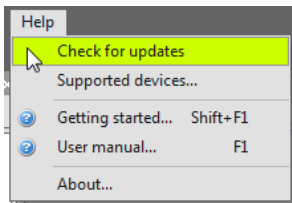

 
After a manual update check, or by using the automatic options, the update status near the **Help** menu will show if a new version is available. The user can then decide to continue downloading/updating by either using the update status or the **Help** menu to carry on.

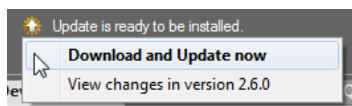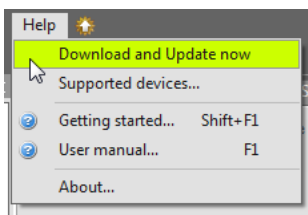

 
After downloading the update status will inform the user to restart to continue.

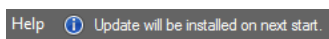

Restarting MultiOne will install the update.

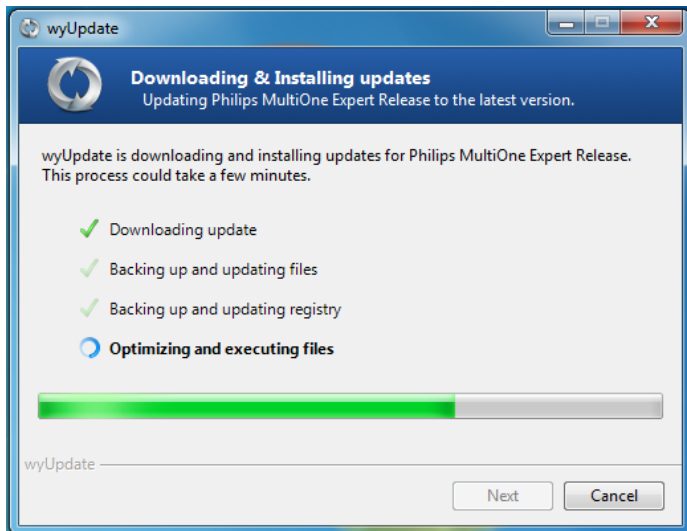

 A successful update of MultiOne will be shown in the update status.

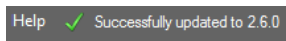

## 15 Copyright

Copyright © 2018 Philips Lighting Holding B.V..

All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without prior written permission from Philips. Brands and product names are trademarks or registered trademarks of their respective companies.

## **16 Disclaimer**

Philips makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Philips assumes no responsibility for any error that may appear in this document. Philips makes no commitment to update nor to keep current the information contained in this document.

## **17 Limitations of damages**

The vendor will not be liable for any indirect, special, incidental or consequential damages (including damages for loss of business, loss of profits, or the like), whether based on breach of contract, tort (including negligence), product liability or otherwise, even if the vendor or its representatives have been advised of the possibility of such damages and even if a remedy set forth herein is found to have failed its essential purpose.

## 18 List of tables

Table 1 HID diagnostics .....	105
Table 2 LED diagnostics .....	107
Table 3 Subset of LED diagnostics .....	109
Table 4 Motor control diagnostics .....	110
Table 5 Emergency diagnostics .....	110
Table 6 Energy Meter .....	112
Table 7 Supported features .....	125
Table 8 Product-specific Philips web sites.....	128
Table 9 Keyboard shortcuts .....	130



## 19 Index

0-10V / 1-10V (LED driver) .....	42, 125
0-10V / 1-10V (SR bridge) .....	41, 125
ActiLume General .....	43, 125
ActiLume Mode .....	44, 45, 125
ActiLume Scene .....	46, 125
Active Cooling .....	46, 126
Adjustable Light Output .....	47, 126
Adjustable Output Current .....	48, 56, 126
Adjustable Output Current Multi-Channel .....	48, 56, 126
Adjustable Startup Time .....	49, 108, 126
AmpDim .....	50, 63, 126
Coded Light On and Off .....	50, 126
Coded Light Randomize .....	113, 126
Coded Mains .....	51, 52, 63, 126
Coded Mains Standalone Receiver .....	52, 126
Constant Light Output .....	52, 53, 54, 55, 56, 69, 73, 107, 126
Constant Light Output Multi-Channel .....	55, 56, 126
Correlated Color Temperature .....	56, 57, 126
Correlated Color Temperature Dual Channel .....	57, 126
Corridor Mode .....	51, 58, 59, 60, 126
DALI 102 .....	59, 126
DALI 202 .....	60, 126
DALI Power Supply .....	61, 126
Daylight override / Daylight switching .....	61, 126
DC Emergency .....	61, 62, 126
Device Info .....	62, 126
Dimming Interface .....	62, 63, 64, 126
Driver addressing .....	64, 126
Driver Temperature Limit .....	65, 126
Dwell Time .....	66, 126
Dynadimmer .....	63, 67, 79, 126
End Of Life indication .....	69, 73, 126
Energy Meter .....	36, 111, 112
FCC .....	70, 126
Field Task Tuning .....	70, 71, 126
Field Task Tuning/ Occupancy Sensing / Daylight Harvesting .....	126
Lamp Burn-in .....	72, 127
Lamp Selection .....	69, 72, 127
Light Source Operating Hours .....	69, 73, 127
LineSwitch .....	63, 73, 74, 127

Load Fault Indicator Thresholds.....	75, 127
Logical Signal Input.....	75, 127
Lumen Level.....	77, 127
Luminaire (Fixture) Information.....	78, 127
Luminaire Production Test.....	79, 127
LumiStep.....	77, 79, 127
Min Dim Level.....	80, 127
Module Temperature Protection.....	82, 107, 108, 127
Motor Control.....	81, 127
NTC on LEDset.....	83, 127
Occupancy Sensing / Daylight Harvesting.....	61, 71, 84, 126, 127
Occupancy sharing / Group light behavior.....	85, 127
OEM Write Protection.....	85, 127
Push Button Unit LCU2070.....	86, 127
Push Button Unit LCU2071.....	86, 127
Quick Lamp Start.....	87, 89, 127
Relay Switched Output.....	87, 127
Self Contained Emergency.....	88, 127
Set Lamp On Time.....	111, 127
SR Power Supply.....	61, 89, 127
Step Dimming.....	89, 127
Touch and Dim.....	58, 91, 95, 127