







	 Espresso Pod Holder	HD7001/00	HD7001/99	HD7002/00	HD7003/00	HD7003/01	HD7003/10	HD7003/11	HD7003/99
SENSEO® Original 	HD7803, HD7804, HD7805, HD7806, HD7810, HD7811, HD7812, HD7813, HD7814, HD7816, HD7817, HD7818, HD7819, HD6552, HD6553, HD6554, HD6555, HD6556	✓	✓	✗	✗	✗	✗	✗	✗
SENSEO® Original Plus 	CSA210 CSA220	✓	✓	✗	✗	✗	✗	✗	✗
SENSEO® Select 	CSA230 CSA240 CSA250	✗	✗	✗	✗	✗	✗	✗	✗
SENSEO® Switch 	HD7891 HD7892 HD6590 HD6591 HD6592 HD6593 HD6594 HD6596 HD6597	✗	✗	✗	✗	✗	✗	✗	✗
SENSEO® Viva Café 	HD7821, HD7825, HD7826, HD7827, HD7828, HD7829, HD7831, HD7833, HD7835, HD7836, HD6560, HD6561, HD6562, HD6563, HD6564, HD6566, HD6569	✗	✗	✗	✗	✗	✓	✓	✓
SENSEO® Quadrante 	HD7860, HD7862, HD7863, HD7864, HD7865, HD7866, HD7868	✗	✗	✗	✗	✗	✓	✓	✓

SENSEO® Latte Duo 	HD7855, HD7856, HD7857, HD7858, HD6570, HD6574	X	X	X	X	X	X	X	X
SENSEO® Up 	HD7880, HD7884	X	X	X	X	X	✓	✓	✓
SENSEO® New Generation 	HD7820, HD7822, HD7823, HD7824, HD7830, HD7841, HD7842, HD7843	X	X	X	✓	✓	✓	✓	✓
SENSEO® Aluminium 	HD7840	X	X	✓	X	X	X	X	X
SENSEO® Latte Select/Cappuccino 	HD7850, HD7852, HD7853, HD7854	X	X	X	X	X	X	X	X
SENSEO® Twist 	HD7870, HD7871, HD7872, HD7873, HD7874	X	X	X	X	X	X	X	X