

### 1. Insert the wireless USB adapter

If applicable, insert the PTA209 Wireless Audio Adapter into one of the USB ports of the TV and switch the TV ON.

 
### 9109 and 9809 TV models

For the 9109 and 9809 TV models, the PTA209 is not required. These TVs contain an integrated system that will communicate with the wireless speaker.

### 2. Insert the power cable


Place the wireless speaker near the TV. For an optimal connection, place the speaker within a range of maximally three meters from the TV.

Insert the power cable in the back of the wireless speaker and the wall socket.

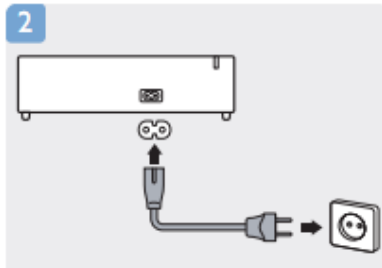

### 3. Switch the wireless speaker ON

 The wireless speaker- LED indicator button will blink blue slowly. To pair the wireless speaker with TV, press and hold the blue LED indicator button for 3 to 6 seconds. The blue LED indicator button will now blink rapidly to indicate that it is ready to be paired to the TV. If the light flashes slowly, hold the button a few seconds longer, until it starts flashing rapidly.

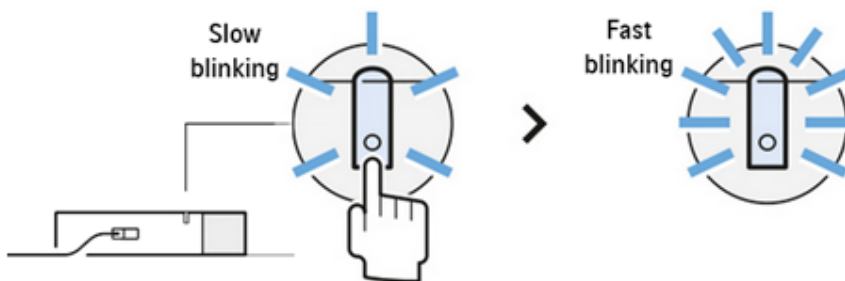

### 4. On-screen connection message

After the button on the speaker was pressed, the TV will show the message:

“A Wireless Audio Adapter is detected. Do you want to pair with a wireless speaker now?”

Make sure the speaker is switched ON and placed within range”

- Select [Yes] and press “OK” on the remote control of the TV. The speaker has now been paired with the TV.



**For 7509 TV models only:** If the message in step 4 does not prompt automatically,

- Re-insert the PTA209 dongle again
- Press the “Home” button on the remote control of the TV and select:  
[Setup] > [TV settings] > [Sound] > [Wireless speaker] > [Add new speaker] > [OK]

## 5. Done!

If the LED indicator light continuously stays blue, it means the wireless speaker is successfully connected to the TV.

### Wireless network - General recommendations

To strengthen the signal from the TV to the speaker, make sure that:

- There are no large metal objects or concrete walls in between the TV and the speaker. These can shield the signal and cause noise or silence on the wireless speaker
- Routers, microwave ovens, cordless telephones or Bluetooth devices are not used in the space between the TV and the speakers. These devices can cause temporary noise or silence on the wireless speaker. A mobile phone (with or without Bluetooth) should have no significant impact
- The PTA209 is inserted into the bottom USB port of the TV (see step 1) to get the strongest signal.
- If needed, use an USB extension cable to connect the PTA209 to the TV.