

Changing Sensitivity Mode



AC4012 / 14

Press timer simultaneously put the power plug in the power socket.
The purifier beeps twice and one of the timer lights (1 Ex Sensitive, 4 Sensitive , 8 Standard) goes on to show current sensitivity level .
Press Timer button to adjust sensitivity level



AC4072

Press the AIR QUALITY button and simultaneously put the mains plug in the wall socket.
The purifier beeps twice and one of the fan speed lights (1 Ex Sensitive, 2 Sensitive, 3 Standard) goes on to show current sensitivity level .
Press Fan speed button to adjust sensitivity level



AC4372

Press the Fan speed and Light button simultaneously put the mains plug in the wall socket.
The purifier beeps twice and one of the fan speed lights (1 Ex Sensitive, 2 Sensitive, 3 Standard) goes on to show current sensitivity level .
Press Fan speed button to adjust sensitivity level , Press Power button for 3 secs it will save settings



AC4081

Press the Fan speed and humidifier button simultaneously put the mains plug in the wall socket.
One or more fan speed lights goes on to show current sensitivity level .
1 Extra Sensitive , 2 Sensitive , 1+2 – Standard
Press Fan speed button to adjust sensitivity level , Press Power button for 2 secs it will save settings