





# Single, compact, cost-effective fixture control

Philips EasySense fixture-mount sensors for models SNS100 and SNS102

# Contents

Introduction to this guide	3
More information or support	3
Warning and instructions	3 3 2
Introduction of EasySense	_
Product characteristics	5
EasySense overview	5
NFC antenna	5
RF antenna	
Infared (IR) receiver	5
Motion detector	5
Sensor view shield	6
Light sensor	7
LED indicator	8
System startup behavior/auto-calibration	9
System startup behavior	S
Auto-calibration routine	S
Lighting control	10
Terminology used in this chapter	10
Daylight harvesting	12
Occupancy sensing	13
Manual dimming override	16
Phone-based app and configuration	17
Mechanical design-in	18
Mounting to a luminaire	18
Wiring diagram with Philips Advance	
Xitanium SR LED driver	19
Sensor position	2
EasySense with multiple SR	
drivers 1:N application	22
FAQ	23
Contact details	25
FCC/IC compliance statement	26
Disclaimer	27

Introduction to This Guide

# Introduction to this guide

Thank you for choosing the Philips EasySense sensor. In this guide fixture manufacturers will find the information required to design this product into a luminaire and configure it to suit specific applications. This design-in guide covers sensor functionality, mechanical mounting, wiring details, configuration and commissioning (grouping) method, application notes and frequently asked questions. For sensor specifications, please see the datasheet available at www.philips.com/easysense.

#### More information or support

For further information or support, please consult your local Philips sales representative or visit www.philips.com/easysense.

## Warnings and instructions

- · EasySense must be used only with Philips Advance Xitanium SR LED driver.
- · Do not apply mains power directly to the sensor.
- Do not cover the sensor during operation or mount the sensor recessed.
- External infrared light source in the space might have influence on occupancy detection.
- Incorrect location of sensor (e.g., outside the view angle of the occupancy sensor)
   will result in occupancy detection not functioning correctly.
- When recalibration is needed for adapting to environment changes, make sure the SR driver is power cycled. See System startup behaviors/Auto-calibration section for details.
- Faulty settings of the sensor might result in undefined startup behavior; make sure field task level is set higher than the background light level.
- Make sure the sensor, especially the occupancy detection lens, is protected from damage during shipment and handling.
- The application area of EasySense is designed for a typical indoor environment (open/private offices, conference rooms, classrooms, corridors, etc.) in normally heated and ventilated areas. EasySense has no protection against aggressive chemicals or water.
- Make sure the the Easysense RF antenna is not covered by metal for proper RF communication.

# Introduction of EasySense


The Philips EasySense fixture-mount sensor is the ideal solution for per-fixture, stand-alone control of new light fixtures. It combines occupancy sensing, daylight harvesting and field task tuning in a single, compact package for easy OEM fixture assembly. EasySense operates with the established Philips Advance Xitanium SR LED driver standard to make a simple two-wire connection between sensor and driver, thus eliminating the need for multiple components and auxiliary devices. The result is a cost-effective and easy-to-design-in solution, ideal for energy-savings and code-compliancy strategies. While the sensor pre-set parameters are appropriate for most applications, an intuitive app makes configuration and commissioning (grouping) during installation fast and easy.

EasySense with Basic Grouping (SNS 102) functionality enables addition of qualified wireless switches. Up to 40 sensors can be grouped to a switch using Philips field apps. In addition to easily adding user control to a space, the grouping feature facilitates auto-off/manual-on and auto-off/partial-on use cases.

### Product characteristics

#### EasySense overview

EasySense contains multiple functions in one housing and uses two wires to connect with an SR driver. (See wiring diagram in the Mechanical design-in section.) Functions include:

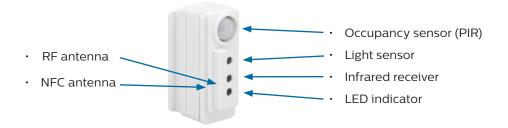

EasySense is designed for a typical indoor environment (open/private offices, conference rooms, classrooms, corridors, etc.) in normally heated and ventilated areas. EasySense has no protection against aggressive chemicals or water. The sensor is normally mounted to a luminaire and is optimized for a sensor mounting height of 8ft to 10ft (2.5m to 3m).

#### NFC antenna

The EasySense sensor can be configured through NFC (near field communication) using a smart phone with the EasySense NFC app. NFC is the set of protocols that enables electronic devices to establish radio communication with each other by touching the devices together or bringing them into proximity to a distance of typically 0.4"/1cm or less. Parameters for lighting controls can all be configured. (See the Lighting control section.)

#### RF antenna

The RF antenna allows communication via RF technology. It should not be covered by metal and should be exposed to free air to ensure there is sufficient range. This functionality is not available in SNS100.

#### Infared (IR) receiver

The infrared receiver serves as a communication portal for the commissioning tools. EasySense with grouping functionality is enabled and commissioned (grouping) by a smart phone with the EasySense IR app. This functionality is not available in SNS100.


#### Motion detector

The occupancy sensor is a PIR (Passive Infrared) sensor that detects movement with an X-Y cross-area under an angle of  $X = 72^{\circ}$  and  $Y = 86^{\circ}$ . Two types of movements are defined in NEMA WD7 as follows:

Major movement: movement of a person walking into or through an area.

Minor movement: movement of a person sitting at an office desk reaching for a telephone, turning the pages in a book, opening a file folder, picking up a coffee cup, etc.

When installed in a typical office ceiling at H, the sensor is sensitive to minor movements within X1 by Y1 area. It will respond to minor movements down to a few centimeters at the task area of a desk and is sensitive to major movements within a range of X2 by Y2. The maximum recommended height to place the sensor in the ceiling is 10ft/3m to assure movement coverage and detection. The PIR sensor reacts on movement by means of a temperature difference, such as the human body temperature versus its surrounding temperature. A car that just starts its engine is not seen by the PIR nor does the PIR see people sitting within the car or a forklift truck. Therefore, it is recommended not to use EasySense in outdoor, parking or industrial applications. Please refer to the EasySense datasheet for coverage area details.

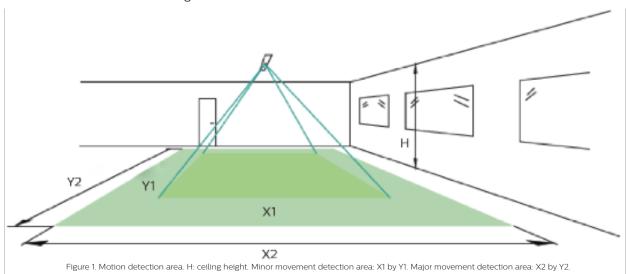

#### Sensor view shield

The sensor comes with an occupancy view shield that can be used to block the movement detection by the sensor in a certain area. The shield comes inverted. (See Figure 2.) This view shield can be pulled out, flipped and inserted back in the sensor and then rotated so the correct area is shielded off from the detection area. If such shield is not needed in the application, it can be easily pulled out from the sensor or left inverted.



Figure 2. Sensor view shield


EasySense
Design-in Guide
Product
Characteristics

.....

#### **Light sensor**

The light sensor is a photo diode that reads average light level captured under an angle of approximately 40°. The intensity of the illuminance depends on the amount of artificial and/or natural light supplied in the office, as well as how this light is reflected toward the ceiling/sensor. The EasySense converts the illuminance signal into ON/OFF or dimming commands to the Xitanium SR driver in order to maintain a constant light level on the desk.

The sensor should be installed with a minimum distance of 0.6m/2ft to the window to avoid the sensor looking outside. When the sensor is mounted too close to the window it will look partly outside. Sun reflection from cars or snow can reflect directly into the sensor. The sensor will then measure such high illumination levels that it will drive the artificial light to its minimal level or even switch off the artificial lights. The optimum distance [Y] from the window to EasySense can be obtained from Figure 4. This graph shows the relation between the distance from the window to the sensor [Y] and the height [H] of the sensor (H, height of the sensor measured from ceiling to bottom of window sill).

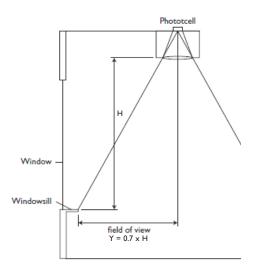



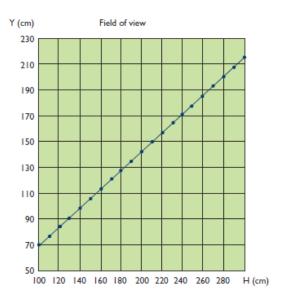


Figure 4. Sensor mounting height from window sill (Y) vs. sensor horizontal distance from window sill (H).

#### **LED** indicator

The product contains an LED indicator to help comply with California Title 20 requirements. The LED indicator is enabled by default, and it can be disabled through the app. The behavior of the LED is as follows:

Yellow LED on: = vacancy & light sensor are functional.

Red LED on: = motion is detected and hold time is not expired yet.

EasySense Design-in Guide

System Startup Behavior and Auto-calibration

# System startup behavior and auto-calibration

#### System startup behavior

When the sensor is powered (mains of driver is switched on or a momentary power dip is detected by the sensor), the sensor performs an auto-calibration routine.

#### **Auto-calibration routine**

Below describes the calibration routine.

- Light is switched on at maximum light level set by max of AOC (adjustable output current of the driver).
- · Light dims down to minimum dimming level.
- · Sensor stores the value detected by the light sensor.
- · Light dims up to maximum light level which is set by the field task level.
- · Sensor stores the value detected by the light sensor.
- · A calculation is executed, and calibration set point will be determined.
- · Light dims down to the task level that meets the set point.



#### Warning

Make sure no objects are blocking the sensor's view and no surface reflectance changes occur in the sensor's view during auto calibration.

# Lighting control

Easysense enables stand-alone LED lighting systems with integrated occupancy sensing and daylight harvesting. Grouping control is activated through the Philips field app (Easysense IR) and adding wireless switches to the group. The wireless switches also address the use-cases of manual on/auto off, partial on/auto off and manual dimming override.

#### Terminology used in this chapter

All parameters are stored in the sensor, and most of the parameters can be configured through NFC or IR.

- · Fade to switch on/off time
- · Hold time
- · Grace fading time
- · Prolong time
- · Field task level
- · Background level
- · Occupancy mode selection
- Eco on level
- · Occupancy mode selection

**Fade to switch-on time** is the time (T1 to T2) from the point at which occupancy is detected until the lights dim up to the max light output. This timer is set to 0.7 sec and is not configurable.

**Hold time** is the time (T3 to T4) from the point at which the last movement has been detected (e.g., occupant left the room) until grace time starts. This timer is set to 15 minutes by default and can be configured from to 1 - 120 minutes.

**Grace fading time** is the time from T4 to T5 during which the lights are being dimmed down from the current light level to the background level. By default, grace fading time is 10 sec and can be configured to 0 - 25 seconds.

**Prolong time** is the time from T5 to T6 at which the background level is maintained at a fixed level. Default prolong time is 15 minutes and can be configured from 0 – infinity.

**Fade to switch-off time** is the time (T6 to T7) for the lights to fade from background level to off after prolong time is expired. This timer is set to 0.7 sec and is not configurable.

**Field task level** is used to configure the required light level on the task plane. Setting this to 100% enables the installed maximum light level. A lower percentage level can be configured to set the new maximum light level of the luminaire through the app. (See Task tuning.)

**Eco on level** is a configurable switch on light level. This parameter also enables partial-on occupancy based control to meet energy code. Eco on level should be a percentage level between the field task level and background light level.

**Background level** is a light level significantly lower than 100%, used to save energy when space is not occupied.

**Occupancy mode selection** can be configured to meet energy code and maximize control flexibility with adding wireless switches. The mode options are auto on/auto off, manual on/manual off and manual on/auto off.

#### Occupancy-based lighting control

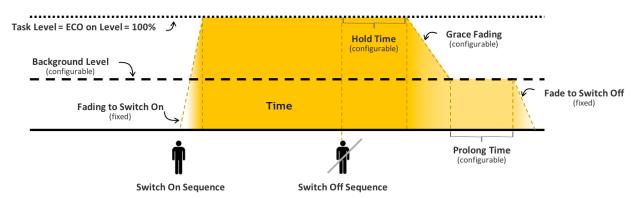


Figure 5. Occupancy-based lighting control switching sequence.

Auto on/off mode: Lights are switched on and off automatically based on occupancy detection and time delay settings.

Manual on/auto off: Lights are turned on manually through a wireless switch and turned off automatically, as a vacancy sensor.

Manual on/off: Lights are turned on and off manually through a wireless switch while occupied.

#### Task tuning

Field task tuning is a feature to reduce the maximum output of a fixture to a certain percentage of the AOC (adjustable output current) of the driver. After installation, there is a possibility that the task light level is not set according to the end user needs (light level too high). Task light level can be adjusted by the installer or building maintenance personnel to a value between 5% and 100% of the max setting through the app.

#### **Daylight harvesting**

Daylight-based control is enabled by default. The light sensor auto-calibrates when power to the driver is cycled. The light level of the luminaire is bound by field task level (maximum light level) and background level (minimum light level). If the background light level is set to be 20%, during daylight harvesting, the light will only dim to 20%.

Daylight-based control is not active after hold time of the occupancy sensor expires. Figures 6 and 7 show examples of lighting control using both daylight and occupancy. In both figures, eco on level = field task level. If eco on level is lower, then the maximum light level will be the eco on level. When the daylight level is low (Figure 6) and an occupant is present, the luminaire light level is the field task level minus the daylight level. Assuming the incoming daylight level is constant, luminaire light level remains the same until hold time expires, then it will fall to the background light level. When the daylight level is high, the luminaire light level is the field task level minus the daylight level. However, when there is an abundance of daylight, the luminaire light level does not dim lower than the background light level (Figure 7).

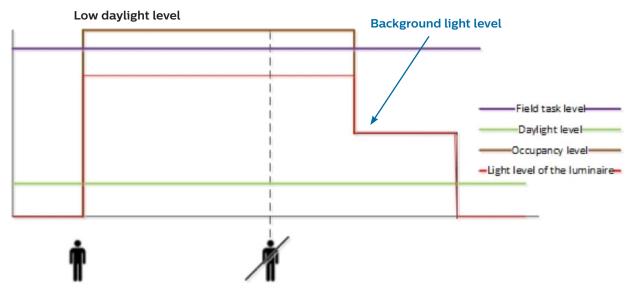


Figure 6. Lighting control behavior with low daylight level.

Light level of the luminaire = field task level - daylight level

#### High daylight level

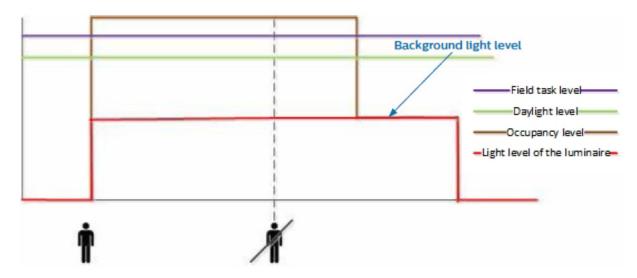


Figure 7. Lighting control behavior with high daylight level.

#### Occupancy sensing

#### Switch on/off sequence

If occupancy is detected, lights are dimmed up to the eco on light level in 0.7 second. When occupancy is not detected anymore, the following lighting switch-off sequence is executed: the sensor will wait until the hold time is expired and then the light fades the background level in grace fading time. The light level is kept at the background level for prolong time. After prolong time expires, the light fades from the background level to off in 0.7 second.

Occupancy-based lighting control is enabled by default for the EasySense, and it can be disabled using an app through NFC or IR.

#### Use case

Max rating of the luminaire: 4000lm

The user configures the sensor parameters through Philips field apps:

Task tuning level = 80% = 3200lm

Eco on level = 70% = 2800lm

Background light level = 20% = 800lm

Min dimming level of driver = 5% = 200lm

Note: All percentage levels refers to the max rating of the luminaire.

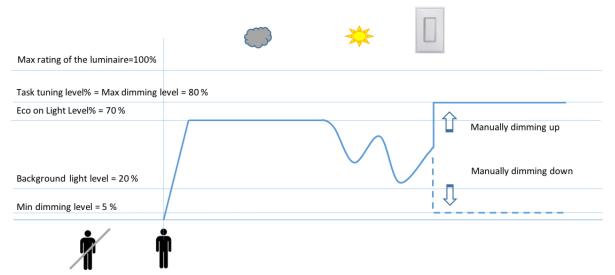


Figure 8. Automatic lighting control with manual dimming override.

The full dimming range of the luminaire is bounded by task tuning and min dimming level. By setting field task tuning = 80% and with driver minimum dimming level = 5%, the luminaire light output range is 3200lm to 200lm. The automatic lighting control range is 2800lm to 800lm by setting the Eco on level to 70% and background light level to 20%. However the wireless switch can be used to control the full dimming range of the light (3200lm  $\sim 200$ lm).

#### Partial-on and partial-off occupant sensing

Easysense sensor offers both partial-on and partial-off occupancy control strategy to meet Title 24 use case through setting a few parameters.

Two means of realizing partial-on occupancy sensing:

- Under auto on/auto off mode: Eco on level (100% by default) can be set less than 100% to automatically switch on the lights partially. It is recommended to set between 50% and 70% to meet Title 24.
- Under manual on mode, the light goes to the eco on level when the switch is pressed.



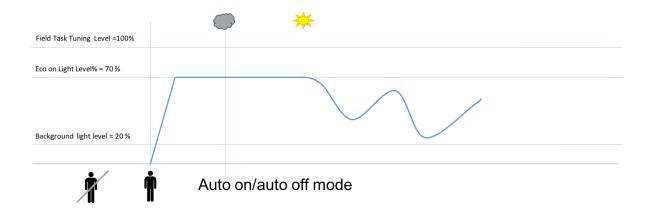


Figure 9. Partial on with auto mode or manual mode.

Partial-off occupancy sensing can be achieved by configuring the prolong time to "infinity" and background light level less than 100% for applications like corridors and warehouse aisle ways.

Manual on/auto off or manual on/manual off mode

#### Manual dimming override

Light level can be tuned into any level between max (task tuning level) and min (minimum dimming level of the LED driver) by pressing the dimming up and dimming down button of the switch.

Light level can be set to an intermediate level by manual dimming override using the wireless switch. When a manual dimming override is performed, daylight-based control is disabled, and light will be on constantly at this level. When the room becomes unoccupied, the light goes to the background light level during prolong time, and if the occupant enters the room before prolong time expires (Figure 10), the light will stay at the level set by the manual dimming override. If the prolong time expires, the light will turn off and go to the eco on level when occupant enters the room (Figure 11).

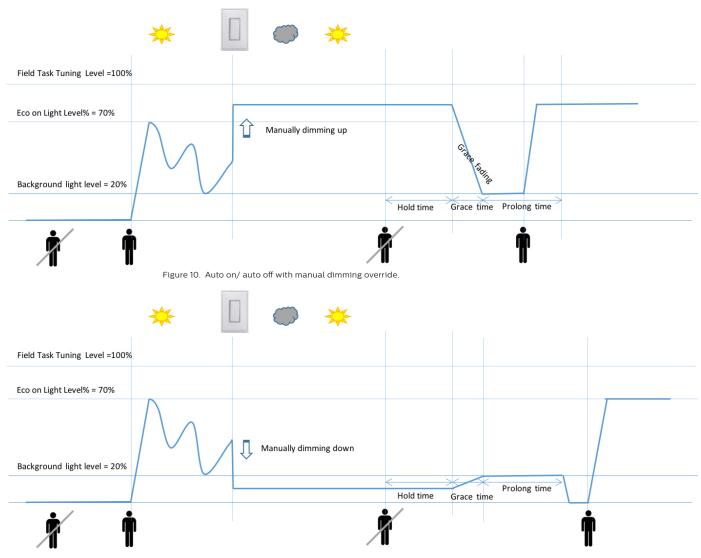


Figure 11. Auto on/auto off with manual dimming override.

# Phone-based app and configuration

There are two apps available for configuring and commissioning (grouping) Easysense with NFC and IR blaster functionality: Easysense NFC and Easysense IR. Easysense IR app can be used with Easysense SNS 102 and future generations.

Phone requirement: The EasySense app works only on Android-based smart phones. Check the <u>EasySense website</u> for the latest list of compatible phones and their NFC reader locations.


The app can be downloaded from the Google Play store. This is a B2B app requires authentication with user ID and password. Please register at www.philips.com/easysense to obtain user id and password.

Various sensor parameters can be configured through the app. Please check the latest user's manual at www.philips.com/easysense for information on using the app with Easysense. The configuration range of each parameter is listed in the EasySense datasheet.

# Mechanical design-in

#### Mounting to a luminaire

EasySense is a fixture-mount sensor that is directly powered by Philips Advance Xitanium SR LED driver. It can be mounted to a slot or a cut-out in sheet metal.

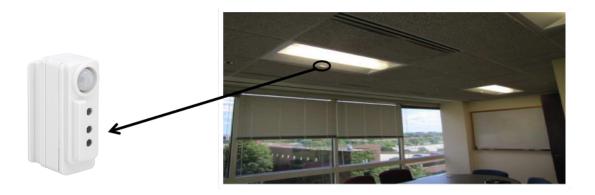

#### 1. Mounting in a U-shaped slot in the fixture sheet metal

EasySense can be assembled into an open-ended slot with dimensions following the cutout dimensions shown in the data sheet. Max sheet metal thickness is 1mm.







Note: in a precaution box, please make sure the Easysense RF antenna is not covered by metal.

.....

#### 2. Mounting to rectangular cut-out

Another option is attaching EasySense to a cutout in the sheet steel. An additional mounting ring (Part Number:SMR-50) is used to snap to the EasySense, essentially sandwiching the sheet steel between the ring and sensor. Thickness to accommodate this method is 0.7mm to 1mm.



#### 3. OEM-developed mounting options

OEMs can develop mounting provisions specific to their own fixtures and materials.

#### Wiring diagram with Philips Advance Xitanium SR LED driver

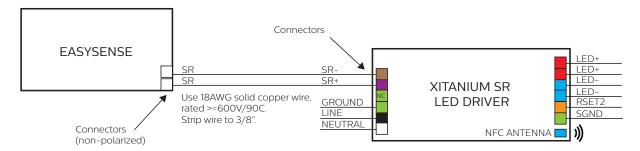


Figure 12. Wiring diagram with Philips Advance SR driver.

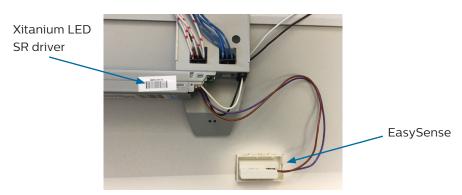


Figure 13. Sensor in a fixture.

#### **Applicable wires**

Wire Range AWG#	Number of Conductors / Diameter of a Conductor (Number of Conductors / mm)	Insulation Diameter (mm)	Conductor Type
24	1 / 0.51 (0.2mm <sup>2</sup> )	1.35	- Solid
22	1 / 0.64 (0.3mm²)	1.48	
20	1 / 0.81 (0.5mm <sup>2</sup> )	1.65	
18	1 / 1.02 (0.8mm <sup>2</sup> )	1.86	
22	17 / 0.76 (Reference) After Soldering: ¢0.9mm Max.	1.60	- Strand
20	21 / 0.95 (Reference) After Soldering: ¢0.9mm Max.	1.78	


Table 1. Wire gauge for EasySense sensor with SR driver.

#### Wire strip length



[ Conductor : Bear Copper /Strand wire]


#### Wire insertion

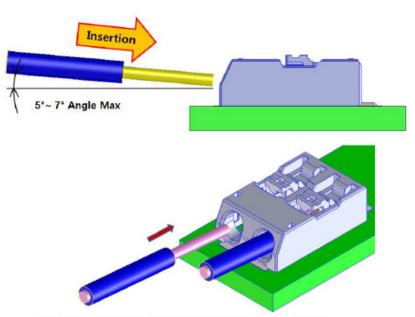

[ Inserting solid conductors via push-in terminal ]

.....

#### Wire separation from the connector

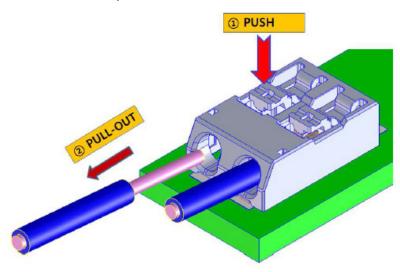


#### Wire distance for remote mounting

It is recommended to keep the wire distance from sensor to SR driver less than 50 feet and meet the wire gauge requirement to guarantee the performance.

#### **Sensor position**

If multiple luminaires are used in the same area, the distance between the different sensors should be at least 1.5m. This distance will minimize a sensor from "seeing" the light variation of other luminaires and reacting.

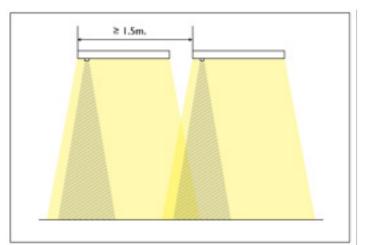

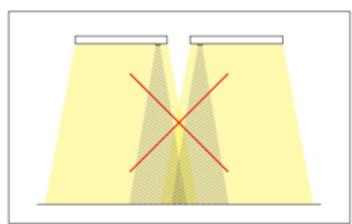


Figure 14. Distance between sensors should be at least 1.5m apart.


# EasySense with multiple SR drivers (1:N application)

When a group of luminaires is in the same daylight condition and needs to be operated at the same level, it is possible to use one sensor to control multiple luminaires. When EasySense is connected to multiple Xitanium SR drivers, the maximum number of connected drivers is 10 and only four drivers can have enabled DALI power supply. To minimize unnecessary losses, it is recommended to turn on only two DALI power supplies. Each SR driver provides approximately 55mA of current on the DALI bus, and EasySense is limited to 250mA.

EasySense sends commands to all connected drivers (using broadcast command); it does not have capabilities for addressing individual drivers. The light commands are sent as a broadcast command, so occupancy-/daylight-based lighting control and task tuning operate the same on all connected drivers. The readout of energy information from the driver will not function. The energy readout of multiple drivers is foreseen for future sensor generations.



Please note the DALI power supply can only be turned on/off on the SR driver through MultiOne configurator. For this application, please also make sure all drivers that are connected to the sensor have the same wiring polarity. SR drivers are shipped with the power supply on as default.

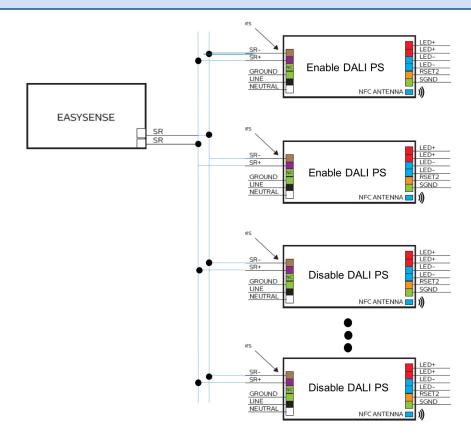

EasySense
Design-in Guide
•••••
FAQs



#### Does EasySense work on 0-10v drivers?

No. EasySense works on Philips Advance Xitanium SR LED drivers to enable two-way digital communication directly to the driver and to eliminate need for other auxiliary devices.

#### Can you use a wall dimmer with EasySense?

SNS102 and higher models can be used with a wireless wall dimmer, e.g., Zigbee green power switch. SNS100 is only for stand-alone operations and does not support wireless switches and dimmers.

#### How does EasySense compare to Philips ActiLume?

Occupancy sensing and daylight harvesting are similar. Form factors are also similar, with the face of the sensor outside the fixture having the same size. The portion of EasySense within the fixture is slightly deeper and longer to accommodate added functionality. EasySense includes institutional tuning plus energy reporting and also works on Xitanium SR drivers to eliminate the cost and complexity of a separate power pack. EasySense also performs auto-calibration for daylight (see later Q&A).

#### Is EasySense a DALI sensor?

EasySense works with SR drivers, which use DALI to communicate between driver and sensor. This is the same principle as other SR-certified devices, therefore, EasySense is not a DALI sensor.

#### Can I use EasySense outside a fixture?

An accessory option is available to enable ceiling mount (part number SNS102CMP). Wiring to the driver must be managed similar to other external mounted sensors (code requirements, etc.). Because EasySense is low-voltage class 2, this is easier than with many other sensors.

#### Can I use one sensor with multiple fixtures?

Yes, and the ceiling mount option is likely utilized in this use case (called 1:N operation as opposed to 1:1). It usually means turning off the SR power supplies in all but one of the SR drivers. See EasySense with multiple SR drivers 1:N application section.

#### Is EasySense "code compliant?"

EasySense is self-certified as compliant with the requirements of California's Title 20.

#### What about Title 24 and ASHRAE?

These codes apply to the application of lighting and controls within a space, not individual components. They are very detailed, and lighting experts choose the proper lighting and control strategy to meet applicable codes. Use cases, interpretations and specific applications by state/local ordinance vary widely. EasySense is an economical component that can be used to meet many elements of code.

#### Does EasySense do "auto-off/manual-on?" I hear it is required to meet codes.

SNS102 supports auto-off/manual-on functionality via wireless switches. There are use cases in codes that are interpreted to require auto-off/manual-on. The auto-off/partial-on mode can be supported by eco-on.

#### How do you handle use cases in codes calling for dimming?

There are use cases in Title 24 that require "controls." Continuous dimming via wall dimmer is one option to satisfy this requirement. Daylight, task tuning and manual dimming override are also other options to satisfy these use cases that are enabled via EasySense.

#### Why only PIR? I thought dual-technology sensors were best?

Dual-technology sensors include ultrasonic as well as infrared (PIR) technology. Use of ultrasonic developed out of the need to 1) discern small movements better and 2) "see" through partitions. Philips PIR technology has developed over recent years to handle small movements quite well. PIR does not transmit through walls/partitions, so sensors using ultrasound may have benefit when using a single sensor for large areas with blocking elements. EasySense targets bringing controls to a more granular level rather than only controlling a large space, such that PIR will see its designated space very well.

#### Does EasySense make sense if I only want to do occupancy sensing?

Yes. Most occupancy sensors run on high voltage or require an extra power pack, adding cost and complexity. Typical wallplate-style occupancy sensors — while mass produced and inexpensive — vary in performance by use case since the viewing angle from a wall is less than ideal. Also, the relay-free operation of EasySense makes it inherently more reliable. And traditional occupancy sensors are bulky compared to the compact size of EasySense.

#### How does the daylight harvesting feature work?

EasySense does auto-calibration (T20 requirement) when the fixture is first powered. See the system startup behavior/auto-calibration section for details. Electric lighting will not reduce below the programmed background light level regardless of daylight availability. Traditional sensors lacking auto-calibration are either pre-set with an assumed task light level or require manual calibration during commissioning.

#### Is EasySense "failsafe"?

Unlike traditional occupancy sensors, EasySense does not have a mechanical relay. This is a benefit of SR drivers, as on/off is done relay-free within the driver. Devices with mechanical relays should be designed so that relay failure results in "lights on." If an SR driver does not see a digital signal from a device for a long period of time (e.g., loose connection, sensor failure), the driver goes to full programmed output.

EasySense
Design-in Guide
***************************************
Contact Details

## Contact details

Philips EasySense

Product information: www.philips.com/easysense

Or contact your local Philips sales representative.

# FCC/IC compliance statement

This device complies with part 15 of the FCC rules for the United States and Industry Canada (IC) license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Philips could void the user's authority to operate this equipment. This product is intended for commercial use only.

#### Déclaration de conformité à la fcc/ic

Ce dispositif est conforme à la partie 15 des règles de la Federal Communications Commission (FCC) des États-Unis et d'Industrie Canada (IC) exempts de licence RSS norme(s). Son fonctionnement est assujetti aux deux conditions suivantes : (1) Ce dispositif ne doit pas provoquer de brouillage préjudiciable, et (2) il doit accepter tout brouillage reçu, y compris le brouillage pouvant entraîner un mauvais fonctionnement. Tous les changements ou modifications non expressément approuvés par Philips, sont susceptibles d'annuler le droit de l'utilisateur à se servir de cet équipement. Ce produit est exclusivement destiné à un usage commercial

Easysense
Design-in Guide
•••••
Disclaimer

## Disclaimer

The information in this guide is accurate at the time of writing. This guide is provided "as is" without expressed or implied warranty of any kind. Neither Philips nor its agents assume any liability for inaccuracies in this guide or losses incurred by use or misuse of the information in this guide.

Philips will not be liable for any indirect, special, incidental or consequential damages (including damages for loss of business, loss of profits or the like), whether based on breach of contract, tort (including negligence), product liability or otherwise, even if Philips or its representatives have been advised of the possibility of such damages.



© 2015 Koninklijke Philips N.V. All rights reserved. Philips reserves the right to make changes in specifications and/or to discontinue any product at any time without notice or obligation and will not be liable for any consequences resulting from the use of this publication.

800-372-3331